


Velodyne™ LiDAR

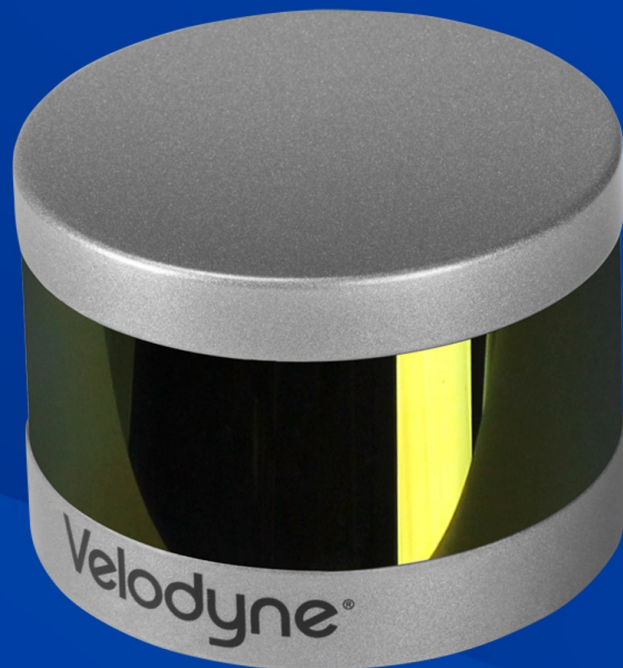

VLP-16 User Manual

63-9243 Rev. D

Copyright 2018 Velodyne LiDAR, Inc. All rights reserved.

Trademarks

Velodyne™, HDL-32E™, HDL-64E™, VLP-16™, VLP-32™, Puck™, Puck LITE™, Puck Hi-Res™, and Ultra Puck™ are trademarks of Velodyne LiDAR, Inc. All other trademarks, service marks, and company names in this document or website are properties of their respective owners.

Disclaimer of Liability

The information contained in this document is subject to change without notice. Velodyne LiDAR, Inc. shall not be liable for errors contained herein or for incidental or consequential damage in connection with the furnishing, performance, or use of this document or equipment supplied with it.

The materials and information contained herein are being provided by Velodyne LiDAR, Inc. to its Customer solely for Customer's use for its internal business purposes. Velodyne LiDAR, Inc. retains all right, title, interest in and copyrights to the materials and information herein. The materials and information contained herein constitute confidential information of Velodyne LiDAR, Inc. and Customer shall not disclose or transfer any of these materials or information to any third party.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or stored in a database or retrieval system for any purpose without the express written permission of Velodyne LiDAR, Inc., which reserves the right to make changes to this document at any time without notice and assumes no responsibility for its use. This document contains the most current information available at the time of publication. When new or revised information becomes available, this entire document will be updated and distributed to all registered users.

Limited Warranty

Except as specified below, products sold hereunder shall be free from defects in materials and workmanship and shall conform to Velodyne's published specifications or other specifications accepted in writing by Velodyne for a period of one (1) year from the date of shipment of the products. The foregoing warranty does not apply to any Garmin products, other products not manufactured by Velodyne or products that have been subject to misuse, neglect, or accident, or have been opened, disassembled, or altered in any way. Velodyne shall make the final determination as to whether its products are defective. Velodyne's sole obligation for products failing to comply with this warranty shall be, at its option, to either repair, replace or issue credit for the nonconforming product where, within fourteen (14) days of the expiration of the warranty period, (i) Velodyne has received written notice of any nonconformity; (ii) after Velodyne's written authorization, Buyer has returned the nonconforming product to Velodyne at Buyer's expense; and (iii) Velodyne has determined that the product is nonconforming and that such nonconformity is not the result of improper installation, repair or other misuse. Velodyne will pay for return shipping for all equipment repaired or replaced under warranty and Buyer will pay all duties or taxes, if any, on all equipment repaired or replaced under warranty. THE FOREGOING WARRANTY AND REMEDIES ARE EXCLUSIVE AND MADE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED OR OTHERWISE, INCLUDING WARRANTIES OF 65-0003 Rev E Velodyne LiDAR Terms & Conditions Page 3 of 5 2016-03-31 MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. VELODYNE DOES NOT ASSUME OR AUTHORIZE ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH ITS PRODUCTS. This warranty is non-transferable.

Velodyne LiDAR, Inc.
5521 Hellyer Ave
San Jose, CA 95138
Phone +1 408-465-2800

Revision History

Sensor	Firmware	Release Date	Release Notes
VLP-16	3.0.37.0	2017-12-12	<ul style="list-style-type: none">• CHANGED: Phase Lock Offset setting now expects integer degrees instead of hundredths of degrees.• IMPROVED: Removed 'Update Calibration' from System tab.• IMPROVED: Sun Noise Filter.• ADDED: Ability to change sensor's Ethernet MAC Address from Web Interface.• IMPROVED: Low signal cross-talk filtering performance.• IMPROVED: Firmware update messages during update.• IMPROVED: Phase Lock rotations error < ± 5 degrees.• FIXED: Intermittent ghost returns at 40, 80 and greater than 124 meters.• IMPROVED: Several JSON data additions and changes.• ADDED: Reverse rotation capability. Specify negative RPM values to use this capability. <p>For details, see the full Release Notes at http://www.velodynelidar.com/downloads.html#firmware.</p>

Table of Contents

Chapter 1 • About This Manual

1.1 Manual Scope	16
1.2 Prerequisite Knowledge	16
1.3 Audience	16
1.4 Document Conventions	16

Chapter 2 • VLP-16 Overview

2.1 Overview	18
2.2 Product Models	19
2.3 Time of Flight	19
2.4 Data Interpretation Requirements	19

Chapter 3 • Safety Precautions

3.1 Warning and Caution Definitions	20
3.1.1 Caution Hazard Alerts	20
3.2 Safety Overview	20
3.2.1 Electrical Safety	20
3.2.2 Mechanical Safety	20
3.2.3 Laser Safety	21

Chapter 4 • Unboxing & Verification

4.1 What's in the Box?	22
4.1.1 Variants	22
4.2 Verification Procedure	22
4.2.1 Network Setup in Isolation	23
4.2.2 Access Sensor's Web Interface	24
4.2.3 Visualize Live Sensor Data with VeloView	26
4.2.3.1 VeloView Operation	27

Chapter 5 • Installation & Integration

5.1 Overview	29
5.2 Mounting	29
5.3 Encapsulation, Solar Hats, and Ventilation	30

5.4 Connections	30
5.4.1 Integrated Cable and Interface Box	31
5.4.2 Operation Without an Interface Box	31
5.4.3 Power	31
Chapter 6 • Key Features	
6.1 Calibrated Reflectivity	32
6.2 Laser Return Modes	32
6.2.1 Single Return Modes: Strongest, Last	32
6.2.2 Multiple Returns	33
6.2.3 Dual Return Mode	33
6.3 Phase Locking Multiple Sensors	37
Chapter 7 • Sensor Inputs	
7.1 Power Requirements	39
7.2 Interface Box Signals	40
7.3 Ethernet Interface	41
7.4 GPS, Pulse Per Second (PPS) and NMEA GPRMC Message	41
7.4.1 GPS Input Signals	41
7.4.2 Electrical Requirements	41
7.4.3 Timing and Polarity Requirements	41
7.4.4 GPS Connection Scenarios	44
7.4.4.1 Connecting a Garmin 18x LVC GPS Receiver	44
7.4.4.2 Connecting to a computer's serial port	44
7.4.4.3 Connecting to a microcomputer's UART	45
7.4.5 NMEA Message Formats	46
7.4.5.1 Pre-NMEA Version 2.3 Message Format	46
7.4.5.2 NMEA Version 2.3 Message Format	47
7.4.6 Accepting NMEA Messages Via Ethernet	48
Chapter 8 • Sensor Operation	
8.1 Firing Sequence	49
8.2 Throughput Calculations	49

8.2.1 Data Packet Rate	49
8.2.2 Position Packet Rate	50
8.2.3 Total Packet Rate	50
8.2.4 Laser Measurements Per Second	50
8.2.4.1 Single Return Mode (Strongest, Last)	50
8.2.4.2 Dual Return Mode	50
8.3 Rotation Speed (RPM)	50
8.3.1 Horizontal Angular (Azimuth) Resolution	50
8.3.2 Rotation Speed Fluctuation and Point Density	51

Chapter 9 • Sensor Data

9.1 Sensor Origin and Frame of Reference	52
9.2 Calculating X,Y,Z Coordinates from Collected Spherical Data	52
9.3 Packet Types and Definitions	54
9.3.1 Definitions	54
9.3.1.1 Firing Sequence	55
9.3.1.2 Laser Channel	55
9.3.1.3 Data Point	55
9.3.1.4 Azimuth	55
9.3.1.5 Data Block	55
9.3.1.6 Time Stamp	55
9.3.1.7 Factory Bytes	56
9.3.2 Data Packet Structure	56
9.3.3 Position Packet Structure	60
9.4 Discreet Point Timing Calculation	61
9.5 Precision Azimuth Calculation	65
9.6 Converting PCAP Files to Point Cloud Formats	66

Chapter 10 • Sensor Communication

10.1 Web Interface	68
10.1.1 Configuration Screen	69
10.1.1.1 MAC Address	71
10.1.1.2 Correctly reset MAC Address to Factory MAC Address	71

10.1.2 System Screen	72
10.1.3 Info Screen	73
10.1.4 Diagnostics Screen	75
10.2 Sensor Control with curl	76
10.2.1 Using curl with Velodyne LiDAR Sensors	76
10.2.2 curl Command Parameters	76
10.2.3 Command Line curl Examples	77
10.2.3.1 Get Diagnostic Data	77
10.2.3.2 Conversion Formulas	78
10.2.3.3 Interpret Diagnostic Data	78
10.2.3.3.1 top:hv	78
10.2.3.3.2 top:lm20_temp	79
10.2.3.3.3 top:pwr_5v	79
10.2.3.3.4 top:pwr_2_5v	79
10.2.3.3.5 top:pwr_3_3v	79
10.2.3.3.6 top:pwr_5v_raw	79
10.2.3.3.7 top:pwr_vccint	80
10.2.3.3.8 bot:i_out	80
10.2.3.3.9 bot:lm20_temp	80
10.2.3.3.10 bot:pwr_1_2v	80
10.2.3.3.11 bot:pwr_1_25v	81
10.2.3.3.12 bot:pwr_2_5v	81
10.2.3.3.13 bot:pwr_3_3v	81
10.2.3.3.14 bot:pwr_5v	81
10.2.3.3.15 bot:pwr_v_in	81
10.2.3.4 Get Snapshot	82
10.2.3.5 Get Sensor Status	82
10.2.3.6 Set Motor RPM	82
10.2.3.7 Set Field of View	83
10.2.3.8 Set Return Type (Strongest, Last, Dual)	83
10.2.3.9 Save Configuration	83

10.2.3.10 Reset System	83
10.2.3.11 Network Configuration	83
10.2.3.12 Set Host (Destination) IP Address	83
10.2.3.13 Set Data Port	84
10.2.3.14 Set Telemetry Port	84
10.2.3.15 Set Network (Sensor) IP Address	84
10.2.3.16 Set Netmask	84
10.2.3.17 Set Gateway	84
10.2.3.18 Set DHCP	84
10.2.4 curl Example using Python	84

Chapter 11 • Troubleshooting

11.1 Troubleshooting Process	87
11.1.1 Turned DHCP On, Lost Contact With Sensor	88
11.2 Service and Maintenance	89
11.2.1 Fuse Replacement	89
11.3 Technical Support	90
11.3.1 Purchased through a Distributor	90
11.3.2 Factory Support	90
11.3.3 Support Desk	90
11.4 Return Merchandise Authorization (RMA)	90

Appendix A • Sensor Specifications

Appendix B • Firmware Update

B.1 Firmware Update Procedure	92
B.1.1 Special Procedure to Update Firmware	98
B.1.2 If An Error Occurs	99

Appendix C • Mechanical Diagrams

C.1 Interface Box Mechanical Drawing	101
C.2 VLP-16 and Puck LITE Mechanical Drawing	102
C.3 VLP-16 and Puck LITE Optical Drawing	103
C.4 VLP-16 and Puck LITE Optical Keep Out Zone	104

C.5 Puck Hi-Res Mechanical Drawing	105
C.6 Puck Hi-Res Optical Drawing	106
C.7 Puck Hi-Res Optical Keep Out Zone	107
Appendix D • Wiring Diagrams	
D.1 Interface Box Wiring Diagram	109
D.2 Interface Box Schematic	110
Appendix E • VeloView	
E.1 Features	111
E.2 Install VeloView	112
E.3 Visualize Streaming Sensor Data	112
E.4 Capture Streaming Sensor Data to PCAP File	114
E.5 Replay Captured Sensor Data from PCAP File	114
Appendix F • Laser Pulse	
F.1 The Semiconductor Laser Diode	119
F.2 Laser Patterns	120
F.2.1 Laser Spot Pattern	120
F.2.2 Laser Scan Pattern	120
F.2.3 Beam Divergence	121
Appendix G • Time Synchronization	
G.1 Introduction	123
G.2 Background	123
G.3 PPS Qualifier	124
G.3.1 Require GPS Receiver Valid	124
G.3.2 Require PPS Lock	124
G.3.3 Delay	125
G.4 GPS Qualifier	125
G.5 Application	125
G.6 Logic Tables	125
Appendix H • Phase Lock	
H.1 Phase Lock	127

H.1.1 Setting the Phase Lock	127
H.1.2 Application Scenarios	128
H.2 Field of View	130

Appendix I • Sensor Care

I.1 Cleaning the Sensor	131
I.1.1 Required Materials	131
I.1.2 Determine Method of Cleaning	132
I.1.3 Method One	132
I.1.4 Method Two	132
I.1.5 Method Three	132
I.1.6 Method Four	133

Appendix J • Network Configuration

J.1 Ethernet and Network Setup	134
J.1.1 Defaults	134
J.1.2 Establishing Communication via Ethernet	134
J.2 Network Considerations	135
J.2.1 Throughput Requirements	135
J.2.2 Single Sensor Transmitting to a Broadcast Address	136
J.2.3 Multiple Sensors in the Same Network	136
J.2.3.1 Multiple Sensors Transmitting to a Broadcast Address	136
J.2.3.2 Multiple Sensors Transmitting to a Specific Address	137

List of Tables

Table 1-1 Document Conventions	16
Table 2-1 3D Sensing System Components	19
Table 7-1 Interface Box Signals	40
Table 7-2 Pre-NMEA Version 2.3 Message Format	47
Table 7-3 Post-NMEA Version 2.3 Message Format	47
Table 8-1 Rotation Speed vs Resolution	51
Table 9-1 Vertical Angles (ω) by Laser ID and Model	53
Table 9-2 Factory Byte Values	56
Table 9-3 Position Packet Structure Field Offsets	60
Table 9-4 PPS Status Byte Values	60
Table 10-1 Configuration Screen Functionality and Features	69
Table 10-2 System Screen Functionality and Features	72
Table 10-3 Info Screen Functionality and Features	73
Table 10-4 System Screen Functionality and Features	75
Table 11-1 Common Problems and Resolutions	87
Table F-1 VLP-16 Beam Divergence	122
Table F-2 Dimensions of VLP-16 Laser Spots at Distance	122

List of Figures

Figure 2-1 Example 3D Sensing System	18
Figure 3-1 Class 1 Laser	21
Figure 4-1 Sensor Network Settings	24
Figure 4-2 Interface Box (power and data connections)	25
Figure 4-3 Sample Web Interface Main Configuration Screen	26
Figure 4-4 VeloView Open Sensor Stream	27
Figure 4-5 VeloView Select Sensor Calibration	27
Figure 4-6 VeloView Sensor Stream Display	28
Figure 5-1 Mounting Details	30
Figure 6-1 A Single Return	33
Figure 6-2 Dual Return with Last and Strongest Returns	34
Figure 6-3 Dual Return with Second Strongest Return	35
Figure 6-4 Dual Return with Far Retro-Reflector	36
Figure 6-5 Forestry Application Multiple Returns	37
Figure 6-6 Phase Locking Example	38
Figure 7-1 Interface Box (sensor power and data connections)	40
Figure 7-2 Synchronizing PPS with NMEA GPRMC Message	42
Figure 7-3 PPS Signal Closely Followed by NMEA GPRMC Message	42
Figure 7-4 PPS Signal Followed 600 ms later by NMEA GPRMC Message	43
Figure 7-5 RS-232 Example Transmission	44
Figure 7-6 Garmin GPRMC Message	44
Figure 7-7 DB9 Pin-outs (DTE) and USB-to-Serial Adapter	45
Figure 7-8 Signal Directly from UART (incorrect polarity)	46
Figure 7-9 Inverted Signal from UART (correct polarity)	46
Figure 8-1 Firing Sequence Timing	49
Figure 8-2 Point Density Example	51
Figure 9-1 VLP-16 Sensor Coordinate System	53
Figure 9-2 VLP-16 Single Return Mode Data Structure	57
Figure 9-3 VLP-16 Dual Return Mode Data Structure	58
Figure 9-4 Single Return Mode Packet Data Trace (packet start)	59
Figure 9-5 Single Return Mode Packet Data Trace (ending)	59
Figure 9-6 Wireshark Position Packet Trace	61
Figure 9-7 Firing Sequence Timing	62
Figure 9-8 Example Data Point Timing Calculation	63

Figure 9-9 Single Return Mode Timing Offsets (in μs)	64
Figure 9-10 Dual Return Mode Timing Offsets (in μs)	65
Figure 10-1 VLP-16 Configuration Screen	69
Figure 10-2 VLP-16 System Screen	72
Figure 10-3 VLP-16 Info Screen	73
Figure 10-4 VLP-16 Diagnostics Screen	75
Figure B-1 Velodyne Downloads Page	92
Figure B-2 Compare Firmware Versions	93
Figure B-3 Select New Firmware Image	94
Figure B-4 Upload New Firmware Image	95
Figure B-5 Firmware Update Complete Page	96
Figure B-6 Finalize Firmware Update	97
Figure B-7 Verify Firmware Versions	98
Figure C-1 Interface Box Mechanical Drawing 50-6001 Rev A	101
Figure C-2 VLP-16 and Puck LITE Mechanical Drawing 86-0101 Rev B1	102
Figure C-3 VLP-16 and Puck LITE Optical Drawing 86-0101 Rev B1	103
Figure C-4 VLP-16 and Puck LITE Optical Keep Out Zone 86-0101 Rev B1	104
Figure C-5 Puck Hi-Res Mechanical Drawing 86-0129 Rev A	105
Figure C-6 Puck Hi-Res Optical Drawing 86-0129 Rev A	106
Figure C-7 Puck Hi-Res Optical Keep Out Zone 86-0129 Rev A	107
Figure D-1 Interface Box Wiring Diagram 86-0107A	109
Figure D-2 Interface Box Schematic 69-8230A	110
Figure E-1 VeloView Open Sensor Stream	112
Figure E-2 VeloView Select Sensor Calibration	113
Figure E-3 VeloView Sensor Stream Display	113
Figure E-4 VeloView Record Button	114
Figure E-5 VeloView Open Capture File	115
Figure E-6 VeloView Play Button	115
Figure E-7 VeloView Spreadsheet Tool	116
Figure E-8 VeloView Data Point Table	116
Figure E-9 VeloView Show Only Selected Elements	117
Figure E-10 VeloView Select All Points	117
Figure E-11 VeloView List Selected Points	118
Figure F-1 Laser Diode Concept	119
Figure F-2 Laser Spot Shape	120
Figure F-3 Laser Spots on a Wall	121

Figure G-1 Web Interface PPS and GPS Qualifier Option Selections	123
Figure G-2 Top of Hour Counters	124
Figure G-3 Sub-Second Counter Behavior	125
Figure G-4 Minutes and Seconds Counter Behavior	126
Figure H-1 Direction of Laser Firing	127
Figure H-2 Configuration Screen - Phase Lock	128
Figure H-3 Right and Left Sensor Phase Offset	129
Figure H-4 Fore and Aft Sensor Phase Offset	129
Figure H-5 Sensor Data Shadows	130
Figure J-1 Sensor Network Settings	135
Figure J-2 Single Sensor Broadcasting on a Simple Network	136
Figure J-3 Multiple Sensors - Improper Network Setup	137
Figure J-4 Multiple Sensors - Proper Network Setup	137

List of Equations

Equation 8-1 Azimuth Resolution at 600 RPM	50
Equation 10-1 Standard Voltage Conversion	78
Equation 10-2 Standard Current Conversion	78
Equation 10-3 Standard Temperature Conversion	78
Equation F-1 Gap Between Scan Lines	121
Equation H-1 Arc of Shadow	130

Chapter 1 • About This Manual

1.1 Manual Scope

This manual provides descriptions and procedures supporting the installation, verification, operation, and diagnostic evaluation of the VLP-16, Puck LITE and Puck Hi-Res sensors.

For readability, all products in the VLP-16 LiDAR sensor family are referred to as “VLP-16” in this manual, except where noted.

1.2 Prerequisite Knowledge

This manual is written with the premise that the user has some basic engineering experience and general understanding of LiDAR technology. In addition, some familiarity with the configuration and operation of networking applications and equipment is recommended.

It is recommended that prior to installation or other procedures covered in this manual, the user fully reads and comprehends all information within this manual.

1.3 Audience

The user mentioned occasionally in this document is typically an engineer tasked with sensor integration for a project, a tech tasked with sensor upkeep, or data scientist looking to understand sensor output data.

1.4 Document Conventions

This document uses the following typographic conventions:

Table 1-1 Document Conventions

Convention	Description
Bold	Indicates text on a window, other than the window title, including menus, menu options, buttons, fields, and labels. Example: Click OK .
<i>Italic</i>	Indicates a variable, which is a placeholder for actual text provided by the user or system. Example: copy <i>source-file target-file</i> Note: Angled brackets (< >) are also used to indicate variables.
screen/code	Indicates text that is displayed on screen or entered by the user. Example: <pre># pairdisplay -g oradb</pre>
[] square brackets	Indicates optional values. Example: [a b] indicates that you can choose a, b, or nothing.
{ } braces	Indicates required or expected values. Example: { a b } indicates that you must choose either a or b.
vertical bar	Indicates that you have a choice between two or more options or arguments. Examples: [a b] indicates that you can choose a, b, or nothing. { a b } indicates that you must choose either a or b.

Note: Notes such as this indicate important information. They call attention to an operating procedure or practice which may enhance user interaction with the product. Notes may also be used to prevent information loss or product damage.

Chapter 2 • VLP-16 Overview

This chapter provides basic information on the sensor's hardware and software components.

2.1 Overview	18
2.2 Product Models	19
2.3 Time of Flight	19
2.4 Data Interpretation Requirements	19

2.1 Overview

The VLP-16 sensor uses an array of 16 infra-red (IR) lasers paired with IR detectors to measure distances to objects. The device is mounted securely within a compact, weather-resistant housing. The array of laser/detector pairs spins rapidly within its fixed housing to scan the surrounding environment, firing each laser approximately 18,000 times per second, providing, in real-time, a rich set of 3D point data.

Advanced digital signal processing and waveform analysis provide highly accurate long-range sensing, as well as calibrated reflectivity data, enabling easy detection of retro-reflectors like street-signs, license plates, and lane markings.

Combining 16 laser/detector pairs into one VLP-16 sensor and pulsing each at 18.08 kHz enables measurements of up to 300,000 data points per second -- or double that in dual return mode.

Figure 2-1 Example 3D Sensing System

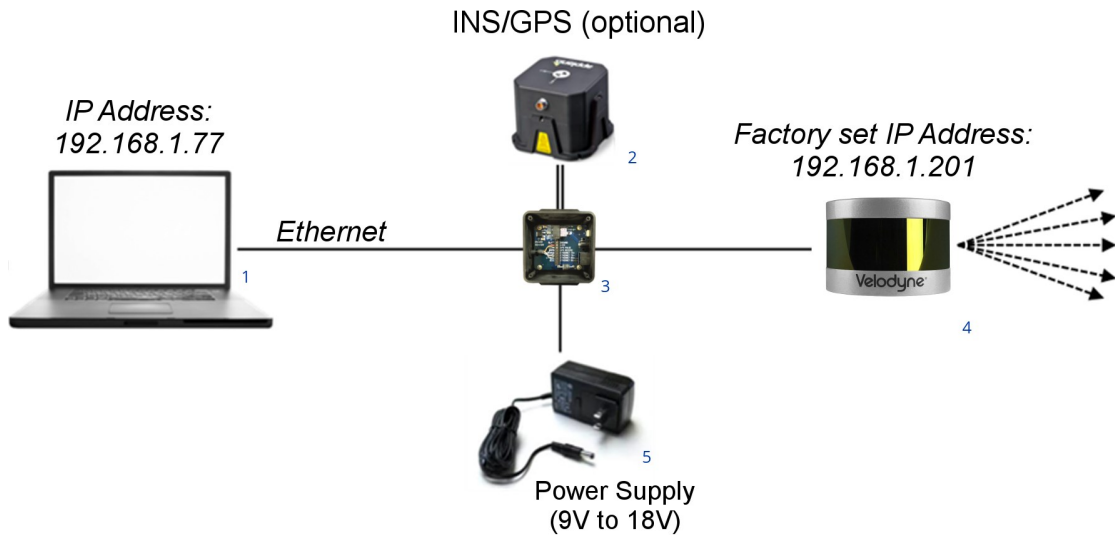


Table 2-1 3D Sensing System Components

Item	Description
1	Desktop/Laptop Computer
2	INS/GPS Antenna/Interface (optional)
3	Velodyne Interface Box
4	Velodyne LiDAR Sensor
5	DC Power Supply

Note: Optional - not included unless ordered: Garmin GPS receiver (P/N: 80-GPS18LVC).

2.2 Product Models

For ordering information, contact Sales at <http://www.velodynelidar.com/contacts.php>.

2.3 Time of Flight

Velodyne LiDAR sensors use time-of-flight (ToF) methodology.

When each IR laser emits a laser pulse, its time-of-shooting and direction are registered. The laser pulse travels through air until it hits an obstacle which reflects some of the energy. A portion of that energy is received by the paired IR detector, which registers the time-of-acquisition and power received.

2.4 Data Interpretation Requirements

- Desktop or Laptop computer
- Advanced geo-referencing software application
 - GPS-Based
 - SLAM-Based
 - User Built
 - Purchased from System Integrator

For more software details, see *Converting PCAP Files to Point Cloud Formats* on page 66.

Note: Click the following link to view a list of Velodyne system integrators who can sell you imaging software or a complete system: <http://velodynelidar.com/integrators.php>.


Chapter 3 • Safety Precautions

This chapter provides information necessary for the safe operation of Velodyne LiDAR sensors.

Observe the following general safety precautions during all LiDAR sensor phases of operation. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of intended sensor usage and may impair the protection provided by the equipment. Velodyne LiDAR, Inc. assumes no liability for failure to comply with these requirements.

3.1 Warning and Caution Definitions

3.1.1 Caution Hazard Alerts

	<p data-bbox="699 705 1032 772">CAUTION</p> <p data-bbox="548 804 1175 909">CAUTION indicates a potentially hazardous situation which may result in minor or moderate injury. It may also be used to alert against unsafe practices. The icon shown in the left column displays the specific concern; in this case, a hot surface.</p>
---	---

3.2 Safety Overview


3.2.1 Electrical Safety

Your sensor is powered by a 12 VDC (1.5 A-rated) power supply.

IMPORTANT: Read all installations instructions before powering up the sensor.

Note: The VLP-16 sensor is not field serviceable. For servicing and repair, the equipment must be completely shut off, removed, packaged carefully, and shipped back to the manufacturer's facility with a completed RMA Form. See *Service and Maintenance* on page 89 for details.

3.2.2 Mechanical Safety

	<p data-bbox="716 1402 1052 1470">CAUTION</p> <p data-bbox="565 1501 1162 1606">The VLP-16 sensor contains a rapidly spinning assembly. Do not operate the VLP-16 sensor without its cover firmly installed. The sensor does not contain user serviceable parts. It should not be opened in the field.</p>
---	---

3.2.3 Laser Safety

This device complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.

Figure 3-1 Class 1 Laser



Note: The VLP-16 sensor is a CLASS 1 LASER PRODUCT. The product fulfills the requirements of IEC 60825-1:2014 (Safety of Laser Products).

There are no controls or adjustments on the sensor itself that are user accessible.

Never look directly at the transmitting laser through a magnifying device.

Chapter 4 • Unboxing & Verification

This chapter provides the procedure to test and verify that your sensor is operating properly. Do this to check out a new sensor before permanently mounting it somewhere.

4.1 What's in the Box?	22
4.1.1 Variants	22
4.2 Verification Procedure	22
4.2.1 Network Setup in Isolation	23
4.2.2 Access Sensor's Web Interface	24
4.2.3 Visualize Live Sensor Data with VeloView	26

4.1 What's in the Box?

A standard Velodyne VLP-16 sensor comes packaged in its own cardboard box.

Ensure all the components are present:

- VLP-16 sensor with a fixed 3.0 m data/power cable terminated inside its Interface Box
- AC/DC power adapter and 1.8 m AC power cord (once assembled, this is the power cord)
- 1.0 m Ethernet cable
- Velodyne USB memory stick, containing:
 - User Manual
 - VeloView application installers for PC, Mac, and linux
 - Sensor sample data (i.e. pcap files)
 - Miscellaneous documents

4.1.1 Variants

Variants of the sensor exist, particularly with other connector types and/or cable lengths, and even without an Interface Box. Your sensor (or the type you are interested in) may vary from the standard configuration above. Contact [Velodyne Sales](#) for details.

4.2 Verification Procedure

The purpose of this procedure is to verify the sensor's basic functionality and get you started on your way to processing sensor data in (or from) the field. It involves one computer and one sensor in isolation at a workbench or desk. You'll need AC power. You won't need a GPS receiver.

A video of the VLP-16 installation process is on YouTube at the following location: https://www.youtube.com/watch?v=Pa-q5eIS_nE.

Note: Due to the large volume of data produced by the sensor when scanning, users are cautioned against connecting it to a corporate network.

1. Unpack the sensor and its accessories, and place them on a workbench or desk. Ensure the sensor is upright with clear space around it.
2. Create a simple network setup with a test computer and the sensor in isolation. Follow the procedure in *Network Setup in Isolation below*.
3. Use the sensor's Web Interface to perform basic sensor configuration. Follow the procedure in *Access Sensor's Web Interface on the next page*.
4. Use VeloView (or other visualization software of your choice) to view data streaming from your sensor. Follow the procedure in *Visualize Live Sensor Data with VeloView on page 26*.

When finished, the sensor should be ready for more complicated usage scenarios.

4.2.1 Network Setup in Isolation


Your sensor's IP address comes from the factory set to its default value, **192.168.1.201**. This procedure prepares a computer to communicate directly with the sensor at that address.

Note: If using the computer's main Ethernet port, disconnect it from whatever network it's on. If using a secondary Ethernet interface, the primary network cannot be a 192.168.1 network. If it is, use the primary Ethernet interface instead.

1. Open the computer's Network Connections page.
2. Open the applicable Ethernet adapter and make sure the interface is enabled.
3. Open Properties > **Internet Protocol Version 4 (TCP/IPv4)** (*Figure 4-1 on the next page*).
4. Select the **Use the following IP address:** function.
5. Make up an IP address for the Ethernet port and enter it: 192.168.1.XXX.
"XXX" may be any integer from 2 to 254 except 201.
6. Enter the subnet mask: 255.255.255.0.

When using a Windows-based computer, you can press the TAB key and the subnet mask field will automatically populate with the default mask for the network class indicated by the IP address entered; which is 255.255.255.0 in this case.

Figure 4-1 Sensor Network Settings

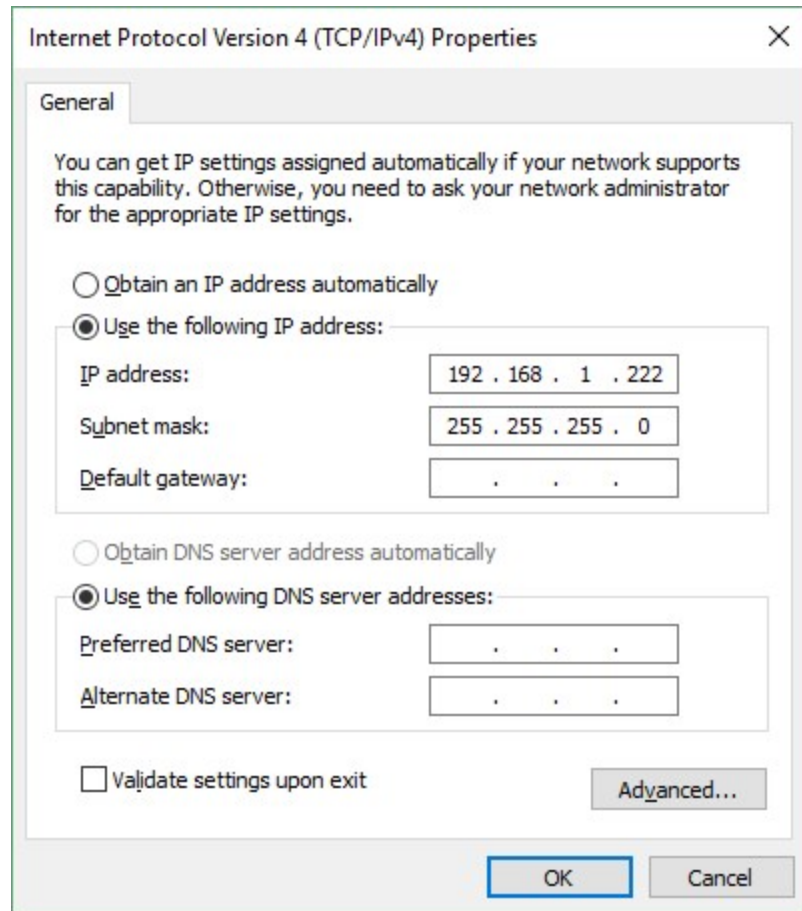

7. Click **OK**. Gateway and DNS are not necessary when testing in isolation.


In some cases it may be necessary to disable the computer's firewall or configure it to allow UDP I/O on that Ethernet interface. How to do this is not covered here as the process varies widely.

4.2.2 Access Sensor's Web Interface

Now the computer is ready to connect to the sensor.

1. Plug the Ethernet cable into the computer and then plug its other end into the Ethernet port on the sensor's Interface Box. *Figure 4-2 on the facing page* shows the Interface Box, its external ports, internal sensor terminal, and fuse.

Figure 4-2 Interface Box (power and data connections)

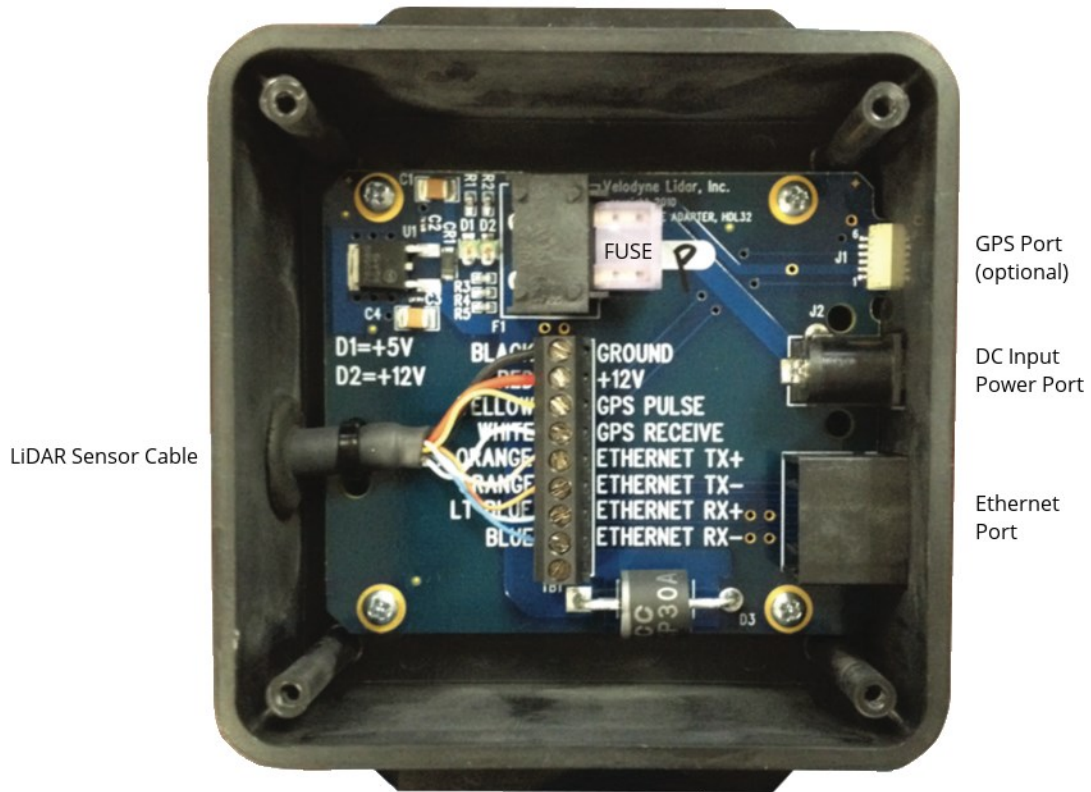

2. Connect power to the sensor's Interface Box.

When power is applied, two green LEDs in the Interface Box light up. The sensor begins scanning its environment and transmitting data approximately 30 seconds after power up.

3. On the computer, point a browser to <http://192.168.1.201>.
4. The sensor's Web Interface should appear (*Figure 4-3 on the next page*).

The Web Interface provides access to many of the sensor's control settings. See *Web Interface on page 68* for details.

Figure 4-3 Sample Web Interface Main Configuration Screen

Velodyne® LiDAR

Sensor Model: S/N: MAC: Factory MAC:

VLP-16 USER INTERFACE Configuration System Info Diagnostics

Laser: On Off
 Return Type:
 Motor RPM: + -
 FOV Start: + - End: + -

PPS Qualifier

Require GPS Receiver Valid: On Off
 Require PPS Lock: On Off
 Delay: + -

GPS Qualifier

Require GPS Receiver Valid: On Off

Phase Lock On Off Offset: + -

Host (Destination)

IP Address: Data Port: Telemetry Port:

Network (Sensor)

DHCP: On Off
 IP Address: Mask: Gateway:
 MAC Address:

GPS Position: PPS:
 Motor State: RPM: Lock: Phase:
 Laser State:

Velodyne® LiDAR

4.2.3 Visualize Live Sensor Data with VeloView

Now that the computer can access the sensor’s Web Interface, it’s time to get a first look at the sensor’s data.


Note: VeloView is an open source visualization and recording application tailored for Velodyne LiDAR sensors. Other visualization software (e.g. ROS, DSR and PCL) can perform similar functions and may be used instead.

VeloView is documented in more detail in *VeloView on page 111*. If the application isn’t already on the computer, perform the procedure detailed in *Install VeloView on page 112*. Older versions should be updated to at least the version installed by following the procedure.

4.2.3.1 VeloView Operation


1. Power-up the sensor.
2. Start the VeloView application.
3. Click on **File->Open** and select **Sensor Stream** (Figure 4-4 below).

Figure 4-4 VeloView Open Sensor Stream

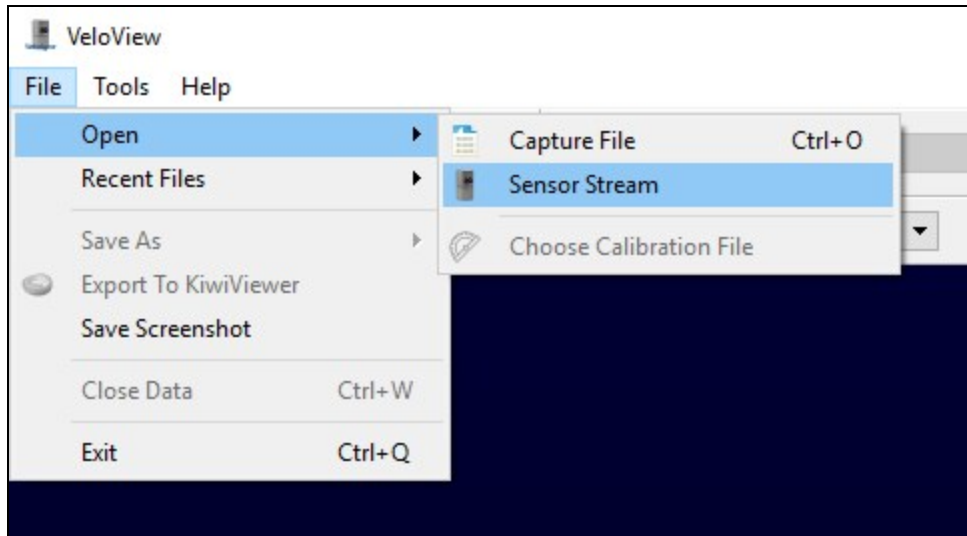


4. The Sensor Configuration dialog will appear (Figure 4-5 below). Select the correct sensor type then click **OK**.

Figure 4-5 VeloView Select Sensor Calibration

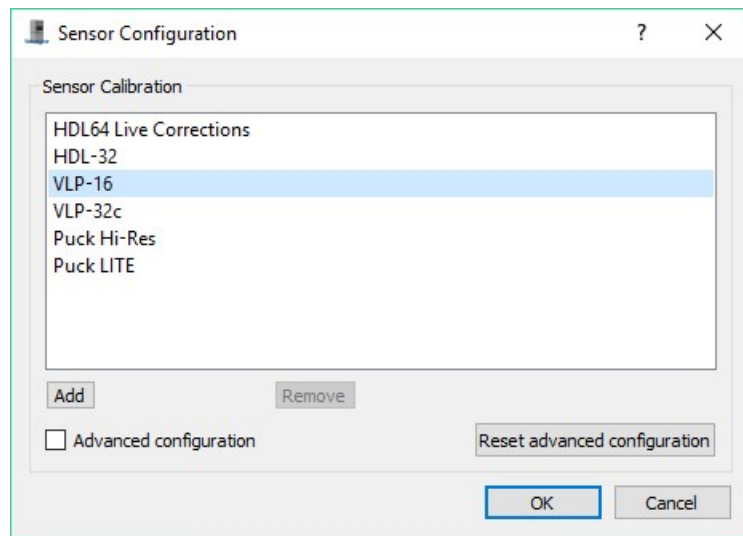

5. VeloView begins displaying the sensor data stream. See *VeloView Sensor Stream Display* on the next page.

Figure 4-6 VeloView Sensor Stream Display

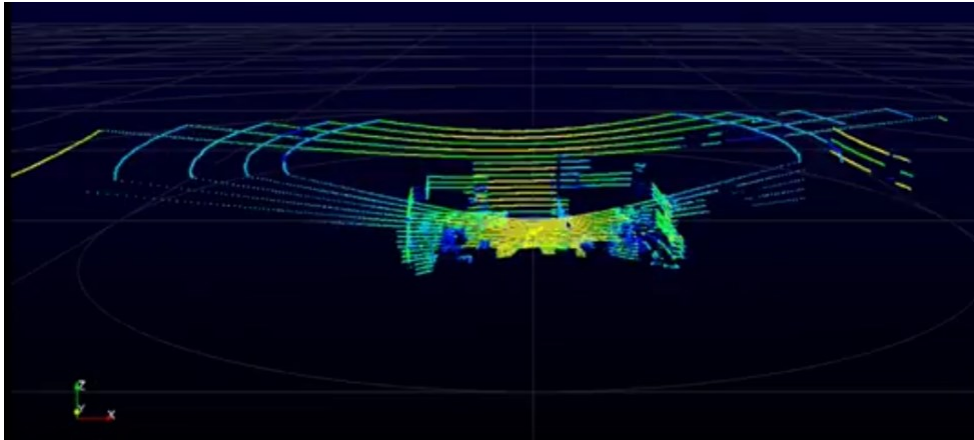

Above is an example of a VeloView screen in an office, workbench or lab scenario.

Chapter 5 • Installation & Integration

This chapter provides important information for integrating the VLP-16 sensor into your application environment.

5.1 Overview	29
5.2 Mounting	29
5.3 Encapsulation, Solar Hats, and Ventilation	30
5.4 Connections	30
5.4.1 Integrated Cable and Interface Box	31
5.4.2 Operation Without an Interface Box	31
5.4.3 Power	31

5.1 Overview

Ensure the sensor is functional first before beginning sensor integration. See *Verification Procedure on page 22*.

Common steps in installation and integration involve:

- Securely mounting the sensor to a vehicle, drone, robot, or other scanning platform
- Allowing for proper ventilation, providing thermal protection, and sensor encapsulation
- Connecting power to the sensor
- Connecting the sensor's Ethernet data output to a computer, switch, or network - see *Network Configuration on page 134*
- Optionally, connecting a GPS receiver or INS (Inertial Navigation System) - see *GPS, Pulse Per Second (PPS) and NMEA GPRMC Message on page 41*


The typical sensor setup uses a standard computer or laptop connected to the sensor. However, it is recommended to use at least a 100 Mbps Ethernet adapter to accommodate the sensor data rate.

5.2 Mounting

The sensor base provides one ¼"-20-threaded, 9/32"-deep mounting hole, and two precision locating holes for locator pins (*Figure 5-1 on the next page*). The sensor may be mounted at any angle or orientation, though reliability should be best at 0° inclination (i.e. level to ground) as reductions to bearing life may occur at other orientations.

Ensure the sensor is mounted securely to withstand vibration and shock without risk of detachment. The unit does not need shock proofing. The unit is designed to withstand automotive G-forces (i.e. 500 m/s² amplitude, 11 ms duration shock and 3 G_{RMS} 5 Hz to 2,000 Hz vibration).

Figure 5-1 Mounting Details

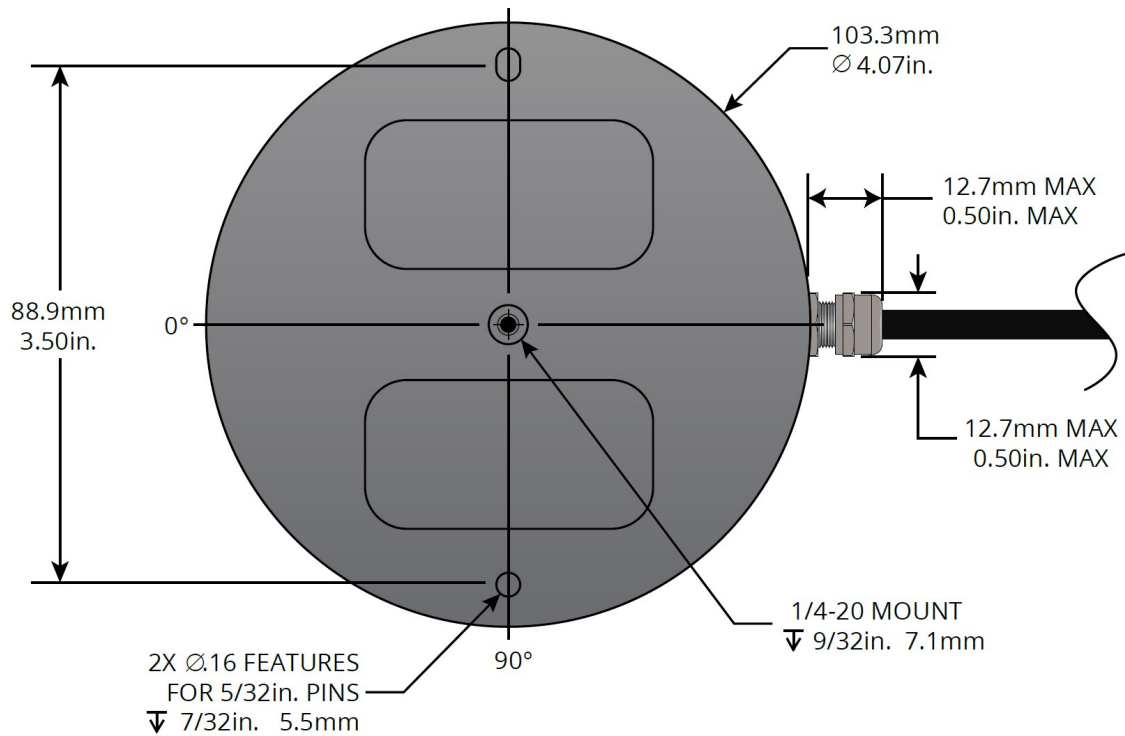

5.3 Encapsulation, Solar Hats, and Ventilation

For various reasons, you may wish to encapsulate the sensor, either wholly or partially. The working field of view, if covered with transparent material, should be highly transmissive of near-IR light at and near the 903 nm wavelength. Any moisture that enters should have a way to drain passively.

The VLP-16 generates a moderate amount of heat during normal operation. Strategies for managing heat in hot weather include employing a "thermal hat," exposing the sensor to moving air, and drawing heat from the sensor with a heat sink (e.g. aluminum plate(s)).

The sensor reports internal temperatures passively on its web interface. The same readings may be obtained programmatically via curl commands (i.e. http GET requests). See *Sensor Communication on page 68* for details. The sensor's operating temperature range can be found on its data sheet.

Do not operate the sensor without sufficient ambient air flow or cooling.

5.4 Connections

This section covers the sensor's physical connections.

See *Network Considerations on page 135* before connecting one or more Velodyne LiDAR sensors physically to your network. See *Ethernet and Network Setup on page 134* for instructions on how to configure the sensor's Ethernet connection.

Note: Do not twist or otherwise adjust the strain relief gland nut where the interface cable enters the sensor. Adjusting the position of the gland nut may damage the VLP-16 sensor internally.

5.4.1 Integrated Cable and Interface Box

The standard VLP-16 sensor comes with an integrated cable that is terminated inside the Interface Box. The cable is approximately 3.0 m in length and is permanently attached to the sensor.

Note: If you need to cut the integrated cable for any reason, please contact [Velodyne Sales](#) to get a waiver. Cutting this cable could have warranty and RMA cost implications. Also, there is a minimum length requirement.

The Interface Box provides convenient connections for power, Ethernet, and GPS inputs. It protects the sensor from power irregularities by incorporating a replaceable fuse and a reverse-current protection diode. When connected correctly to power, the diode allows current through to the sensor. If, however, the power and ground are switched, the diode blocks current flow.

Opening the Interface Box and making modifications inside, such as replacing the fuse or reverse-current protection diode, or repairing wires, is permitted.

For more information on the Interface Box, see *Interface Box Signals on page 40*.

5.4.2 Operation Without an Interface Box

The VLP-16's Interface Box is a convenience, but it also adds bulk. The sensor may be ordered and used without the Interface Box to accommodate the needs of the user. Contact [Velodyne Sales](#) for details (i.e. SKUs).

If used without the Interface Box, the user must provide sufficient reverse- and over-voltage protection circuitry to protect the sensor. The schematic for the circuitry in the Interface Box can be found in *Wiring Diagrams on page 108*.

5.4.3 Power

The VLP-16 sensor does not have a physical power switch. The power source must be capable of providing as much as 3.0 A to accommodate the current surge that occurs during rotor spin-up when power is supplied to the sensor.

In normal operation the sensor draws approximately 8 W of power.

The [sensor's data sheet](#) specifies the input voltage that should be supplied to the unit. The sensor will not operate outside that voltage range.

The power input jack on the Interface Box accommodates a 5.5 mm (O.D.) x 2.5 mm (I.D.) barrel connector. The center pin has positive (+) polarity.

Note: Before operating the sensor, ensure it is securely mounted and that power will be applied in the correct polarity.

If the sensor doesn't spin up when power is applied, check the fuse, check the sensor's web interface if Laser is On and Motor RPM is a valid value, check the input voltage, and make sure that the power source (battery, power inverter, or power rail) is providing sufficient current. If they check out and yet the problem persists, get *Technical Support on page 90*.

Chapter 6 • Key Features

6.1 Calibrated Reflectivity	32
6.2 Laser Return Modes	32
6.2.1 Single Return Modes: Strongest, Last	32
6.2.2 Multiple Returns	33
6.2.3 Dual Return Mode	33
6.3 Phase Locking Multiple Sensors	37

6.1 Calibrated Reflectivity

The VLP-16 measures reflectivity of an object independent of laser power and distances involved. Reflectivity values returned are based on laser calibration against [NIST](#)-calibrated reflectivity reference targets at the factory.

For each laser measurement, a reflectivity byte is returned in addition to distance. Reflectivity byte values are segmented into two ranges, allowing software to distinguish diffuse reflectors (e.g. tree trunks, clothing) in the low range from retroreflectors (e.g. road signs, license plates) in the high range.

A retroreflector reflects light back to its source with a minimum of scattering. The VLP-16 provides its own light, with negligible separation between transmitting laser and receiving detector, so retroreflecting surfaces *pop* with reflected IR light compared to diffuse reflectors that tend to scatter reflected energy.

- Diffuse reflectors report values from 0 to 100 for reflectivities from 0% to 100%.
- Retroreflectors report values from 101 to 255, where 255 represents an ideal reflection.

Note: When a laser pulse doesn't result in a measurement, such as when a laser is shot skyward, both distance and reflectivity values will be 0. The key is a distance of 0, because 0 is a valid reflectivity value (i.e. one step above noise).

6.2 Laser Return Modes


The VLP-16 supports three laser return modes: **Strongest, Last**, and **Dual**. A sensor can be configured to handle laser returns in one of these ways interactively via the sensor's web interface (where the setting is called Return Type) or programmatically via curl command. (See *Configuration Screen on page 69* or *Sensor Control with curl on page 76* for additional information related to setting laser return modes.)

A laser return is a detection of a reflection. Up to two returns per laser shot are supported by the VLP-16.

6.2.1 Single Return Modes: Strongest, Last

As shown in *Figure 6-1 on the facing page*, when a laser pulse hits a solid wall a single return or measurement is obtained. In this situation, the reading is considered both the strongest and the last return. (More on the nature of laser pulses emitted by your sensor, including the rectangular shape of the pulse, is covered in *Laser Pulse on page 119*.)

Figure 6-1 A Single Return

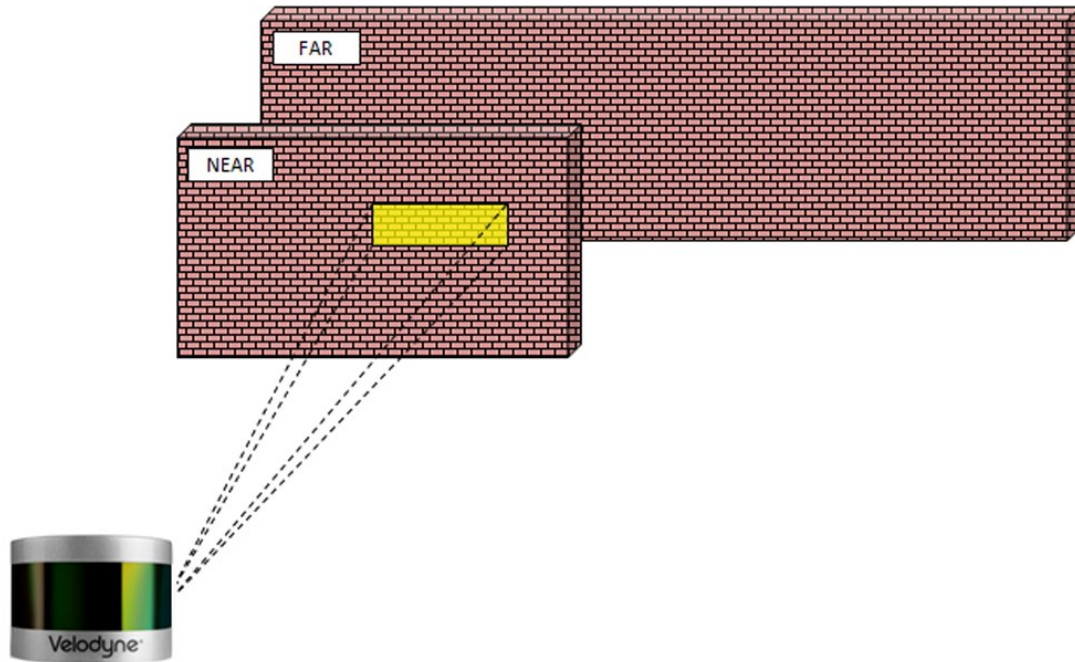

6.2.2 Multiple Returns

Multiple laser returns are possible from any single laser shot because of beam divergence. When a laser pulse leaves the sensor it slowly, gradually grows larger. A pulse can be big enough to hit multiple objects producing multiple reflections. Usually, the farther away a reflection starts, the weaker it is at the detector. Bright or retroreflective surfaces may flip that, however.


The VLP-16 analyzes multiple returns and reports either the strongest return, the last return, or both returns, depending on the laser return mode setting. If the setting is Strongest and a pulse produces multiple returns, only the strongest reflection results in a measurement. Likewise, if the setting is Last, only the last (time-wise) reflection results in a measurement. This could be used to measure distances to the ground from the air.

6.2.3 Dual Return Mode

Figure 6-2 on the next page shows the majority of a laser pulse striking the near wall while the remainder hits the far wall. The Dual return mode setting allows you obtain both measurements.

Note that the sensor records both returns only when the separation between the two objects is one meter or more.


Figure 6-2 Dual Return with Last and Strongest Returns

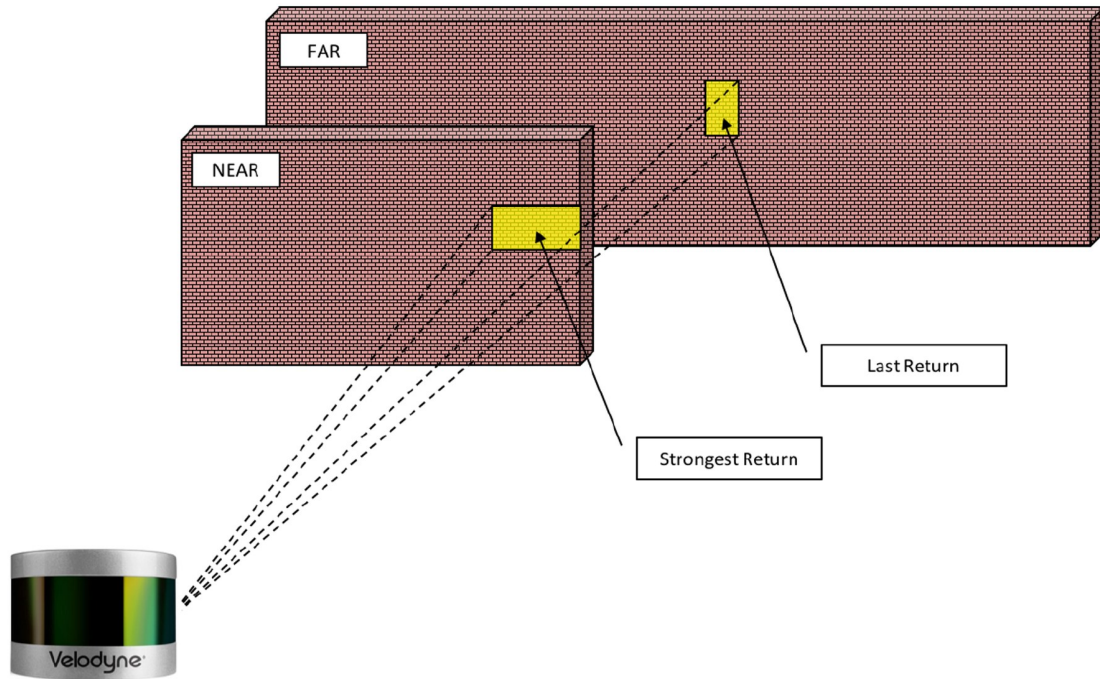

As shown in *Figure 6-3 on the facing page*, in the event the strongest return is the last return, the second-strongest return is reported. The majority of the beam hits the far wall and is (in this case) the strongest return.


It's entirely possible, however, that the far wall might be far enough away that despite reflecting the majority of the beam, the return from the near wall would be the strongest return.

Figure 6-3 Dual Return with Second Strongest Return

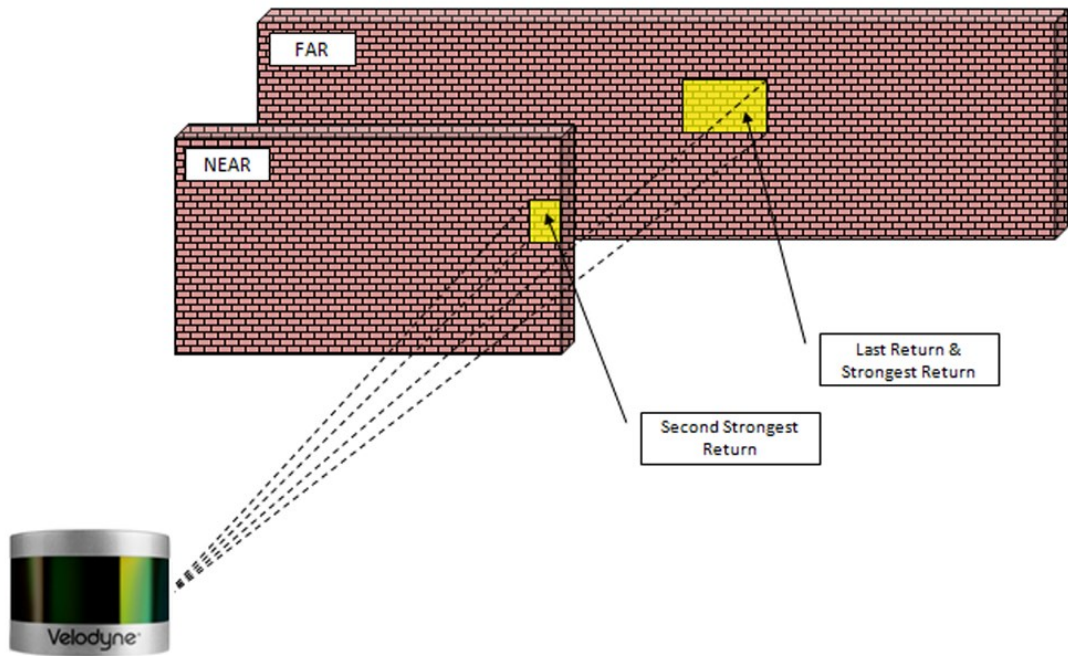


It's also possible that a small portion of the beam clips a retro-reflector and returns more energy than the majority of the beam, as in *Figure 6-4 on the next page*.

Figure 6-4 Dual Return with Far Retro-Reflector

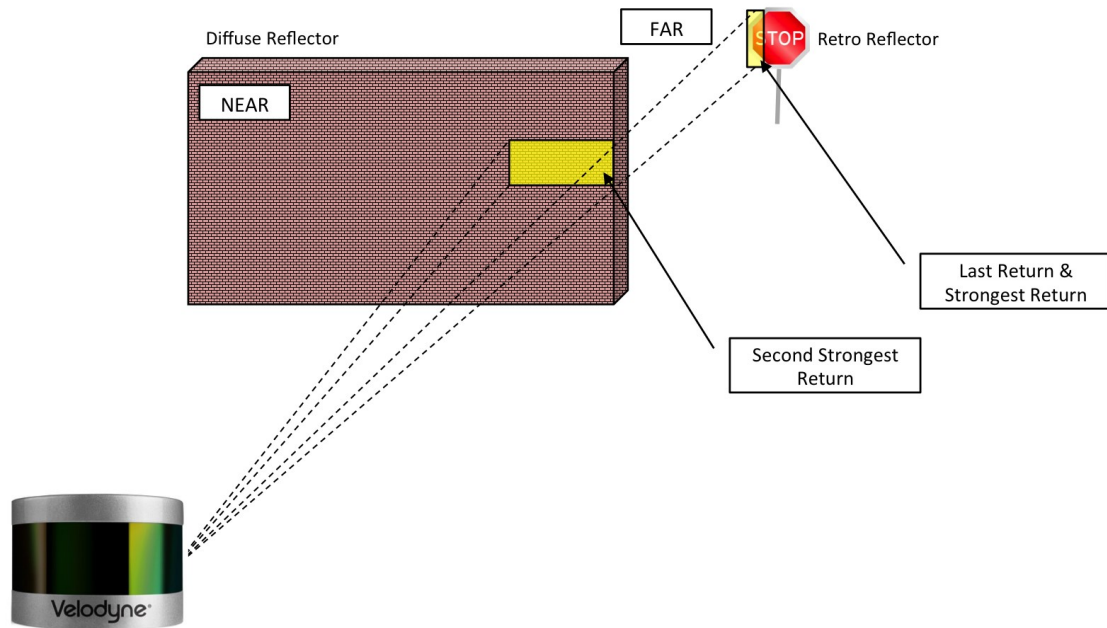

The dual return function is often used in forestry applications where measurement of the height of trees is desired. *Figure 6-5 on the facing page* indicates a sample response when the laser pulse initially hits the upper canopy, penetrates it, and eventually hits the ground, producing multiple returns. Which laser return mode would be best in this situation?

Figure 6-5 Forestry Application Multiple Returns

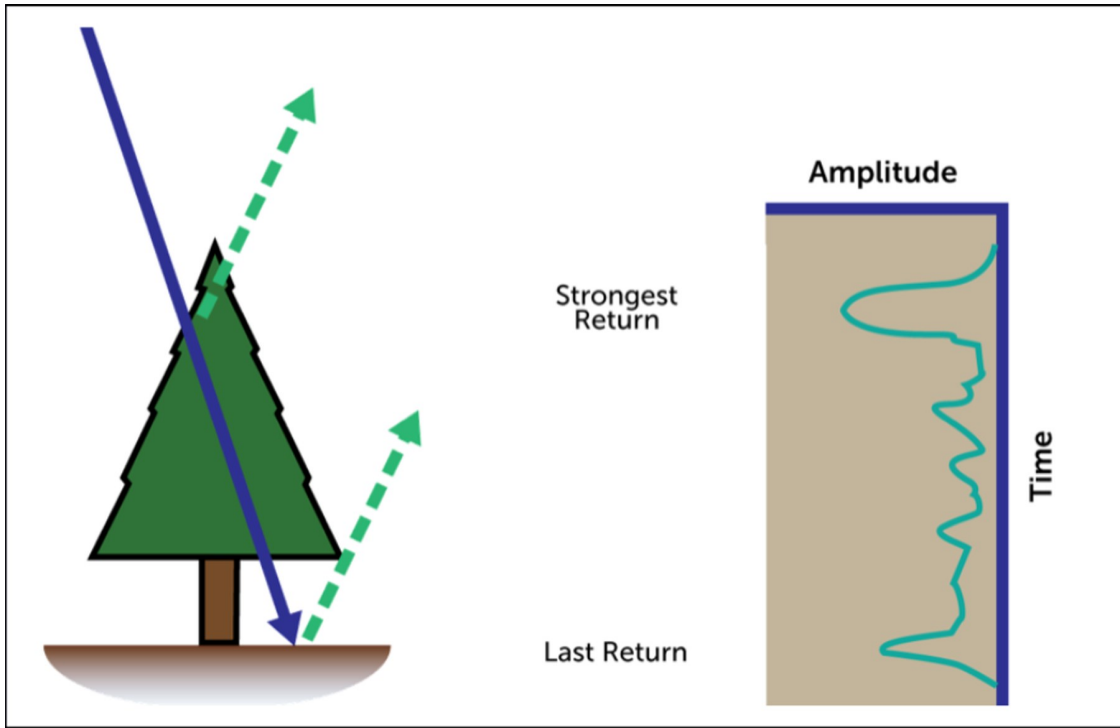

Note: In dual return mode, the data rate of the sensor doubles.


6.3 Phase Locking Multiple Sensors

When using multiple Velodyne LiDAR sensors in proximity to one another, users may observe interference between them due to one sensor picking up a reflection intended for another. To minimize this interference, the sensor provides a phase-locking feature that enables the user to control where the laser firings overlap.

The Phase Lock feature can be used to synchronize the relative rotational position of multiple sensors based on the PPS signal and relative sensor orientation. To operate correctly, the PPS signal must be present and locked. Phase locking works by offsetting the firing position based on the rising edge of the PPS signal.

Note: For phase lock to work correctly, the sensor's RPM setting must be set to a multiple of 60 RPM between 300 RPM and 1200 RPM (inclusive).

Figure 6-6 Phase Locking Example

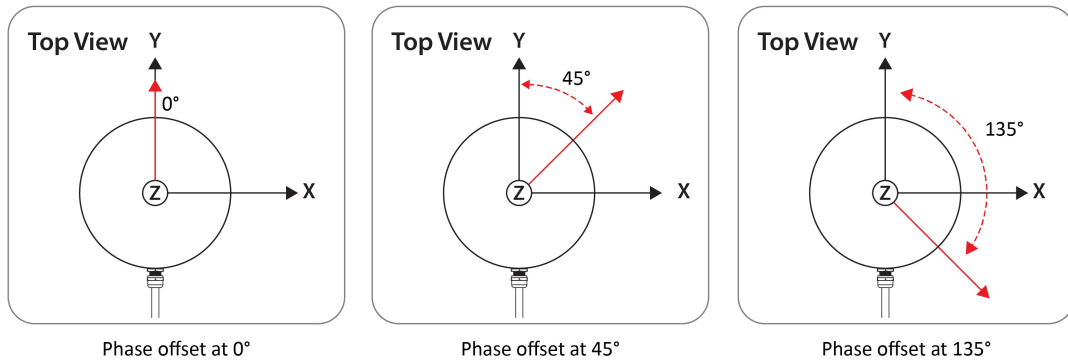

The red arrows shown in *Figure 6-6* above indicate the firing direction of the sensor's laser at the moment it receives the rising edge of the PPS signal.

Additional information for phase locking multiple sensors is located in *Phase Lock* on page 127.

Chapter 7 • Sensor Inputs

This chapter covers sensor input requirements and functionality, including power, PPS, and Ethernet. It also covers scenarios for obtaining GPS input.

7.1 Power Requirements	39
7.2 Interface Box Signals	40
7.3 Ethernet Interface	41
7.4 GPS, Pulse Per Second (PPS) and NMEA GPRMC Message	41
7.4.1 GPS Input Signals	41
7.4.2 Electrical Requirements	41
7.4.3 Timing and Polarity Requirements	41
7.4.4 GPS Connection Scenarios	44
7.4.5 NMEA Message Formats	46
7.4.6 Accepting NMEA Messages Via Ethernet	48

7.1 Power Requirements

Power requirements are detailed in Chapter 5: *Power on page 31*.

7.2 Interface Box Signals

Figure 7-1 Interface Box (sensor power and data connections)

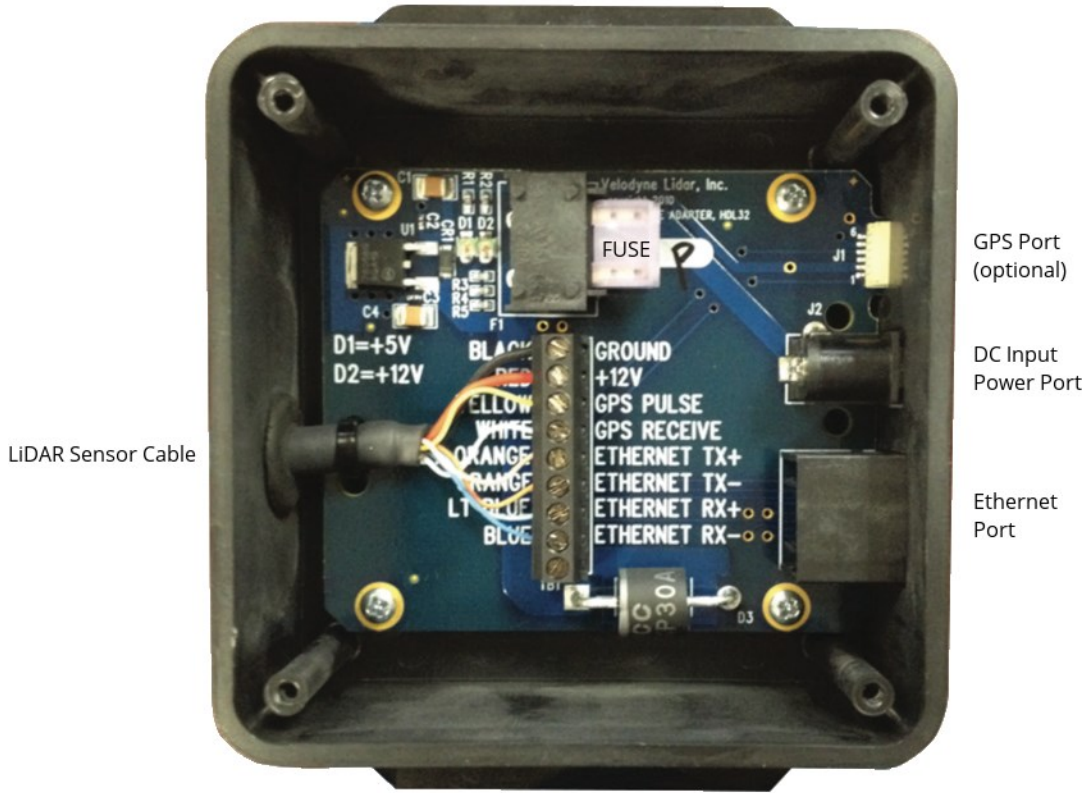


Table 7-1 Interface Box Signals

Signal Specifications	Signal	Input/Output
Black	Ground	Input
Red	Power	Input
Yellow	GPS Sync Pulse	Input
White	GPS Serial Receive	Input
Light Orange	Ethernet TX+	Output
Orange	Ethernet TX-	Output
Light Blue	Ethernet RX+	Input
Blue	Ethernet RX-	Input

7.3 Ethernet Interface

Your sensor's primary interface is its Ethernet interface. All command and control occurs over it, and all sensor data is transmitted over it.

The RJ45 Ethernet connector on the Interface Box connects to any standard 100 Mbps Ethernet NIC or switch with MDI or AUTO MDIX capability.

See *Ethernet and Network Setup on page 134* for more.

7.4 GPS, Pulse Per Second (PPS) and NMEA GPRMC Message

Your sensor can synchronize data with precise GPS-supplied time. Synchronizing to a GPS-supplied Pulse-Per-Second (PPS) signal provides the ability to compute the exact firing moment of each data point as required by some geo-referencing applications. See *Time Synchronization on page 123* for details on GPS time synchronization and how important it is for associating sensor data with the sensor's environment.

To utilize these features, configure your GPS/INS device to issue a PPS signal in conjunction with a once-per-second NMEA GPRMC sentence. No other NMEA message is accepted by the sensor.

Note: The GPRMC record may be configured for HHMMSS, HHMMSS.s, HHMMSS.ss, and HHMMSS.sss formats.

7.4.1 GPS Input Signals

The serial data output from the GPS/INS is connected to the sensor's Interface Box via the screw terminal labeled: "GPS RECEIVE."

The PPS output from the GPS/INS is connected to the sensor's Interface Box via the screw terminal labeled: "GPS PULSE."

The ground signal from the GPS/INS is connected to the sensor's Interface Box via the screw terminal labeled: "GROUND."

Note: You can use the provided GPS port on the Interface Box if using the Velodyne GPS Receiver (P/N 80-GPS18LVC).

7.4.2 Electrical Requirements

- "High" voltage must be greater than 3.0 V and less than 15.0 V.
- "Low" voltage must be less than 1.2 V, and greater than -15.0 V.
- The GPS/INS unit must be able to supply at least 2 mA of current in the "High" state.

7.4.3 Timing and Polarity Requirements

The PPS synchronization pulse and GPRMC message (or GPGGA) may be issued concurrently or sequentially. The PPS synchronization pulse width is not critical (typical lengths are between 10 μ s and 200 ms).

Note: Reception of the GPRMC sentence must conclude no more than 300 ms before the rising edge of the subsequent synchronization pulse as shown in *Figure 7-2 on the next page*, *Figure 7-3 on the next page* and *Figure 7-4 on page 43*.

Figure 7-2 Synchronizing PPS with NMEA GPRMC Message

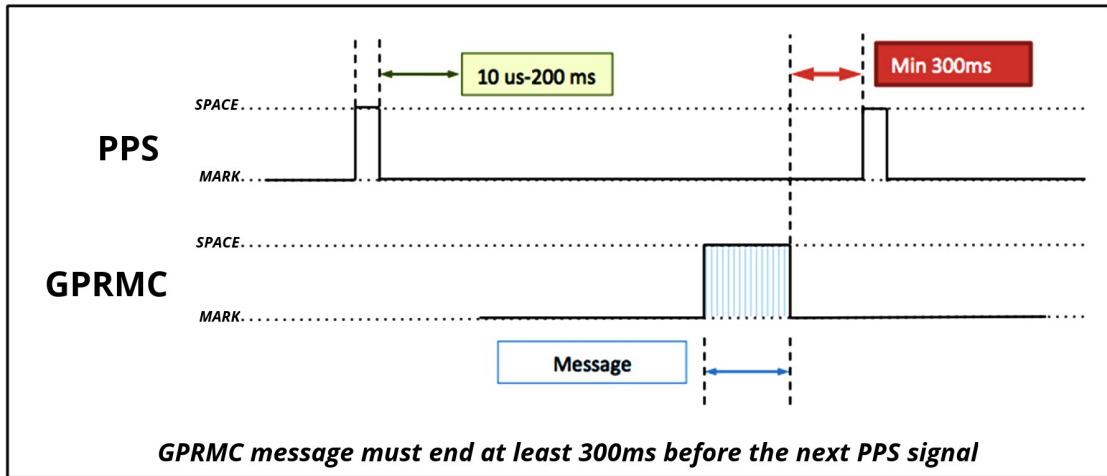


Figure 7-3 PPS Signal Closely Followed by NMEA GPRMC Message


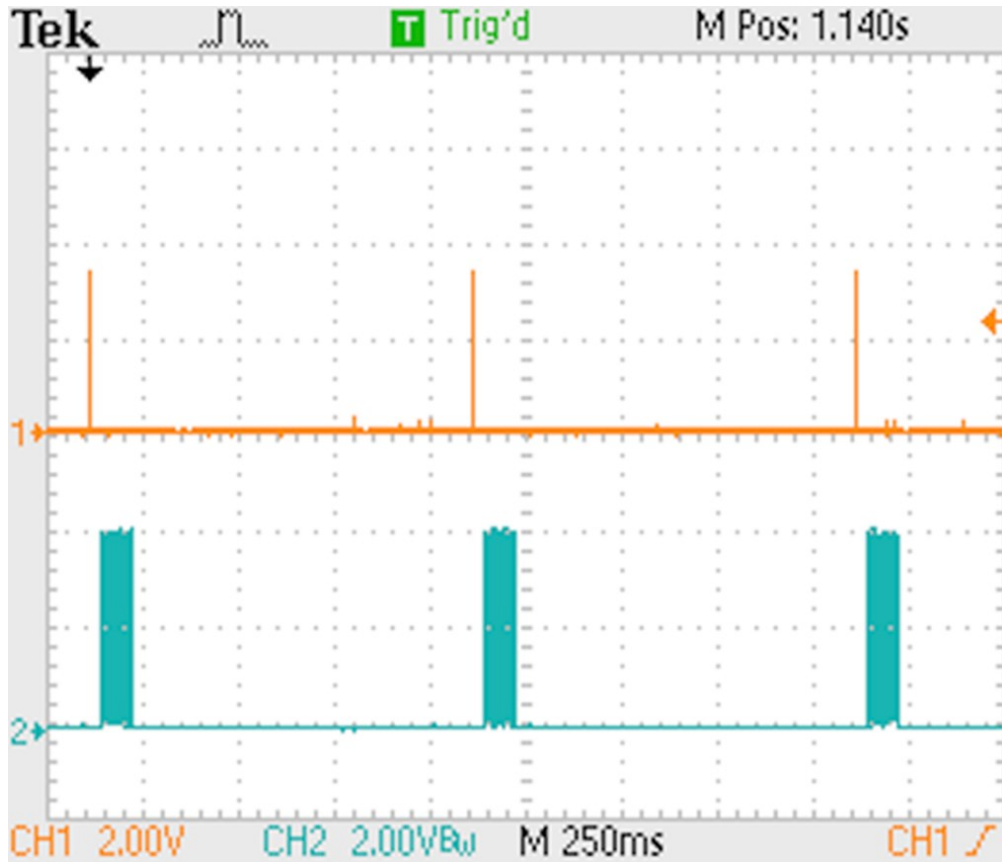


Figure 7-4 PPS Signal Followed 600 ms later by NMEA GPRMC Message

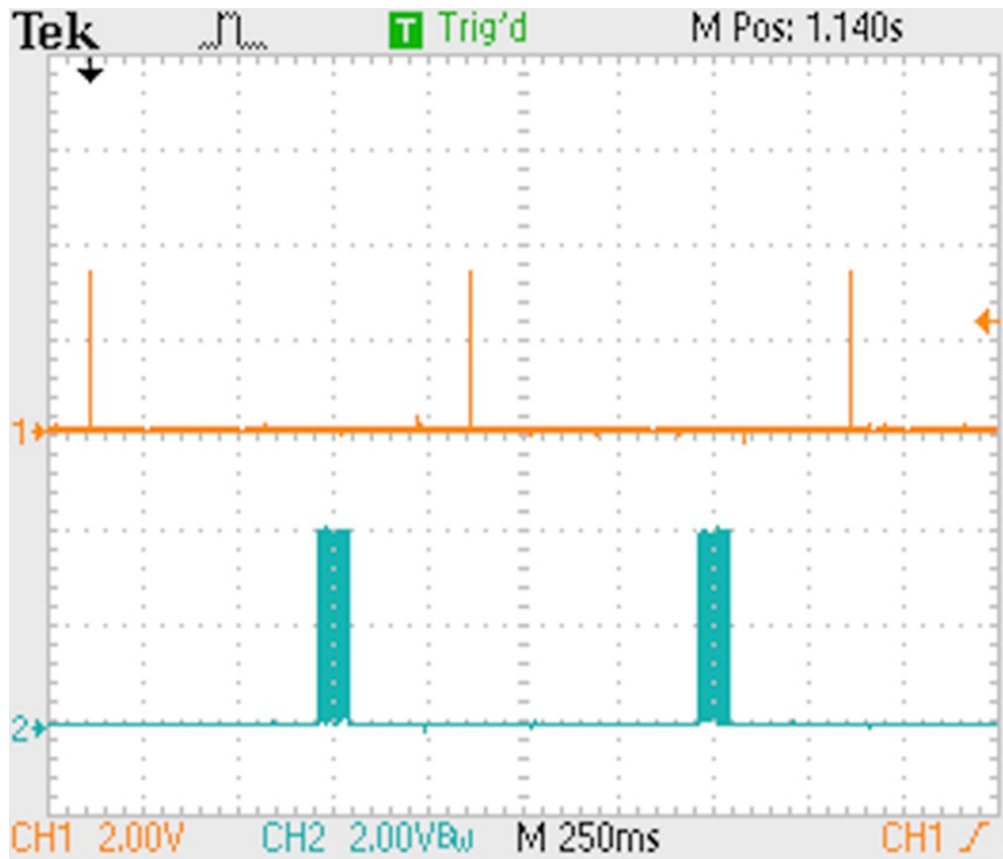


The serial connection for the NMEA message follows the RS232 standard. The interface is capable of handling voltages between ± 15 VDC.

- Low voltages are marks and represent a logical 1.
- High voltages are spaces and represent a logical 0.

The serial line idle state (MARK) is a low voltage indicating a logical 1. When the start bit is asserted, the positive voltage will be asserted representing a logical 0. As an example, the transmission of an ASCII "\$" character is shown in *Figure 7-5 on the next page*.

Figure 7-5 RS-232 Example Transmission

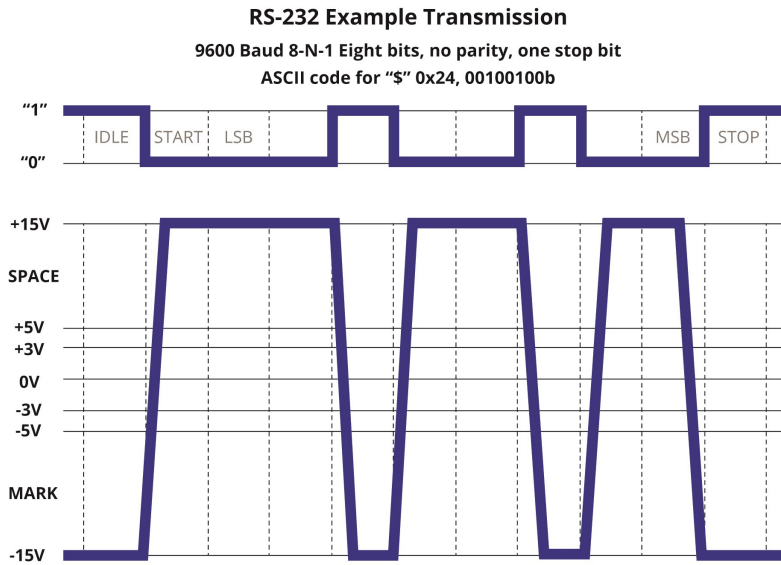

7.4.4 GPS Connection Scenarios


Depending on the user's application, the source of the NMEA message (and PPS) can be a GPS/INS receiver or a substitute device such as a laptop or microcomputer.

There are three common connection scenarios: connecting to a sensor from a Velodyne-supplied Garmin 18x LVC GPS receiver, connecting to it from a computer's serial port, and connecting directly from a microcomputer's UART.

7.4.4.1 Connecting a Garmin 18x LVC GPS Receiver

As an option, Velodyne LiDAR offers a Garmin 18x LVC GPS Receiver (P/N 80-GPS18LVC) pre-configured for optimized operation with your sensor. The receiver plugs directly into the Interface Box's GPS port and is used to synchronize your sensor's timestamp with precision GPS time. The signals from the Garmin receiver will be similar to those shown in *Figure 7-6 below* where the signal is normally low and zeros are represented by the high voltage.


Figure 7-6 Garmin GPRMC Message

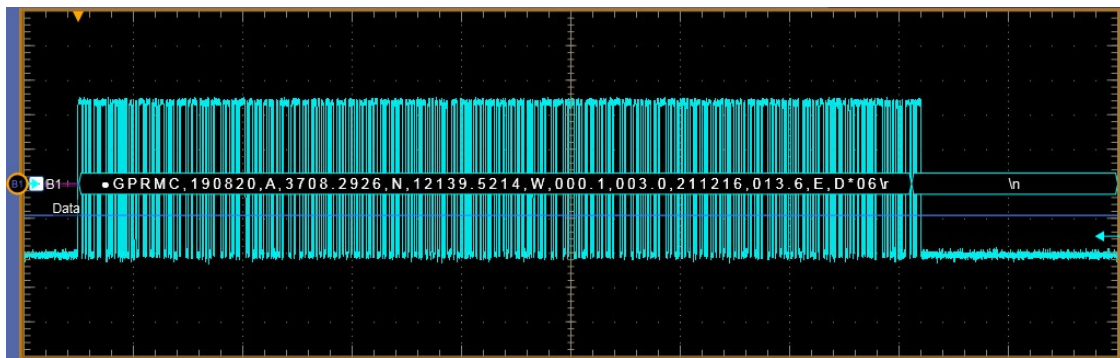

7.4.4.2 Connecting to a computer's serial port

In some situations, you may wish to source NMEA messages from a computer instead of a GPS receiver.

Figure 7-7 DB9 Pin-outs (DTE) and USB-to-Serial Adapter

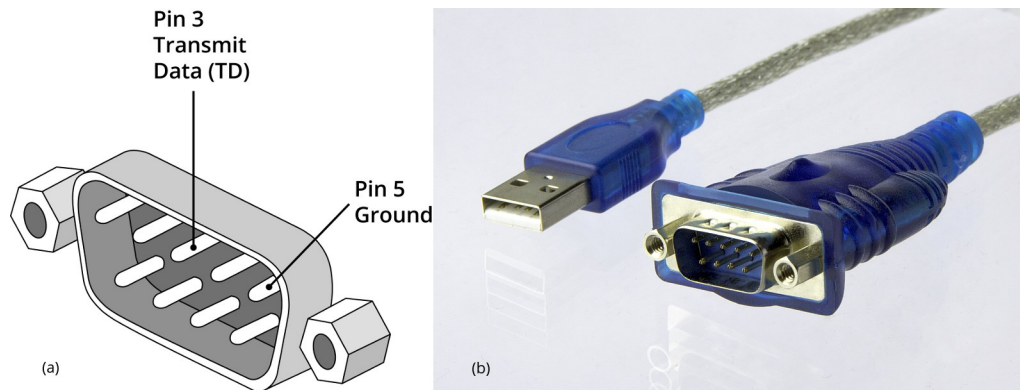

An example of a standard DB9 serial port is shown in *Figure 7-7 above* (a). Because modern computers use USB ports, a USB to Serial Adapter, as shown in *Figure 7-7 above* (b), will be required. The DB9 connector on the adapter provides a signal with the proper polarity and voltage levels to connect directly to the sensor's Interface Box.

After connecting the USB to Serial Adapter to your computer and wiring up a mating DB9 connector (not pictured), you can complete the connection to your sensor. Remove the cover from the Interface Box and make the following connections to the terminal screw strip in the Interface Box.

- DB9 pin 3 to GPS RECEIVE
- DB9 pin 5 connects to GROUND

7.4.4.3 Connecting to a microcomputer's UART

In other situations, you may wish to source NMEA messages from a microcomputer such as a Raspberry Pi or Arduino, instead. The native signal coming from the microcomputer's UART will have incorrect polarity. In this instance, invert the signal using a 7404 hex inverter chip or equivalent circuitry. To connect to the sensor, remove the cover from the Interface Box and connect the appropriate leads to the GPS RECEIVE and GROUND connections on the terminal strip.

Figure 7-8 on the next page shows a signal directly from a Raspberry Pi UART output and *Figure 7-9 on the next page* shows the same output inverted into a signal compatible with your Velodyne sensor.

Figure 7-8 Signal Directly from UART (incorrect polarity)


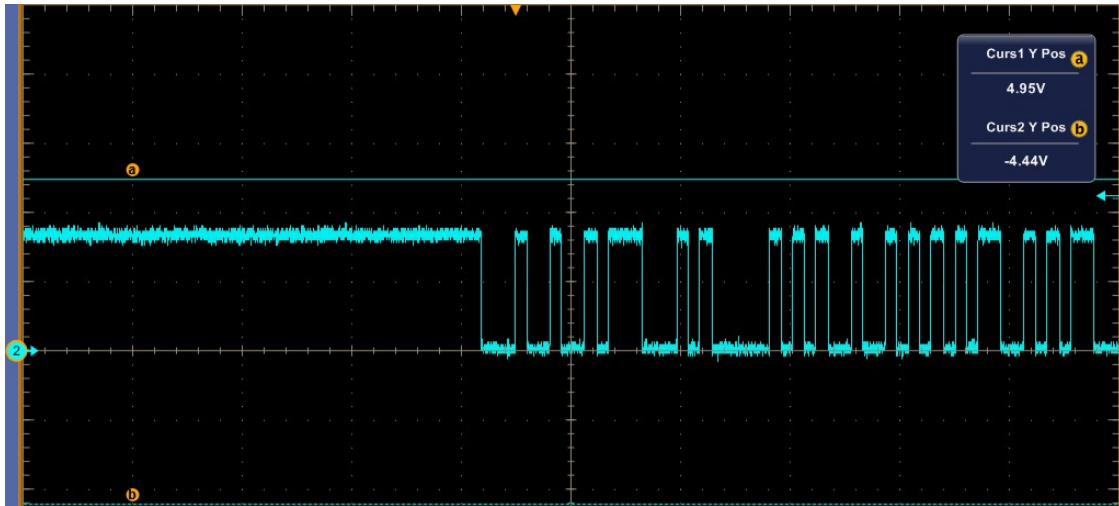


Figure 7-9 Inverted Signal from UART (correct polarity)

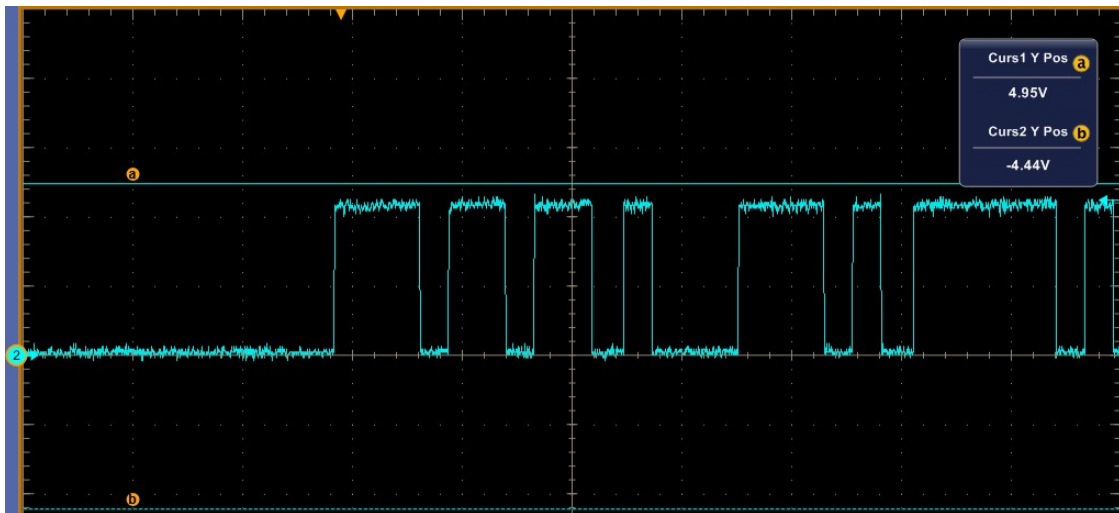

7.4.5 NMEA Message Formats

GPGLA may be substituted in place of GPRMC.

The sensor accepts both pre- and post-NMEA version 2.3 sentence structures. The difference is that in version 2.3 a Fix Mode Indicator field was added after Magnetic Variation and before the Checksum.

NMEA messages are terminated with sentence delimiter <CR><LF> (HEX 0D0A).

7.4.5.1 Pre-NMEA Version 2.3 Message Format

Table 7-2 on the facing page provides a description of the pre-NMEA 2.3 message format contents shown below.

\$GPRMC,123519,A,4807.038,N,01131.000,E,022.4,084.4,230394,003.1,W*6A

Table 7-2 Pre-NMEA Version 2.3 Message Format

Value	Description
\$GPRMC	Recommended Minimum sentence
123519	Fix taken at 12:35:19 UTC
A	Receiver status: A = Active, V = Void
4807.038,N	Latitude 48 deg 07.038' N
01131.000,E	Longitude 11 deg 31.000' E
022.4	Speed over the ground (knots)
084.4	Track made good (degrees True)
230394	23rd of March 1994
003.1,W	Magnetic Variation
*6A	* followed by 2-byte Checksum

7.4.5.2 NMEA Version 2.3 Message Format

Table 7-3 below provides a description of the post-NMEA 2.3 message format contents shown below.

\$GPRMC,123519,A,4807.038,N,01131.000,E,022.4,084.4,230394,003.1,W,A*02

Table 7-3 Post-NMEA Version 2.3 Message Format

Value	Description
\$GPRMC	Recommended Minimum sentence
123519	Fix taken at 12:35:19 UTC
A	Receiver status: A = Active, V = Void
4807.038,N	Latitude 48 deg 07.038' N
01131.000,E	Longitude 11 deg 31.000' E
022.4	Speed over the ground (knots)
084.4	Track made good (degrees True)
230394	23rd of March 1994
003.1,W	Magnetic Variation

Value	Description
A	Fix Mode Indicator: A = Autonomous, D = Differential, E = Estimated, N = Not valid, S = Simulator. Sometimes there can be a null value as well.
*6A	* followed by 2-byte Checksum

Note: The Receiver Status (aka Validity) field in the GPRMC message ('A' or 'V') should be checked to ensure the GPS receiver is actively positioning and is providing trustworthy UTC (Coordinated Universal Time) and position updates. If status is Void, which usually occurs when the GPS receiver is searching for satellites, GPS position should be ignored. In many instances, the GPS receiver, if its status is Void, will continue to provide a PPS signal based on the GPS receiver's internal clock. More on this can be found in *Time Synchronization on page 123*.

7.4.6 Accepting NMEA Messages Via Ethernet

Your sensor can accept NMEA sentences over Ethernet. Three methods are supported:

1. A host opens a TCP connection to the sensor's port 10110 and transmits NMEA sentences on the socket.
2. A host transmits NMEA sentences in UDP packets to the sensor's UDP port 10110.
3. A host transmits NMEA sentences in UDP packets to a broadcast address on port 10110 with an NMEA sentence.

1 and 2 require knowledge of the sensor's IP address. 3 does not, but it may load devices on the network that don't want the packets.

Note: The supported NMEA sentence and syntax are exactly the same as on the wired (serial) GPS interface. Supported sentence delimiter sequences include <CR><LF> (HEX 0D0A, the standard), <CR> by itself, and <LF> by itself.

The support follows the ad-hoc but widely supported NMEA over Ethernet approach utilized by the OpenCPN project. Additional information can be found at the following web sites:

- <http://stripdog.blogspot.com/2015/03/nmea-0183-over-ip-unwritten-rules-for.html>
- https://opencpn.org/wiki/dokuwiki/doku.php?id=opencpn:supplementary_software:nmea_instruments
- <http://arundale.com/docs/ais/nmeaouter.html>

Chapter 8 • Sensor Operation


This chapter provides details on the laser firing sequence, point density, and how to determine throughput rate and angular resolution.

8.1 Firing Sequence	49
8.2 Throughput Calculations	49
8.2.1 Data Packet Rate	49
8.2.2 Position Packet Rate	50
8.2.3 Total Packet Rate	50
8.2.4 Laser Measurements Per Second	50
8.3 Rotation Speed (RPM)	50
8.3.1 Horizontal Angular (Azimuth) Resolution	50
8.3.2 Rotation Speed Fluctuation and Point Density	51

8.1 Firing Sequence

All 16 lasers are fired and recharged every 55.296 μs . The time between firings is 2.304 μs . There are 16 firings ($16 \times 2.304 \mu\text{s}$) followed by an idle period of 18.43 μs . Therefore, the timing cycle to fire and recharge all 16 lasers is given by ($16 \times 2.304 \mu\text{s}$) + 18.432 μs = 55.296 μs .

Figure 8-1 Firing Sequence Timing

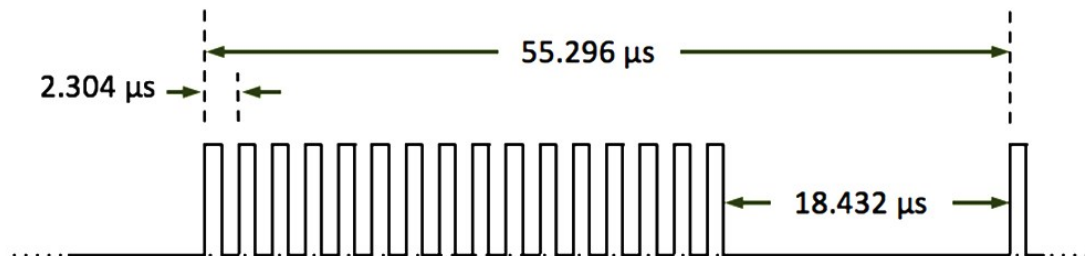

8.2 Throughput Calculations

Some terms used here are defined in *Packet Types and Definitions* on page 54.

8.2.1 Data Packet Rate

There are 24 firing cycles in a data packet. $24 \times 55.296 \mu\text{s} = 1.327 \text{ ms}$ is the accumulation delay per packet.

$1 \text{ packet} / 1.327 \text{ ms} = 753.5 \text{ packets/second}$

$1248 \text{ bytes/packet} * 753.5 \text{ packets/second} = 940368 \text{ bytes/second}$

8.2.2 Position Packet Rate

Position packets arrive at approximately 1/14th the rate of data packets.

$554 \text{ bytes/packet} * 753.5 \text{ packets/second} / 14 = 29817 \text{ bytes/second}$

8.2.3 Total Packet Rate

Summing yields 970185 bytes/second for single return mode.

Dual return mode doubles the data rate but not the position packet rate: $(2 * 970185 \text{ bytes/second}) + 29817 \text{ bytes/second} = 1970187 \text{ bytes/second}$

8.2.4 Laser Measurements Per Second

A laser firing results in a single data point, which is a measurement of distance to target and its reflectivity.

$16 \text{ laser firings/data block} * 24 \text{ data blocks/packet} = 384 \text{ laser firings/packet}$

8.2.4.1 Single Return Mode (Strongest, Last)

$384 \text{ laser firings/packet} * 753.5 \text{ packets/second} = 289344 \text{ laser measurements per second}$

8.2.4.2 Dual Return Mode

$384 \text{ laser firings/packet} * 1507 \text{ packets/second} = 578688 \text{ laser measurements per second}$

8.3 Rotation Speed (RPM)

The sensor's motor can be set to rotate between 300 RPM and 1200 RPM, inclusive, in increments of 60 RPM (e.g. 300, 360, 420, 480, ... 1140, 1200).

Note: If the RPM setting is not evenly divisible by 60, neither motor speed control nor phase lock functions will function properly.

The user can set this parameter using the sensor's Web Interface or curl commands. See *Configuration Screen on page 69* or *Sensor Control with curl on page 76* for more on setting rotation speed.

Note: In VeloView, one rotation can be referred to as a single "frame" of data, beginning and ending at approximately 0° azimuth. The number of frames per second of data generated depends entirely on the RPM setting, e.g. $600 \text{ RPM} / 60 \text{ s/min} = 10 \text{ frames per second}$.

Choice of RPM is up to the user and depends on the application. For example, an autonomous vehicle may wish to increase rotation speed so it could more quickly identify frame-to-frame variations in the environment, such as a child running across a street. Conversely, a cart-based mapping solution might use a lower RPM to increase the detail in each frame.

8.3.1 Horizontal Angular (Azimuth) Resolution

Because the firing timing of the sensor is fixed at 55.296 μs per firing cycle, the speed of rotation changes the angular resolution of the sensor.

An example calculation for 600 RPM is given in *Equation 8-1 below*.

Equation 8-1 Azimuth Resolution at 600 RPM

$$\text{Azimuth}_{\text{Resolution}} = 600 \frac{\text{rev}}{\text{min}} \times \frac{1}{60} \frac{\text{min}}{\text{s}} \times 360 \frac{\circ}{\text{rev}} \times \frac{55.296 \times 10^{-6} \text{s}}{\text{firing cycle}}$$

$$\text{Azimuth}_{\text{Resolution}} = 0.199^\circ / \text{firing cycle}$$

By changing the RPM in the equation above you can calculate the azimuthal resolution for any rotation speed.

Table 8-1 Rotation Speed vs Resolution


RPM	Resolution
300	0.1°
600	0.2°
900	0.3°
1200	0.4°

8.3.2 Rotation Speed Fluctuation and Point Density

Your sensor uses a feedback control function to maintain its rotational speed within ± 3 RPM of its configured setting. This small variation in speed produces a small change in the azimuthal gaps with every revolution. Consequently, over time, the sensor automatically “fills in the gaps” between successive laser firings.

A data set from a stationary sensor provides an example of the how the sensor “fills in the gaps,” and the effect is demonstrated in *Figure 8-2* below. On the left is a single frame of data. On the right is the same frame and the nine preceding frames overlaid on each other. You can see how the azimuth gaps are filled.

Figure 8-2 Point Density Example

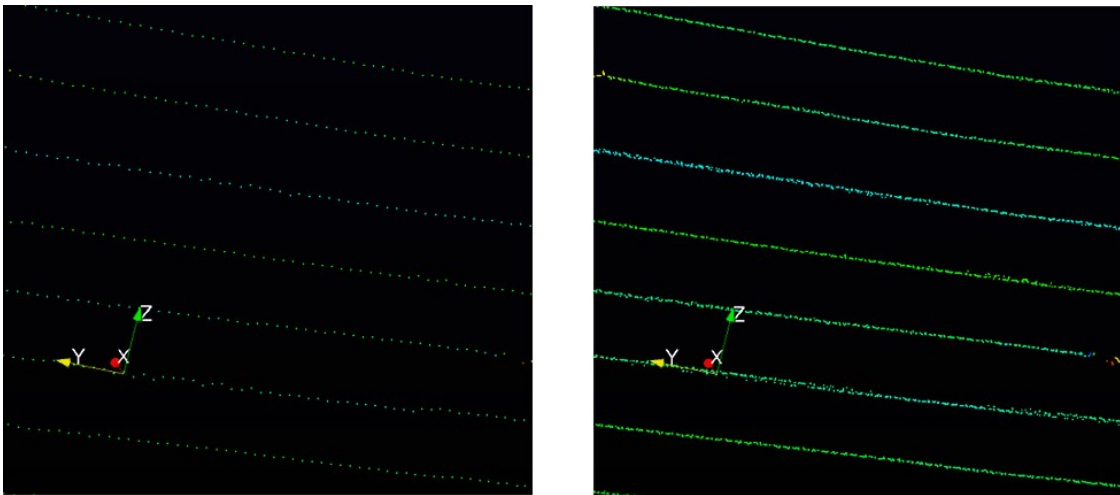

Chapter 9 • Sensor Data

This chapter provides detailed information about sensor data characteristics.

9.1 Sensor Origin and Frame of Reference	52
9.2 Calculating X,Y,Z Coordinates from Collected Spherical Data	52
9.3 Packet Types and Definitions	54
9.3.1 Definitions	54
9.3.2 Data Packet Structure	56
9.3.3 Position Packet Structure	60
9.4 Discreet Point Timing Calculation	61
9.5 Precision Azimuth Calculation	65
9.6 Converting PCAP Files to Point Cloud Formats	66

9.1 Sensor Origin and Frame of Reference

The sensor reports distances relative to itself in spherical coordinates (radius r , elevation ω , azimuth α). Sensor data origin (0,0,0) is 37.7 mm above the sensor base, on the center axis, as shown in *Figure 9-1 on the facing page* (see the side and top views), which also shows the sensor's frame of reference. See also the mechanical/optical drawings in *VLP-16 and Puck LITE Mechanical Drawing on page 102*.

9.2 Calculating X,Y,Z Coordinates from Collected Spherical Data

A computation is necessary to convert the spherical data (radius r , elevation ω , azimuth α) from the sensor to Cartesian coordinates. *Figure 9-1 on the facing page* lists the formulas for converting spherical coordinates (R, ω, α) to Cartesian coordinates (X, Y, Z).

Figure 9-1 VLP-16 Sensor Coordinate System

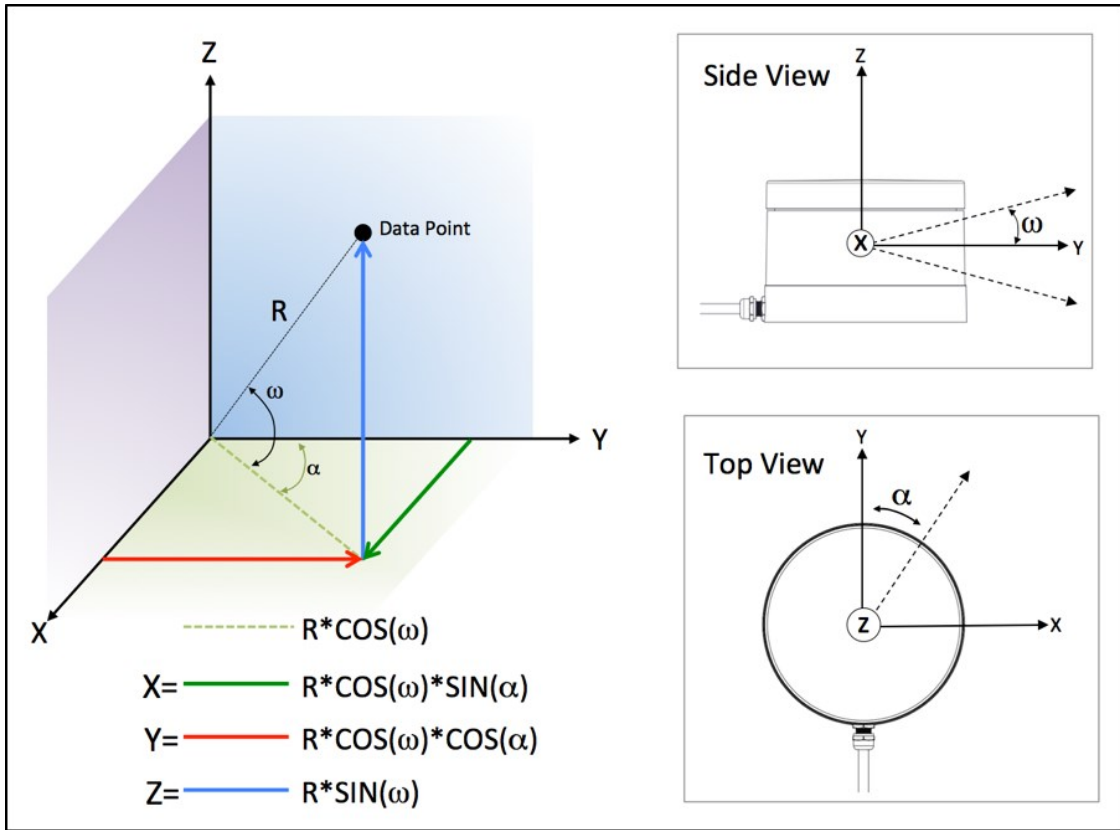


Table 9-1 below lists the fixed vertical/elevation angles for each laser in the sensor, along with vertical corrections. The set of angles vary by sensor model (see *Factory Bytes* on page 56 for more).

Table 9-1 Vertical Angles (ω) by Laser ID and Model

Laser ID	Vertical Angle VLP-16	Vertical Angle Puck LITE	Vertical Correction (mm)	Vertical Angle Puck Hi-Res	Vertical Correction (mm)
0	-15°	-15°	11.2	-10.00°	7.4
1	1°	1°	-0.7	0.67°	-0.9
2	-13°	-13°	9.7	-8.67°	6.5
3	3°	3°	-2.2	2.00°	-1.8
4	-11°	-11°	8.1	-7.33°	5.5
5	5°	5°	-3.7	3.33°	-2.7
6	-9°	-9°	6.6	-6.00	4.6

Laser ID	Vertical Angle VLP-16	Vertical Angle Puck LITE	Vertical Correction (mm)	Vertical Angle Puck Hi-Res	Vertical Correction (mm)
7	7°	7°	-5.1	4.67°	-3.7
8	-7°	-7°	5.1	-4.67°	3.7
9	9°	9°	-6.6	6.00°	-4.6
10	-5°	-5°	3.7	-3.33°	2.7
11	11°	11°	-8.1	7.33°	-5.5
12	-3°	-3°	2.2	-2.00°	1.8
13	13°	13°	-9.7	8.67°	-6.5
14	-1°	-1°	0.7	-0.67°	0.9
15	15°	15°	-11.2	10.00°	-7.4

Note: *Table 9-1 on the previous page* lists lasers in the order they are fired. Though the VLP-16's lasers are organized in a single, vertical column, they are not fired from one end to the other. Instead, the firing sequence "hops around." This is to avoid "cross-talk" or interference.

After computing X,Y,Z, apply the vertical correction in *Table 9-1 on the previous page* for greatest accuracy. This represents the vertical offset of the laser with respect to sensor origin. These vertical offset corrections are also found in the *VLP-16 and Puck LITE Optical Drawing on page 103* and the Hi-Res version below it.

9.3 Packet Types and Definitions

There are two types of packets generated by the sensor: data packets and position packets. Position packets are sometimes referred to as telemetry packets, or GPS packets.

Data packets contain the 3D data measured by the sensor as well as the calibrated reflectivity of the surface from which the light pulse was returned. Also contained in the data packet is a set of azimuths and a 4-byte timestamp, as well as two factory bytes identifying the model of sensor and the return mode. Knowing the model and return mode provides your software the information to automatically adjust to the different data formats.

Position packets provide a copy of the last GPRMC NMEA message received if you've configured your sensor to synchronize with a GPS time source. See *GPS, Pulse Per Second (PPS) and NMEA GPRMC Message on page 41* for additional information. Position packets also provide a byte identifying the state of the PPS signal for synchronizing with a time source.

Note: In both types of packets, multi-byte values (e.g. azimuth, distance, and timestamp) are transmitted with the least significant byte first (i.e. little-endian).

9.3.1 Definitions

The following sections provide explanations of sensor data packet constructs.

9.3.1.1 Firing Sequence

A firing sequence occurs when all the lasers in a sensor are fired. They are fired in a sequence specific to a given product line. Laser recharge time is included. A firing sequence is sometimes referred to as a firing group.

It takes 55.296 μ s to fire all 16 lasers in a VLP-16 and recharge.

9.3.1.2 Laser Channel

A laser channel is a single 903 nm laser emitter and detector pair. Each laser channel is fixed at a particular elevation angle relative to the horizontal plane of the sensor. Each laser channel is given its own Laser ID number as shown in *Table 9-1 on page 53*. The elevation angle of a particular laser channel is inferred by its data packet location.

9.3.1.3 Data Point

A data point is a measurement by one laser channel of a reflection of a laser pulse.

A data point is represented in the packet by three bytes - two bytes of distance and one byte of calibrated reflectivity. The distance is an unsigned integer. It has 2 mm granularity. Hence, a reported value of 51,154 represents 102,308 mm or 102.308 m. Calibrated reflectivity is reported on a scale of 0 to 255 as described in *Key Features on page 32*. The elevation angle (w) is inferred based on the position of the data point within a data block.

9.3.1.4 Azimuth

A two-byte azimuth value (α) appears after the flag bytes at the beginning of each data block. The azimuth is an unsigned integer. It represents an angle in hundredths of a degree. Therefore, a raw value of 27742 should be interpreted as 277.42°.

Valid values for azimuth range from 0 to 35999. Only one azimuth value is reported per data block.

9.3.1.5 Data Block

The information from two firing sequences of 16 lasers is contained in each data block. Each packet contains the data from 24 firing sequences in 12 data blocks.

Only one Azimuth is returned per data block.

A data block consists of 100 bytes of binary data:

- A two-byte flag (0xFFEE)
- A two-byte Azimuth
- 32 Data Points

$$[2 + 2 + (32 \times 3)] = 100 \text{ bytes}$$

For calculating time offsets it is recommended that the data blocks in a packet be numbered 0 to 11.

9.3.1.6 Time Stamp

The four-byte time stamp is a 32-bit unsigned integer marking the moment of the first data point in the first firing sequence of the first data block. The time stamp's value is the number of microseconds elapsed since the top of the hour. The number ranges from 0 to 3,599,999,999, the number of microseconds in one hour.

The time stamp is critical because it's used by geo-referencing software to match each laser firing with corresponding data from an inertial navigation system. The inertial navigation system provides a series of time stamped values for pitch, roll, yaw, latitude, longitude, and elevation. By matching the time of the data point to the time-stamped data from the INS, the user's software can mathematically transform the data from the sensor's coordinate frame to an earth-based reference frame. The time stamps are matched to Universal Coordinated Time (UTC) provided by the GPS/INS.

When the sensor powers up it begins counting microseconds using an internal time reference. However, the sensor can synchronize its data with UTC time so you can ascertain the exact firing time of each laser in any particular packet.

UTC synchronization requires a user-supplied GPS/INS receiver generating a synchronizing Pulse Per Second (PPS) signal and an NMEA GPRMC message. The GPRMC message provides minutes and seconds in UTC. Upon synchronization, the sensor reads the minutes and seconds from the GPRMC message and uses the information to set the sensor's time stamp to the number of microseconds past the hour, per UTC.

Note: A full description of electrical and timing requirements can be found in *GPS, Pulse Per Second (PPS) and NMEA GPRMC Message on page 41*. A full description of timing options can be found in *Time Synchronization on page 123*.

9.3.1.7 Factory Bytes

Beginning with firmware release 3.0.29.0, every data packet includes a pair of bytes called the Factory Bytes. Their values indicate how azimuths and data points are organized in the packet. Their packet locations, values, and meanings are specified in *Table 9-2 below*.

The Return Mode byte indicates how the packet's azimuth and data points are organized. See *Data Packet Structure below* for details.

Every sensor model line has its lasers arrayed vertically at slightly different angles. Use the Product ID byte to identify the correct set of vertical (or elevation) angles. Product IDs are not unique and may be shared by different sensors. For example, per *Table 9-2 below*, the VLP-16 and Puck LITE share the same elevation angles. Hence, the two products share the same Product ID. Conversely, the Puck Hi-Res has a different Product ID since it has a different set of elevation angles.

Table 9-2 Factory Byte Values

Return Mode		Product ID	
Offset in packet: 0x04DE		Offset in packet: 0x04DF	
Mode	Value	Product Model	Value
Strongest	0x37 (55)	HDL-32E	0x21 (33)
Last Return	0x38 (56)	VLP-16	0x22 (34)
Dual Return	0x39 (57)	Puck LITE	0x22 (34)
--	--	Puck Hi-Res	0x24 (36)
--	--	VLP-32C	0x28 (40)
--	--	Velarray	0x31 (49)
--	--	VLS-128	0x63 (99)

9.3.2 Data Packet Structure

A data packet is 1248 bytes long and sent via a UDP packet on port 2368. The data packet is comprised of 42 bytes of protocol header, twelve Data Blocks, a four-byte timestamp, and two factory bytes.

There are two formats for the data packet:

- Single Return Mode (either Strongest or Last)
- Dual Return Mode

See *Laser Return Modes on page 32* for an illustration of what Strongest, Last, and Dual mean in this context.

The packet data structure for Single Return Mode is shown in *Figure 9-2 below*. The packet data structure for Dual Return Mode is shown in *Figure 9-3 on the next page*.

There are several key differences between the packet structures.

First, in Dual Return Mode the sensor sends a pair of data blocks for each azimuth angle firing. The odd numbered blocks (1, 3, ..., 9, 11) contain either the strongest or second-strongest return and the even numbered blocks (0, 2, ..., 8, 10) contain the last return.

If the strongest return is also the last return, then the second-strongest return is provided. If only one return was detected, the data will be identical in the even|odd block pairs (0|1, 2|3, 4|5, 6|7, 8|9, 10|11).

Figure 9-2 VLP-16 Single Return Mode Data Structure


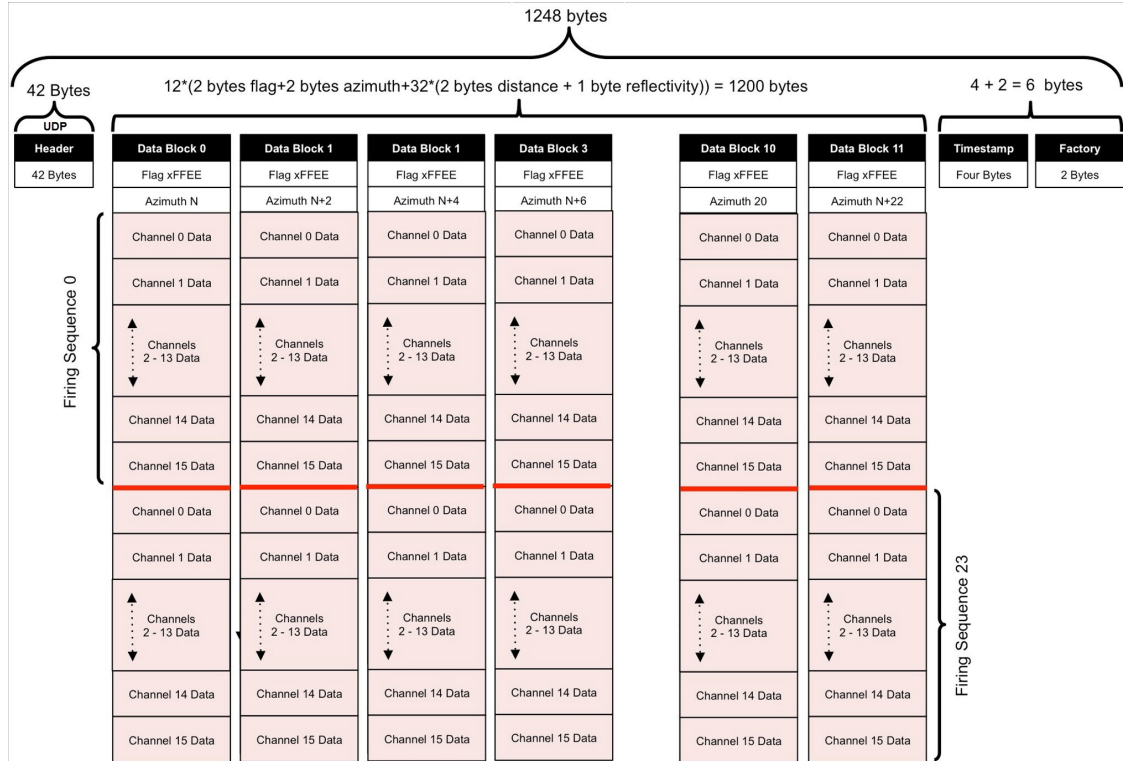


Figure 9-3 VLP-16 Dual Return Mode Data Structure

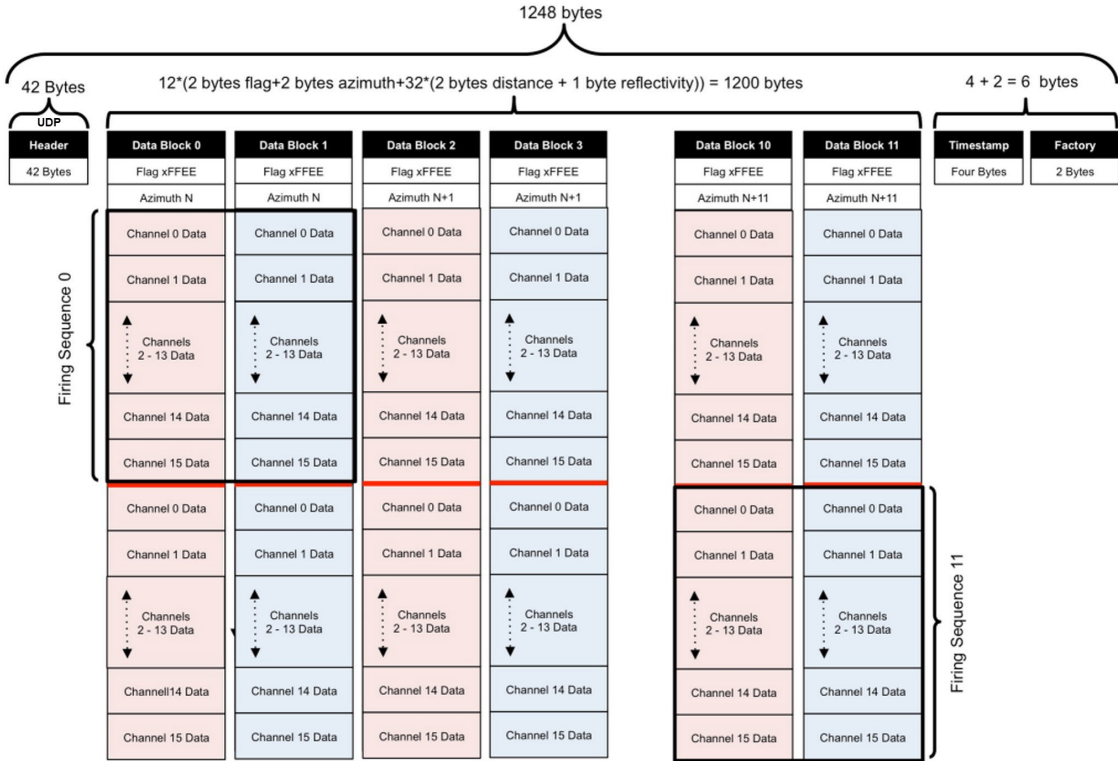

The figures below show a Wireshark trace of a single packet in Single Return Mode. *Figure 9-4 on the facing page* shows the beginning of the packet and *Figure 9-5 on the facing page* shows packet end. The location/offset of the data relative to the initial byte in the packet is shown in parentheses.

Figure 9-4 Single Return Mode Packet Data Trace (packet start)


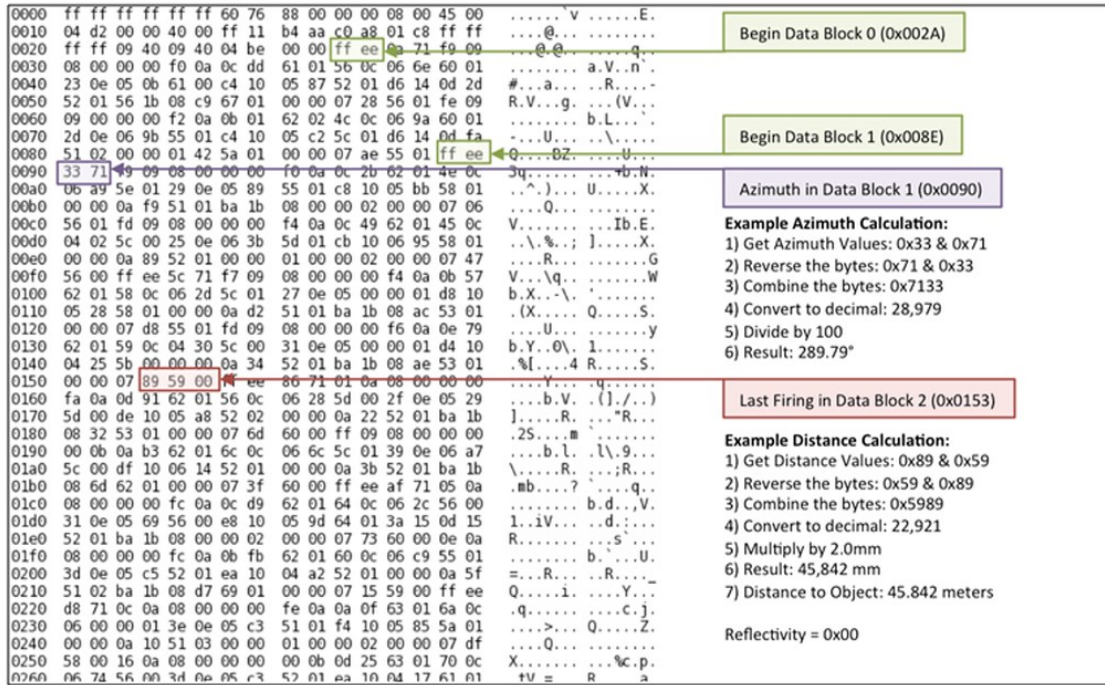


Figure 9-5 Single Return Mode Packet Data Trace (ending)

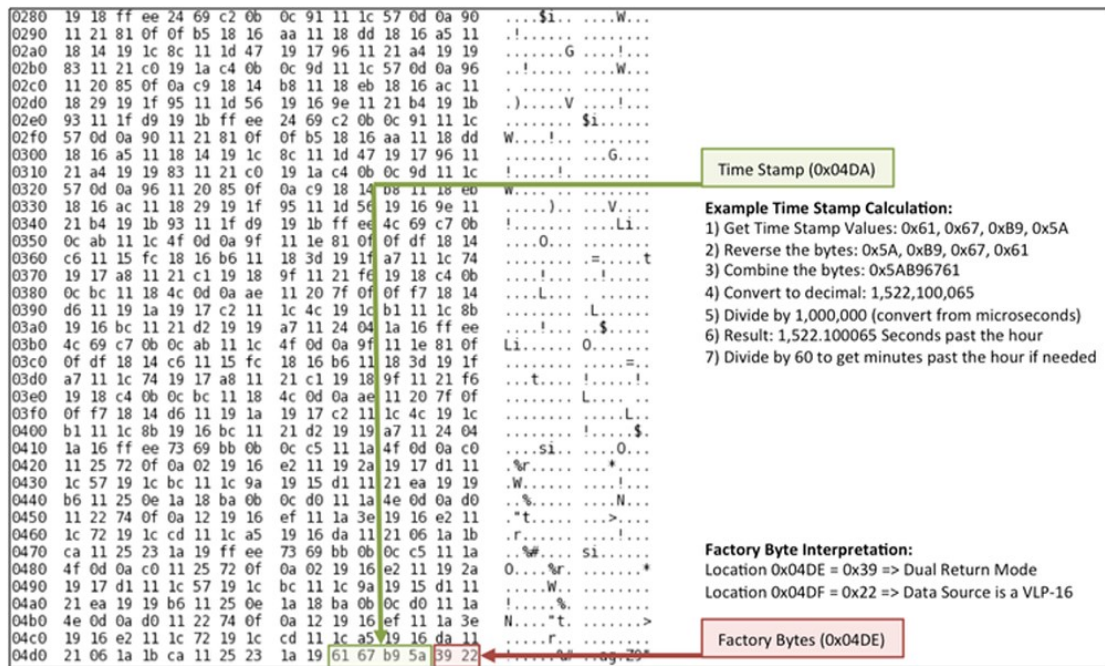

9.3.3 Position Packet Structure

The position packet provides an echo of the NMEA sentence received from an external time source as well as the Pulse Per Second status and a time stamp representing when the position packet was assembled.

The position packet is a 554 byte UDP packet received on port 8308. The structure of the position packet is given in *Table 9-3* below.

Note: You may notice the timestamps in the position packets are occasionally out of order with respect to the data packets. This is normal as the delivery of data packets is the sensor's highest priority, and a position packet may get deferred momentarily in favor of transmitting a data packet. The ratio of data packets to position packets is about 14 to 1. See *NMEA Message Formats* on page 46 for details on the GPRMC message.

Table 9-3 Position Packet Structure Field Offsets

Number of Bytes	Byte Offset from beginning of packet (hex)	Description
42	0x0000	UDP header
198	0x002A	unused (null bytes)
4	0x00F0	Timestamp (μ s)
1	0x00F4	Pulse Per Second status
3	0x00F5	unused
variable length	0x00F8	NMEA GPRMC sentence

Payload length is 512 bytes. The GPRMC sentence is terminated with CR/LF and padded to end of payload with null bytes.

Table 9-4 PPS Status Byte Values

Value	Description
0	No PPS detected
1	Synchronizing to PPS
2	PPS Locked
3	Error

A position packet is shown in the figure below. Packet offsets are on the left, raw data bytes in hex are in the center, and the ASCII interpretation is on the right.

Figure 9-6 Wireshark Position Packet Trace

0000	ff ff ff ff ff ff 60 76 88 10 2b 9b 08 00 45 00`v ..+...E.
0010	02 1c a2 0a 00 00 40 11 14 56 c0 a8 01 c9 ff ff@. .V.....
0020	ff ff 20 74 20 74 02 08 98 50 00 00 00 00 00 00	.. t t. .P.....
0030	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0040	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0050	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0060	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0070	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0080	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0090	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00a0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00b0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00c0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00d0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00e0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00f0	df f5 e8 d5 02 00 00 00 24 47 50 52 4d 43 2c 32 \$GPRMC,2
0100	30 35 39 34 38 2c 41 2c 33 37 31 36 2e 36 36 39	05948,A, 3716.669
0110	34 2c 4e 2c 31 32 31 35 33 2e 34 35 35 30 2c 57	4,N,1215 3.4550,W
0120	2c 30 30 30 2e 30 2c 30 37 38 2e 34 2c 32 36 30	,000.0,0 78.4,260
0130	37 31 35 2c 30 31 33 2e 39 2c 45 2c 44 2a 30 37	715,013. 9,E,D*07
0140	0d 0a 00 00 00 00 00 00 00 00 00 00 00 00 00
0150	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0160	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0170	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0180	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0190	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
01a0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
01b0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
01c0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
01d0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
01e0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
01f0	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0200	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0210	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0220	00 00 00 00 00 00 00 00 00 00

Legend:


- light blue: Ethernet+IP+UDP packet header (42 bytes)
- orange: Timestamp (4 bytes)
- red: PPS status (1 byte)
- green: NMEA GPRMC sentence (length varies)

9.4 Discret Point Timing Calculation

For the purpose of geo-referencing LiDAR data, it is helpful to calculate the exact moment of a particular laser firing in order to more closely associate it with time stamped data from an INS. By using the firing timing information given in *Figure 9-7 on the next page* you are able to compute the exact firing time for each data point.

All sixteen lasers are fired and recharged every 55.296 μs . The cycle time between firings is 2.304 μs . There are 16 firings ($16 \times 2.304 \mu\text{s}$) followed by a recharge period of 18.43 μs . Therefore, the timing cycle to fire and recharge all 16 lasers is given by $(16 \times 2.304 \mu\text{s}) + 18.43 \mu\text{s} = 55.296 \mu\text{s}$.

Figure 9-7 Firing Sequence Timing

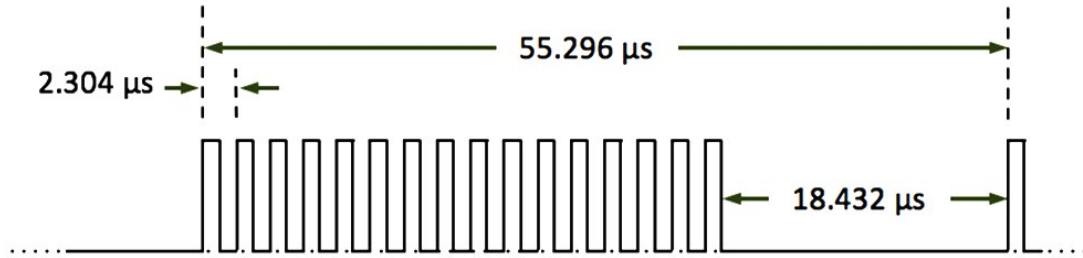

To calculate the exact time, in microseconds, of each data point, first number the points in the firing sequence as 0 to 15. This becomes the data point index (aka Laser ID) for your calculations. Next, number the firing sequences 0 to 23. This becomes your sequence index.

The timestamp in the packet indicates the time of the first data point in the packet. You'll need to calculate a time offset for each data point and then add that offset to the timestamp. See *Figure 9-9 on page 64* for specific Data Point Timing Offsets (Single Return Mode) and *Figure 9-10 on page 65* for specific Data Point Timing Offsets (Dual Return Mode).

The offset equation is given by:

$$\text{TimeOffset} = (55.296 \mu\text{s} * \text{SequenceIndex}) + (2.304 \mu\text{s} * \text{DataPointIndex})$$

To calculate the exact point time, add the TimeOffset to the timestamp.

$$\text{ExactPointTime} = \text{Timestamp} + \text{TimeOffset}$$

Example: Calculate the timing offsets of every point in a packet, in single or dual return mode. The following is working Python code:

```
def make_table(dual_mode):
    timing_offsets = [[0.0 for x in range(12)] for y in range(32)] # Init matrix
    # constants
    full_firing_cycle = 55.296 # μs
    single_firing = 2.304 # μs
    # compute timing offsets
    for x in range(12):
        for y in range(32):
            if dual_mode:
                dataBlockIndex = (x - (x % 2)) + (y / 16)
            else:
                dataBlockIndex = (x * 2) + (y / 16)
            dataPointIndex = y % 16
            timing_offsets[y][x] = \
                (full_firing_cycle * dataBlockIndex) + (single_firing * dataPointIndex)
    return timing_offsets
```

To verify the values are correct, you can print them out and compare them with values in *Figure 9-9 on page 64* and *Figure 9-10 on page 65*.

```

timing_offsets = make_table(False) # False : single return mode
print('\n'.join(['', '.join(['{:8.3F}'.format(value) for value in row])
                for row in timing_offsets]))

```

Example: Calculate the exact firing time of the last firing in a packet if the timestamp value is 45,231,878 μ s.

```

Timestamp = 45,231,878  $\mu$ s
TimeOffset = timing_offsets[15][23]
ExactPointTime = Timestamp + TimeOffset
ExactPointTime = 45,231,878 + 1,306.368  $\mu$ s
ExactPointTime = 45,233,184.368  $\mu$ s

```

Figure 9-8 below shows the timing calculation for a specific data point.

Figure 9-8 Example Data Point Timing Calculation

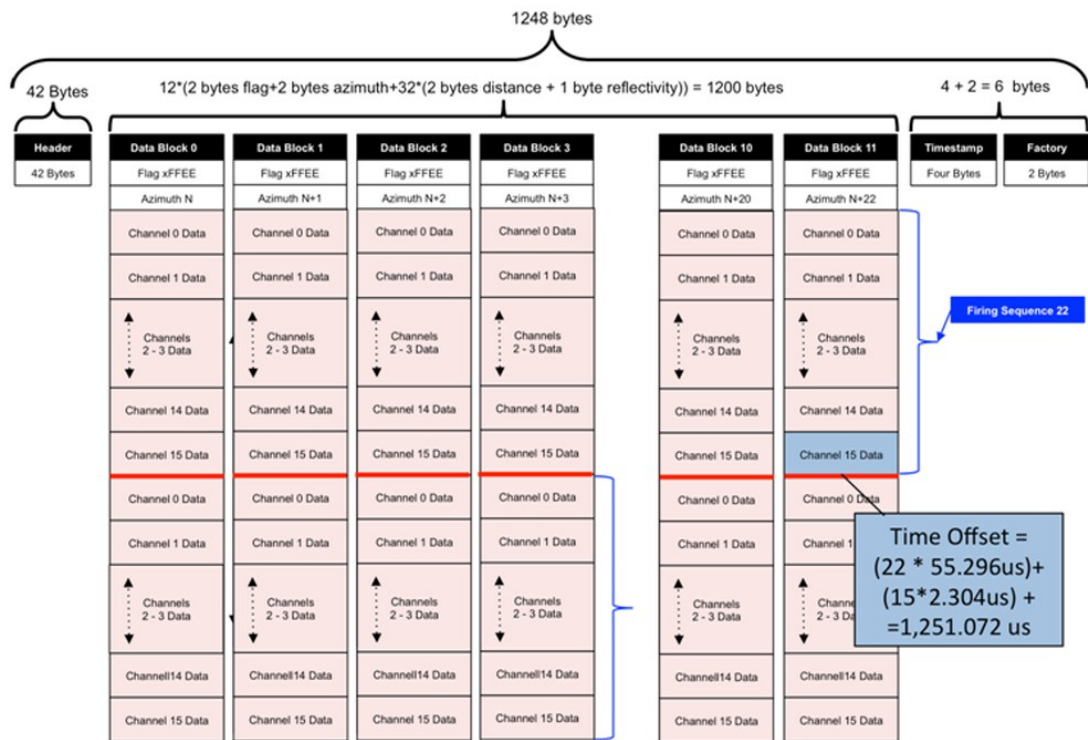


Figure 9-9 Single Return Mode Timing Offsets (in μs)

Laser Number	Data Blocks											
	1	2	3	4	5	6	7	8	9	10	11	12
	Strongest		Strongest		Strongest		Strongest		Strongest		Strongest	
	1	2	3	4	5	6	7	8	9	10	11	12
1	0.000	110.592	221.184	331.776	442.368	552.960	663.552	774.144	884.736	995.33	1,105.92	1,216.51
2	2.304	112.896	223.488	334.080	444.672	555.264	665.856	776.448	887.040	997.63	1,108.22	1,218.82
3	4.608	115.200	225.792	336.384	446.976	557.568	668.160	778.752	889.344	999.94	1,110.53	1,221.12
4	6.912	117.504	228.096	338.688	449.280	559.872	670.464	781.056	891.648	1,002.24	1,112.83	1,223.42
5	9.216	119.808	230.400	340.992	451.584	562.176	672.768	783.360	893.952	1,004.54	1,115.14	1,225.73
6	11.520	122.112	232.704	343.296	453.888	564.480	675.072	785.664	896.256	1,006.85	1,117.44	1,228.03
7	13.824	124.416	235.008	345.600	456.192	566.784	677.376	787.968	898.560	1,009.15	1,119.74	1,230.34
8	16.128	126.720	237.312	347.904	458.496	569.088	679.680	790.272	900.864	1,011.46	1,122.05	1,232.64
9	18.432	129.024	239.616	350.208	460.800	571.392	681.984	792.576	903.168	1,013.76	1,124.35	1,234.94
10	20.736	131.328	241.920	352.512	463.104	573.696	684.288	794.880	905.472	1,016.06	1,126.66	1,237.25
11	23.040	133.632	244.224	354.816	465.408	576.000	686.592	797.184	907.776	1,018.37	1,128.96	1,239.55
12	25.344	135.936	246.528	357.120	467.712	578.304	688.896	799.488	910.080	1,020.67	1,131.26	1,241.86
13	27.648	138.240	248.832	359.424	470.016	580.608	691.200	801.792	912.384	1,022.98	1,133.57	1,244.16
14	29.952	140.544	251.136	361.728	472.320	582.912	693.504	804.096	914.688	1,025.28	1,135.87	1,246.46
15	32.256	142.848	253.440	364.032	474.624	585.216	695.808	806.400	916.992	1,027.58	1,138.18	1,248.77
16	34.560	145.152	255.744	366.336	476.928	587.520	698.112	808.704	919.296	1,029.89	1,140.48	1,251.07
1	55.296	165.888	276.480	387.072	497.664	608.256	718.848	829.440	940.032	1,050.62	1,161.22	1,271.81
2	57.600	168.192	278.784	389.376	499.968	610.560	721.152	831.744	942.336	1,052.93	1,163.52	1,274.11
3	59.904	170.496	281.088	391.680	502.272	612.864	723.456	834.048	944.640	1,055.23	1,165.82	1,276.42
4	62.208	172.800	283.392	393.984	504.576	615.168	725.760	836.352	946.944	1,057.54	1,168.13	1,278.72
5	64.512	175.104	285.696	396.288	506.880	617.472	728.064	838.656	949.248	1,059.84	1,170.43	1,281.02
6	66.816	177.408	288.000	398.592	509.184	619.776	730.368	840.960	951.552	1,062.14	1,172.74	1,283.33
7	69.120	179.712	290.304	400.896	511.488	622.080	732.672	843.264	953.856	1,064.45	1,175.04	1,285.63
8	71.424	182.016	292.608	403.200	513.792	624.384	734.976	845.568	956.160	1,066.75	1,177.34	1,287.94
9	73.728	184.320	294.912	405.504	516.096	626.688	737.280	847.872	958.464	1,069.06	1,179.65	1,290.24
10	76.032	186.624	297.216	407.808	518.400	628.992	739.584	850.176	960.768	1,071.36	1,181.95	1,292.54
11	78.336	188.928	299.520	410.112	520.704	631.296	741.888	852.480	963.072	1,073.66	1,184.26	1,294.85
12	80.640	191.232	301.824	412.416	523.008	633.600	744.192	854.784	965.376	1,075.97	1,186.56	1,297.15
13	82.944	193.536	304.128	414.720	525.312	635.904	746.496	857.088	967.680	1,078.27	1,188.86	1,299.46
14	85.248	195.840	306.432	417.024	527.616	638.208	748.800	859.392	969.984	1,080.58	1,191.17	1,301.76
15	87.552	198.144	308.736	419.328	529.920	640.512	751.104	861.696	972.288	1,082.88	1,193.47	1,304.06
16	89.856	200.448	311.040	421.632	532.224	642.816	753.408	864.000	974.592	1,085.18	1,195.78	1,306.37

Figure 9-10 Dual Return Mode Timing Offsets (in μs)

Laser Number	Data Blocks											
	1		2		3		4		5		6	
	Strongest	Last	Strongest	Last	Strongest	Last	Strongest	Last	Strongest	Last	Strongest	Last
1	0.000	0.000	110.592	110.592	221.184	221.184	331.776	331.776	442.368	442.368	552.960	552.960
2	2.304	2.304	112.896	112.896	223.488	223.488	334.080	334.080	444.672	444.672	555.264	555.264
3	4.608	4.608	115.200	115.200	225.792	225.792	336.384	336.384	446.976	446.976	557.568	557.568
4	6.912	6.912	117.504	117.504	228.096	228.096	338.688	338.688	449.280	449.280	559.872	559.872
5	9.216	9.216	119.808	119.808	230.400	230.400	340.992	340.992	451.584	451.584	562.176	562.176
6	11.520	11.520	122.112	122.112	232.704	232.704	343.296	343.296	453.888	453.888	564.480	564.480
7	13.824	13.824	124.416	124.416	235.008	235.008	345.600	345.600	456.192	456.192	566.784	566.784
8	16.128	16.128	126.720	126.720	237.312	237.312	347.904	347.904	458.496	458.496	569.088	569.088
9	18.432	18.432	129.024	129.024	239.616	239.616	350.208	350.208	460.800	460.800	571.392	571.392
10	20.736	20.736	131.328	131.328	241.920	241.920	352.512	352.512	463.104	463.104	573.696	573.696
11	23.040	23.040	133.632	133.632	244.224	244.224	354.816	354.816	465.408	465.408	576.000	576.000
12	25.344	25.344	135.936	135.936	246.528	246.528	357.120	357.120	467.712	467.712	578.304	578.304
13	27.648	27.648	138.240	138.240	248.832	248.832	359.424	359.424	470.016	470.016	580.608	580.608
14	29.952	29.952	140.544	140.544	251.136	251.136	361.728	361.728	472.320	472.320	582.912	582.912
15	32.256	32.256	142.848	142.848	253.440	253.440	364.032	364.032	474.624	474.624	585.216	585.216
16	34.560	34.560	145.152	145.152	255.744	255.744	366.336	366.336	476.928	476.928	587.520	587.520
17	55.296	55.296	165.888	165.888	276.480	276.480	387.072	387.072	497.664	497.664	608.256	608.256
18	57.600	57.600	168.192	168.192	278.784	278.784	389.376	389.376	499.968	499.968	610.560	610.560
19	59.904	59.904	170.496	170.496	281.088	281.088	391.680	391.680	502.272	502.272	612.864	612.864
20	62.208	62.208	172.800	172.800	283.392	283.392	393.984	393.984	504.576	504.576	615.168	615.168
21	64.512	64.512	175.104	175.104	285.696	285.696	396.288	396.288	506.880	506.880	617.472	617.472
22	66.816	66.816	177.408	177.408	288.000	288.000	398.592	398.592	509.184	509.184	619.776	619.776
23	69.120	69.120	179.712	179.712	290.304	290.304	400.896	400.896	511.488	511.488	622.080	622.080
24	71.424	71.424	182.016	182.016	292.608	292.608	403.200	403.200	513.792	513.792	624.384	624.384
25	73.728	73.728	184.320	184.320	294.912	294.912	405.504	405.504	516.096	516.096	626.688	626.688
26	76.032	76.032	186.624	186.624	297.216	297.216	407.808	407.808	518.400	518.400	628.992	628.992
27	78.336	78.336	188.928	188.928	299.520	299.520	410.112	410.112	520.704	520.704	631.296	631.296
28	80.640	80.640	191.232	191.232	301.824	301.824	412.416	412.416	523.008	523.008	633.600	633.600
29	82.944	82.944	193.536	193.536	304.128	304.128	414.720	414.720	525.312	525.312	635.904	635.904
30	85.248	85.248	195.840	195.840	306.432	306.432	417.024	417.024	527.616	527.616	638.208	638.208
31	87.552	87.552	198.144	198.144	308.736	308.736	419.328	419.328	529.920	529.920	640.512	640.512
32	89.856	89.856	200.448	200.448	311.040	311.040	421.632	421.632	532.224	532.224	642.816	642.816

9.5 Precision Azimuth Calculation

The azimuth (α) reported by the sensor in each data block is the azimuth at the moment the first laser in a firing sequence fires.

To get better precision when geo-referencing, it's useful to precisely calculate the unique azimuth for each point by accounting for the firing timing. These precision azimuths may be calculated/interpolated using the timing offsets shown in *Figure 9-9 on the previous page* and *Figure 9-10 above*.

Consider a single data packet with 12 data blocks. If you assume the rotational speed is constant over the two 55.296 μs firing sequences in each data block, you can use the algorithm below to estimate a more precise azimuth angle for each point.

The pseudo code below illustrates the concept.

- K represents an index to a data point in the Nth data block, where its valid range is 0 to 31.
- Do this for each data block.

```
// First, adjust for an Azimuth rollover from 359.99° to 0°
If (Azimuth[datablock_n+1] < Azimuth[datablock_n])
Then
    Azimuth[datablock_n+1] := Azimuth[datablock_n+1] + 360;
Endif;

// Determine the Azimuth Gap between data blocks
AzimuthGap = Azimuth[datablock_n+1] - Azimuth[datablock_n];
```

```

// Perform the interpolation using the timing firing
K = 0;
While (K < 31)
    // Determine if you're in the first or second firing sequence of the data block
    if (K < 16)
        Then
            // Interpolate
            Precision_Azimuth[K] := Azimuth[datablock_n] + (AzimuthGap * 2.304 μs * K) /
55.296 μs);
        Else
            // Interpolate
            Precision_Azimuth[K] := Azimuth[datablock_n] + (AzimuthGap * 2.304 μs * ((K-16) +
55.296 μs)) / (2 * 55.296 μs);
        Endif

        // Adjust for any rollover
        If Precision_Azimuth[K] >= 360
            Then
                Precision_Azimuth[K] := Precision_Azimuth[K] - 360;
            Endif

        K++;
    End While

```

Note:

- If you examine the VeloView code in GITHUB, you'll notice that VeloView uses a slightly different method to calculate XYZ coordinates. VeloView operates on the azimuth as if it were read as positive in the counter-clockwise direction with the origin along the X axis.
-

9.6 Converting PCAP Files to Point Cloud Formats

Converting a packet capture (pcap) file of Velodyne LiDAR data to a LAS, LAZ, XYZ, PLY, or other point cloud file format can be a non-trivial process.

The data provided by the sensor in the pcap file is measured relative to the sensor's reference frame - the sensor's internal three dimensional coordinate system which moves with the sensor. That's markedly different from a point cloud file where the data points are referenced to a single coordinate system. That coordinate system might be an earth-frame (latitude, longitude, elevation) or another convenient reference frame.

Processing the raw LiDAR data into a point cloud is called geo-referencing. In geo-referencing, the user takes into account the sensor's position (X/Y/Z) and orientation (pitch/roll/yaw) for each measurement. Knowing these six values enables a user to perform the proper mathematical rotations and translations to reference the LiDAR data into a single coordinate system.

Two popular techniques Velodyne LiDAR customers use for geo-referencing are inertial referencing and Simultaneous Localization and Mapping (SLAM).

With inertial referencing, the location and orientation of the sensor at every moment is recorded with an Inertial Navigation System (INS). An INS combines a Global Positioning System (GPS) receiver with an Inertial Measurement Unit (IMU). Data from the both the INS and LiDAR sensor are time-synchronized to the GPS satellite's reference clock, enabling the user to match each LiDAR data point with its corresponding position and orientation from the INS. Having matched the LiDAR data with the INS data, each measurement is mathematically translated into a single coordinate system.

SLAM is a technique used by robots to analyze and navigate their environment. SLAM software automatically identifies stationary objects in the LiDAR data. The algorithm then uses the location of the stationary objects to mathematically back-out the movement of the LiDAR and translate the data into a single coordinate system.

Most Velodyne LiDAR customers develop their own geo-referencing systems. However, inertial referencing and SLAM solutions are available through third parties, and many can be found on the system integrators page at: <http://velodyneLiDAR.com/integrators.php>.

Chapter 10 • Sensor Communication

This section provides detailed information about sensor communication methods.

10.1 Web Interface	68
10.1.1 Configuration Screen	69
10.1.2 System Screen	72
10.1.3 Info Screen	73
10.1.4 Diagnostics Screen	75
10.2 Sensor Control with curl	76
10.2.1 Using curl with Velodyne LiDAR Sensors	76
10.2.2 curl Command Parameters	76
10.2.3 Command Line curl Examples	77
10.2.4 curl Example using Python	84

10.1 Web Interface

The easiest way to control a sensor's operation is through its Web Interface. It has four screens. This section provides an explanation of the feature sets and functionality on each screen.

10.1.1 Configuration Screen

Figure 10-1 VLP-16 Configuration Screen

Velodyne® LiDAR

Sensor Model: S/N: MAC: Factory MAC:

VLP-16 USER INTERFACE [Configuration](#) [System](#) [Info](#) [Diagnostics](#)

Laser: On Off
 Return Type: ▾
 Motor RPM: + -
 FOV Start: + - End: + -

PPS Qualifier

Require GPS Receiver Valid: On Off
 Require PPS Lock: On Off
 Delay: + -

GPS Qualifier

Require GPS Receiver Valid: On Off

Phase Lock On Off Offset: + -

Host (Destination)

IP Address: Data Port: Telemetry Port:

Network (Sensor)

DHCP: On Off
 IP Address: Mask: Gateway:
 MAC Address:

GPS Position: PPS:
 Motor State: RPM: Lock: Phase:
 Laser State:

Velodyne® LiDAR

Table 10-1 Configuration Screen Functionality and Features

Function	Description	Default
Laser ON/OFF	Turns the sensor's laser ON or OFF.	ON
Return Type	Strongest – Sensor provides only the strongest detected return. Last – Sensor provides only the last (temporarily) detected return. Dual – Sensor provides both the strongest and last returns. If the last is also	Strongest

Function	Description	Default
	the strongest, the sensor provides the second-strongest return. If only one return is detected, the two values will be identical.	
Motor RPM	Sets the sensor's internal spin rate. Valid values include the range from 300 to 1200 RPM, and 0. Setting it to 0 during active scanning will auto-disable the sensor's lasers, which re-enable automatically the next time RPM is set in the valid non-zero range. Set - Activates the changes.	600
FOV Start	Sets the start azimuth for a user-defined Field of View. Units: integer degrees. Set - Activates the changes.	0
FOV End	Sets the end azimuth for a user-defined Field of View. Units: integer degrees. Set - Activates the changes.	359
PPS Qualifier	Adjusts parameters that affect how PPS is used when synchronizing time stamps to UTC. Require GPS Receiver Valid: ON/OFF. Require PPS Lock: ON/OFF. Delay: Sets the qualification period (in seconds) for PPS. Set - Activates the changes.	OFF ON 5
GPS Qualifier	Controls whether GPS Receiver Valid is required when synchronizing time stamps to UTC. Require GPS Receiver Valid: ON/OFF. Set - Activates the changes.	OFF
Phase Lock	Used to synchronize the firing of two or more sensors. The offset is used to set the azimuth at which the laser fires in conjunction with the PPS signal's rising edge. Requires a valid PPS signal. Offset: Enter the offset as the desired degrees multiplied by 100. For example, if the desired offset is 270°, enter 27000. Set - Activates the changes.	OFF 0
Host (Destination)	IP Address (IPv4) to which the sensor transmits its data. By default it is set to the broadcast address. If using one or more sensors in a network it must be set to a non-broadcast IP address to avoid cross-loading. Data Port – Port number for laser data packets. Telemetry Port – Port number for position (telemetry) packets. Set – Activates changes.	255.255.255.255 2368 8308
Network (Sensor)	DHCP – When ON, the sensor obtains its IP address from a DHCP server on its local network. When set to OFF, it uses the IP Address, Mask, and Gateway the user configures. IPv4 Address – Sensor IP address as specified by the user. Mask – Sensor subnet mask as specified by the user. Gateway – Sensor gateway as specified by the user. MAC Address - Sensor MAC address override. Set – Activates changes.	OFF 192.168.1.201 255.255.255.0 192.168.1.1

Function	Description	Default
	<p>Note: Take care when turning DHCP ON. Before doing so, ensure a DHCP server on the network is available to provide the sensor with an IP address. If you turn DHCP ON and lose contact with the sensor, follow the <i>Turned DHCP On, Lost Contact With Sensor on page 88</i> procedure to get it back.</p>	
Save Configuration	Saves all current settings to flash memory. Whenever the sensor powers up or is reset, it is restored to these saved settings. Only the most recent save is kept.	
Download Snapshot	Clicking this button generates an ASCII text file (name format: <SerialNumber>.hdl) for downloading. It contains a JSON object capturing the sensor's state at that moment. The file can be sent to Velodyne <i>Technical Support on page 90</i> for analysis and to obtain troubleshooting advice.	
GPS Position	Displays the last received GPS latitude and longitude.	
PPS	Displays the current state of the PPS signal if provided from a GPS. Absent, Synchronizing, Locked, and Error are the valid states.	
Motor State	Indicates if the sensor's internal motor is spinning: ON/OFF. RPM – The sensor's current RPM. Lock – Indicates the phase lock feature state: ON/OFF. Phase – Indicates the current phase offset. Only relevant when the phase lock feature is active. This value is presented in hundredths of a degree.	
Laser State	Indicates the current laser array firing status: ON/DISABLED.	

See *Time Synchronization on page 123* for additional information on the PPS and GPS Qualifier functions.

10.1.1.1 MAC Address

The ability to change the sensor's MAC Address was introduced with VLP-16 firmware release 3.0.34.0.

It may be advantageous to do this for asset management in multi-sensor situations where the MAC address is the closest thing to a hard sensor ID, or as an anti-tracking measure. Bear in mind, however, that multiple sensors with the same MAC address running on the same network will likely produce undesirable results.

Note: When changing the sensor's MAC Address, the first octet must not be set to an odd value. 00 is ok. 60 is ok. ff is not ok.

As defined by IEEE 802 Standards, the least significant bit of the first octet of a MAC address identifies it as a multicast address. A sensor bearing a multicast MAC address may cause undesirable network issues.

By extension, never set a MAC Address to the broadcast address (aka. all bits on) or any other group address.

10.1.1.2 Correctly reset MAC Address to Factory MAC Address

If you have changed the sensor's MAC Address to something other than the Factory MAC Address and wish to reset it back, follow the procedure below.

1. On the sensor's Configuration Screen, enter 00-00-00-00-00-00 in the MAC Address field. The '-' characters must be present and the six octet values must be expressed as two hexadecimal digits each, all zeroes.
2. Click the **Save Configuration** button.
3. Click **System** to view the System Screen.
4. Click the **Reset System** button.

Once the sensor is done resetting, you may refresh the page and go back to the Configuration Screen. The MAC Address should match the Factory MAC Address.

10.1.2 System Screen

Figure 10-2 VLP-16 System Screen

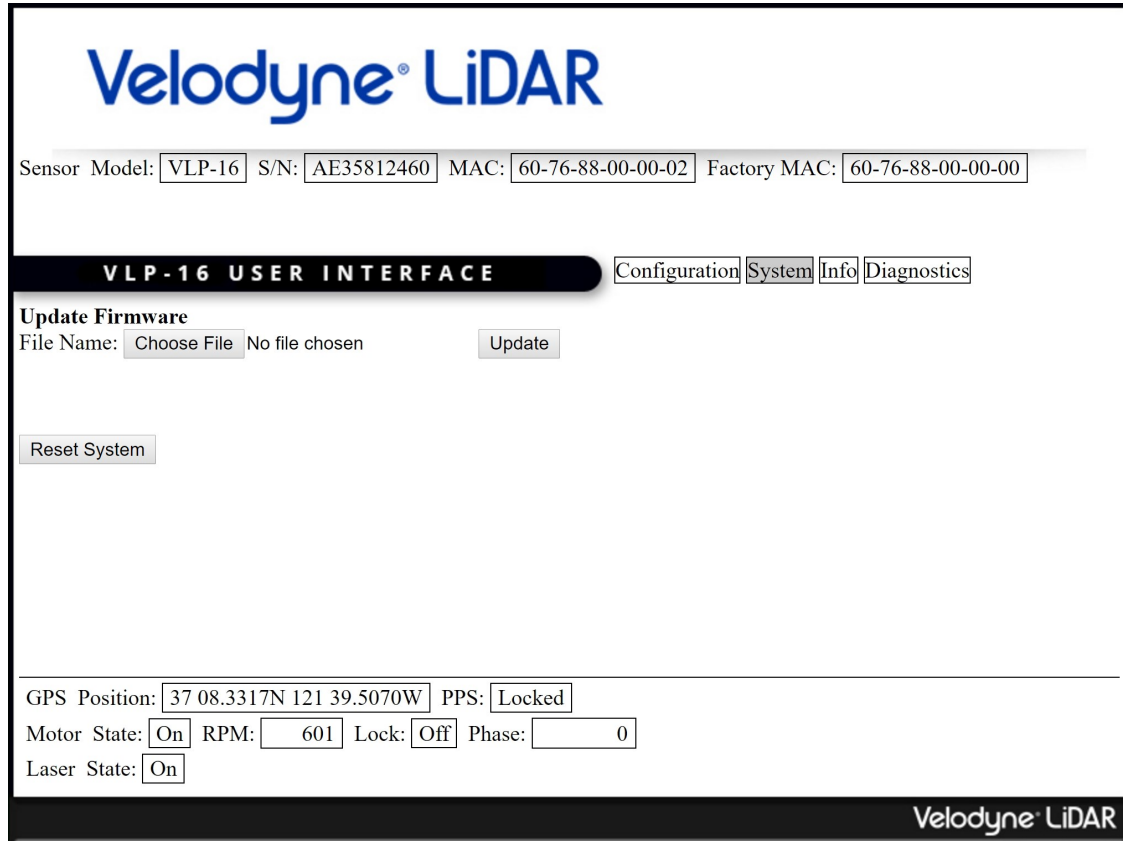


Table 10-2 System Screen Functionality and Features

Function	Description
Update Firmware	Choose File – Enables user to select a new firmware image file. Update – Initiates the firmware update process.
Reset System	Used to reset the system after a firmware update.
GPS Position	See description in <i>Table 10-1 on page 69</i> .

Function	Description
PPS	See description in <i>Table 10-1 on page 69</i> .
Motor State	See description in <i>Table 10-1 on page 69</i> .
Laser State	See description in <i>Table 10-1 on page 69</i> .

10.1.3 Info Screen

Figure 10-3 VLP-16 Info Screen

Velodyne® LiDAR

Sensor Model: S/N: MAC: Factory MAC:

VLP-16 USER INTERFACE

FPGA

Board	Mode	Type	HW Version	SOPC SYSID	SW Version	Build
Top	Application Watchdog:Enabled	1	3.0.37.0	hdltop(10)	3.0.37.0	release/3.0.37#1
Bottom	Application Watchdog:Enabled	2	3.0.37.0	hdlbot(03)	3.0.37.0	release/3.0.37#1

Firmware

Image	Version	SOPC SYSID
Failsafe	3.0.29.0	boot(00)
Application	3.0.37.0	hdlbot(03)

GPS Position: PPS:

Motor State: RPM: Lock: Phase:

Laser State:

Velodyne® LiDAR

Table 10-3 Info Screen Functionality and Features

Function	Description
FPGA (top board)	<p>Board – Top or Bottom board information.</p> <p>Mode – State of the Application Watchdog - Velodyne use only.</p> <p>Type – Velodyne Use Only.</p> <p>HW Version – Velodyne Use Only.</p> <p>SOPC SYSID – Velodyne Use Only.</p> <p>SW Version – Current operating firmware version.</p> <p>Build – Velodyne Use Only.</p>

Function	Description
FPGA (bottom board)	Board – Top or Bottom board information. Mode - Velodyne use only. Type – Velodyne Use Only. HW Version – Velodyne Use Only. SOPC SYSID – Velodyne Use Only. SW Version – Current operating firmware version.
Firmware Image	Image – Firmware type (Failsafe and Application).
Firmware Version	Version – Number of the stored Failsafe and Application images.
SOPC SYSID	Failsafe boot(00) – Velodyne Use Only. Application hdlbot(03) – Velodyne Use Only.
GPS Position	See description in <i>Table 10-1 on page 69</i> .
PPS	See description in <i>Table 10-1 on page 69</i> .
Motor State	See description in <i>Table 10-1 on page 69</i> .
Laser State	See description in <i>Table 10-1 on page 69</i> .

10.1.4 Diagnostics Screen

Figure 10-4 VLP-16 Diagnostics Screen

Velodyne® LiDAR

Sensor Model: S/N: MAC: Factory MAC:

VLP-16 USER INTERFACE

Top Board (Scaled)

HV	A/D TD	Temp	5v	2.5v	3.3v	5v (Raw)	1.2v
-165.1 V	0.748 V	42.48 °C	5.039 V	2.500 V	3.259 V	5.425 V	1.178 V
VHV: <input type="text" value="337"/>							

Bottom Board (Scaled)

I out	1.2v	Temp	5v	2.5v	3.3v	V in	1.25v
0.391 A	1.201 V	40.720 °C	4.985 V	2.500 V	3.287 V	11.978 V	0.000 V

GPS Position: PPS:

Motor State: RPM: Lock: Phase:

Laser State:

Velodyne® LiDAR

Table 10-4 System Screen Functionality and Features

Function	Description
Top Board (Scaled)	HV – Velodyne Use Only. A/D TD – Velodyne Use Only. Temp – Circuit board temperature. 5v – Internal voltage status. 2.5v – Internal voltage status. 3.3v – Internal voltage status. 5v (Raw) – Internal voltage status. 1.2v – Internal voltage status.
VHV	Velodyne Use Only.
Bottom Board (Scaled)	I out – The sensor's electrical current consumption. 1.2v – N/A. Temp – Circuit board temperature. 5v – Internal voltage status. 2.5v – Internal voltage status. 3.3v – Internal voltage status.

Function	Description
	V in – Internal voltage status. 1.25v – N/A.
GPS Position	See description in <i>Table 10-1 on page 69</i> .
PPS	See description in <i>Table 10-1 on page 69</i> .
Motor State	See description in <i>Table 10-1 on page 69</i> .
Laser State	See description in <i>Table 10-1 on page 69</i> .

10.2 Sensor Control with curl

In addition to the Web Interface, Velodyne LiDAR sensors provide an HTTP interface for programmatic configuration and control. One of the easiest tools to use for this purpose is curl. curl is a command line program freely available on a wide variety of operating systems. curl specializes in transferring data between devices using Internet protocols. You can learn more about curl and libcurl, the library (written in C) it uses to do all the heavy lifting, at this page: <https://ec.haxx.se/curl-does.html>. libcurl has bindings for many environments and programming languages.

The sections below show how to command and control a sensor from the command line using curl, and from a Python program using pycurl, a Python binding for libcurl.

10.2.1 Using curl with Velodyne LiDAR Sensors

Note: It is recommended to issue at most one curl command per second to the sensor.

curl takes care of the following items for you. But you should follow them when using libcurl in your software.

- Always check the response from the sensor, even if the function used does not return one. (curl can and will respond with status/error messages.)
- Always close the socket connection to the sensor when finished.

10.2.2 curl Command Parameters

To obtain JSON-formatted sensor status, invoke curl with the following URLs:

- <http://192.168.1.201/cgi/status.json> - Returns the current operational state and parameters of the sensor.
- <http://192.168.1.201/cgi/diag.json> - Returns diagnostic information from the sensor.
- <http://192.168.1.201/cgi/snapshot.hdl> - Returns current sensor configuration and status data.

The following sensor parameters can be changed by sending a urlencoded tagged key and data pair to <http://192.168.1.201/cgi/setting>:

1. rpm=[integer]
2. returns=[Strongest][Last][Dual]

Set Field of View by sending a urlencoded key and data pair to <http://192.168.1.201/cgi/setting/fov>:

1. [start][end]=[integer]

Set Sensor Address, Destination Port, or Telemetry Port by sending a urlencoded key and data pair to <http://192.168.1.201/cgi/setting/host>:

1. addr=255.255.255.255
2. dport=2368
3. tport=8309

Network Settings can be set by providing the urlencoded key and data pair to `http://192.168.1.201/cgi/setting/net:`

1. addr=192.168.1.200
2. mask=255.255.255.0
3. gateway=192.168.1.2
4. dhcp=[on|off]

Special Commands to Save settings to NVRAM and Reset the sensor:

1. `http://192.168.1.201/cgi/save`
 - a. submit
2. `http://192.168.1.201/cgi/reset`
 - a. reset_system

10.2.3 Command Line curl Examples

10.2.3.1 Get Diagnostic Data

Returns a JSON-formatted string containing values as seen on the Diagnostics page of the sensor's Web Interface.

Command:

```
curl http://192.168.1.201/cgi/diag.json
```

Example Response:

```
{
  "volt_temp":{
    "top":{
      "hv":2917,
      "lm20_temp":1105,
      "pwr_5v":2075,
      "pwr_2_5v":2047,
      "pwr_3_3v":2693,
      "pwr_5v_raw":2263,
      "pwr_vccint":977
    },
    "bot":{
      "i_out":2086,
      "pwr_1_2v":992,
      "lm20_temp":1231,
      "pwr_5v":2046,
      "pwr_2_5v":2046,
      "pwr_3_3v":2692,
      "pwr_v_in":910,
      "pwr_1_25v":1
    }
  },
}
```

10.2.3.2 Conversion Formulas

Equation 10-1 Standard Voltage Conversion

$$\text{volts (V)} = \frac{\text{raw value} \times 5.0}{4096}$$

Equation 10-2 Standard Current Conversion

$$\text{amps (A)} = 10.0 \times \left(\frac{\text{raw value} \times 5.0}{4096} - 2.5 \right)$$

Equation 10-3 Standard Temperature Conversion

$$\text{temp (}^\circ\text{C)} = -1481.96 + \sqrt{2.1962 \times 10^6 + \frac{\left(1.8639 - \left(\frac{\text{raw value} \times 5.0}{4096}\right)\right)}{3.88 \times 10^{-6}}}$$

10.2.3.3 Interpret Diagnostic Data

Use the formulas above to convert raw diagnostic data fields below to usable values. Some fields are scaled by additional factors.

10.2.3.3.1 top:hv

The HV field comes from the sensor's top board. It represents the high voltage bias to the APD (Avalanche photodiode). Its operating range is -150.0 V to -132.0 V.

To convert the raw value, use *Equation 10-1* above then scale the result by subtracting 5.0 and multiplying the result by 101.0.

Example:

hv = **2917** (raw value)

$(2917 \times 5.0) / 4096 = 3.561$

$101.0 \times (3.561 - 5.0) = -145.34 \text{ V}$

10.2.3.3.2 top:lm20_temp

This field indicates the temperature of the top board. Its operating range is -25.0° C to 94.0° C.

To convert the raw value, use *Equation 10-3 on the previous page*.

Example:

$$\begin{aligned} \text{lm20_temp} &= \mathbf{1105} \text{ (raw value)} \\ (1105 * 5.0) / 4096 &= 1.3489 \\ -1481.96 + \text{SQRT}(2.1962\text{E}6 + ((1.8639 - 1.3489) / 3.88\text{E}-6)) &= \mathbf{44.126^\circ \text{C}} \end{aligned}$$

10.2.3.3.3 top:pwr_5v

This is the top board's 5.0 V rail. Its operating range is 4.8 V to 5.2 V.

To convert the raw value, use *Equation 10-1 on the previous page* then scale the result by multiplying it by 2.0.

Example:

$$\begin{aligned} \text{pwr_5v} &= \mathbf{2075} \text{ (raw value)} \\ (2075 * 5.0) / 4096 &= 2.533 \\ 2.533 * 2.0 &= \mathbf{5.066 \text{ V}} \end{aligned}$$

10.2.3.3.4 top:pwr_2_5v

This is the top board's 2.5 V rail. Its operating range is 2.3 V to 2.7 V.

To convert the raw value, use *Equation 10-1 on the previous page*.

Example:

$$\begin{aligned} \text{pwr_2_5v} &= \mathbf{2047} \text{ (raw value)} \\ (2047 * 5.0) / 4096 &= \mathbf{2.499 \text{ V}} \end{aligned}$$

10.2.3.3.5 top:pwr_3_3v

This is the top board's 3.3 V rail. Its operating range is 3.1 V to 3.5 V.

To convert the raw value, use *Equation 10-1 on the previous page*.

Example:

$$\begin{aligned} \text{pwr_3_3v} &= \mathbf{2693} \text{ (raw value)} \\ (2693 * 5.0) / 4096 &= \mathbf{3.287 \text{ V}} \end{aligned}$$

10.2.3.3.6 top:pwr_5v_raw

This is the top board's unregulated 5.0 V rail. Its operating range is 2.3 V to 2.7 V.

To convert the raw value, use *Equation 10-1 on the previous page* then scale the result by multiplying it by 2.0.

Example:

$\text{pwr_5v_raw} = 2263$ (raw value)
 $(2263 * 5.0) / 4096 = 2.762$
 $2.762 * 2.0 = 5.525 \text{ V}$

10.2.3.3.7 top:pwr_vccint

This is the top board's 1.2 V rail. Its operating range is 1.0 V to 1.4 V.

To convert the raw value, use *Equation 10-1 on page 78*.

Example:

$\text{pwr_vccint} = 977$ (raw value)
 $(977 * 5.0) / 4096 = 1.193 \text{ V}$

10.2.3.3.8 bot:i_out

This is the sensor's input power line. Its operating range is 0.3 A to 1.0 A. (It spikes whenever the motor spins up.)

To convert the raw value, use *Equation 10-2 on page 78*.

Example:

$i_out = 2086$ (raw value)
 $(2086 * 5.0) / 4096 = 2.546$
 $10.0 * (2.546 - 2.5) = 0.464 \text{ A}$

10.2.3.3.9 bot:lm20_temp

This field indicates the temperature of the bottom board. Its operating range is -25.0° C to 94.0° C.

To convert the raw value, use *Equation 10-3 on page 78*.

Example:

$\text{lm20_temp} = 1231$ (raw value)
 $(1105 * 5.0) / 4096 = 1.503$
 $-1481.96 + \text{SQRT}(2.1962\text{E}6 + ((1.8639 - 1.503) / 3.88\text{E}-6)) = 31.082^\circ \text{ C}$

10.2.3.3.10 bot:pwr_1_2v

This is the bottom board's 1.2 V rail. Its operating range is 1.0 V to 1.4 V.

To convert the raw value, use *Equation 10-1 on page 78*.

Example:

$$\begin{aligned} \text{pwr_1_2v} &= \mathbf{992} \text{ (raw value)} \\ (992 * 5.0) / 4096 &= \mathbf{1.211 \text{ V}} \end{aligned}$$

10.2.3.3.11 bot:pwr_1_25v

This is the bottom board's 1.25 V rail. Its operating range is 1.0 V to 1.4 V.

To convert the raw value, use *Equation 10-1 on page 78*.

Example:

$$\begin{aligned} \text{pwr_1_25v} &= \mathbf{1} \text{ (raw value)} \\ (1 * 5.0) / 4096 &= \mathbf{0.001 \text{ V}} \end{aligned}$$

10.2.3.3.12 bot:pwr_2_5v

This is the bottom board's 2.5 V rail. Its operating range is 2.3 V to 2.7 V.

To convert the raw value, use *Equation 10-1 on page 78*.

Example:

$$\begin{aligned} \text{pwr_2_5v} &= \mathbf{2046} \text{ (raw value)} \\ (2046 * 5.0) / 4096 &= \mathbf{2.498 \text{ V}} \end{aligned}$$

10.2.3.3.13 bot:pwr_3_3v

This is the bottom board's 3.3 V rail. Its operating range is 3.1 V to 3.5 V.

To convert the raw value, use *Equation 10-1 on page 78*.

Example:

$$\begin{aligned} \text{pwr_3_3v} &= \mathbf{2692} \text{ (raw value)} \\ (2692 * 5.0) / 4096 &= \mathbf{3.286 \text{ V}} \end{aligned}$$

10.2.3.3.14 bot:pwr_5v

This is the bottom board's 5.0 V rail. Its operating range is 4.8 V to 5.2 V.

To convert the raw value, use *Equation 10-1 on page 78* then scale the result by multiplying it by 2.0.

Example:

$$\begin{aligned} \text{pwr_5v} &= \mathbf{2046} \text{ (raw value)} \\ (2046 * 5.0) / 4096 &= 2.498 \\ 2.498 * 2.0 &= \mathbf{4.995 \text{ V}} \end{aligned}$$

10.2.3.3.15 bot:pwr_v_in

This is the voltage of the input power. Its operating range is 8.0 V to 19.0 V.

To convert the raw value, use *Equation 10-1 on page 78* then scale the result by multiplying it by 11.0.

Example:

```
pwr_v_in = 910 (raw value)
(910 * 5.0) / 4096 = 1.111
1.111 * 11.0 = 12.219 V
```

10.2.3.4 Get Snapshot

Downloads sensor snapshot data to an HDL file. This has the same effect as clicking on the **Download Snapshot** button under the Configuration tab.

Command:

```
curl http://192.168.1.201/cgi/snapshot.hdl > snapshot.hdl
```

10.2.3.5 Get Sensor Status

Returns sensor state data, such as: GPS PPS is present, GPS position, motor status, phase, and laser states.

Command:

```
curl http://192.168.1.201/cgi/status.json
```

Example Response:

```
{
  "gps": {
    "pps_state": "Absent",
    "position": ""
  },
  "motor": {
    "state": "On",
    "rpm": 600,
    "lock": "Off",
    "phase": 0
  },
  "laser": {
    "state": "On"
  }
}
```

10.2.3.6 Set Motor RPM

Sets the RPM of the motor. Valid integer values range from 300 to 1200, in increments of 60. **(If the RPM setting is not evenly divisible by 60, neither motor speed control nor phase lock functions will function properly.)** For values 1 through 299, the sensor defaults back to 300 RPM. If a value of 0 or less is entered, the sensor motor powers down and the lasers are turned off, as leaving them on with the motor stopped would be an unsafe eye state. This has the same effect as setting the value for the **Motor RPM** in the Web Interface.

Command:

```
curl--data "rpm=[integer]" http://192.168.1.201/cgi/setting
```

Example:

```
curl--data "rpm=600" http://192.168.1.201/cgi/setting
```

10.2.3.7 Set Field of View

Sets the field of view (0° to 359°). Numbers outside this range are quietly ignored. This has the same effect as setting the **FOV Start** and **FOV End** values on the Web Interface.

Command:

```
curl--data "[start][end]=[integer]" http://192.168.1.201/cgi/setting/fov
```

Examples:

```
curl--data "start=10" http://192.168.1.201/cgi/setting/fov
```

```
curl--data "end=270" http://192.168.1.201/cgi/setting/fov
```

10.2.3.8 Set Return Type (Strongest, Last, Dual)

This command sets the return type (or mode) of the sensor. Choose one: Strongest, Last, and Dual. This has the same effect as selecting the Web Interface **Return Type**.

Command:

```
curl--data "returns=[Strongest][Last][Dual]" http://192.168.1.201/cgi/setting
```

Examples:

```
curl--data "returns=Strongest" http://192.168.1.201/cgi/setting
```

```
curl--data "returns=Last" http://192.168.1.201/cgi/setting
```

```
curl--data "returns=Dual" http://192.168.1.201/cgi/setting
```

10.2.3.9 Save Configuration

Saves the configuration so that the settings are persistent across power cycles. This is equivalent to clicking on the **Save Configuration** button under the Configuration tab in the Web Interface.

Command:

```
curl--data "submit" http://192.168.1.201/cgi/save
```

10.2.3.10 Reset System

Resets the sensor. This command performs the same operation as pressing the **Reset System** button under the System tab in the Web Interface, or if you cycled power to the sensor.

Command:

```
curl--data "reset_system" http://192.168.1.201/cgi/reset
```

Example Response:

```
The system resets.
```

10.2.3.11 Network Configuration

Use the curl commands below to alter the network configuration of the sensor.

Once changed, the settings must be saved and the sensor reset for the new configuration to take effect.

10.2.3.12 Set Host (Destination) IP Address

This command sets the destination IP address where firing data and Position/Telemetry packets are sent. This has the same effect as entering a **Host IP** address on the sensor's Web Interface.

Command:

```
curl--data "addr=255.255.255.255" http://192.168.1.201/cgi/setting/host
```

10.2.3.13 Set Data Port

This command sets the sensor's data port (default: 2368). It has the same effect as setting the Web Interface's **Data Port** field to the given number.

Command:

```
curl--data "dport=2368" http://192.168.1.201/cgi/setting/host
```

10.2.3.14 Set Telemetry Port

This command sets the sensor's telemetry port (default: 8308). It has the same effect as setting the port number in the Web Interface's **Telemetry Port** field.

Command:

```
curl--data "tport=8309" http://192.168.1.201/cgi/setting/host
```

10.2.3.15 Set Network (Sensor) IP Address

This sets the IP address of the device. The default is 192.168.1.201. This has the same effect as entering an IP address in the Web Interface **Network IP** field.

Command:

```
curl--data "addr=192.168.1.200" http://192.168.1.201/cgi/setting/net
```

10.2.3.16 Set Netmask

This sets the network mask of the sensor. The default is 255.255.255.0. This has the same effect as entering a net mask in the Web Interface **Mask** field.

Command:

```
curl--data "mask=255.255.0.0" http://192.168.1.201/cgi/setting/net
```

10.2.3.17 Set Gateway

This sets the gateway address of the sensor. The default is 192.168.1.1. This has the same effect as entering a gateway address in the Web Interface **Gateway** field.

Command:

```
curl--data "gateway=192.168.1.2" http://192.168.1.201/cgi/setting/net
```

10.2.3.18 Set DHCP

This determines if the sensor is to rely on a DHCP server for its IP address.

This has the same effect as selecting the corresponding radio button for **DHCP** in the Web Interface.

Take care when turning DHCP ON. Before doing so, ensure a DHCP server on the network is available to provide the sensor with an IP address. If you turn DHCP ON and lose contact with the sensor, follow the *Turned DHCP On, Lost Contact With Sensor on page 88* procedure to get it back.

Command:

```
curl--data "dhcp=[on|off]" http://192.168.1.201/cgi/setting/net
```

10.2.4 curl Example using Python

The script below demonstrates how to do basic operations with a sensor using PycURL, a Python package built on libcurl. It works in Python 2 and 3. For more information on PycURL go to: <http://pycurl.io/docs/>.

The script expects the sensor to have its default IP address. If it's different, change Base_URL accordingly.

The sensor object contains the interface to the actual sensor. A buffer is required because PycURL does not provide storage for the network response. After each sensor request, the HTTP response code is checked for success.

The first operation is to reset the sensor. After a delay, the script changes a couple of sensor parameters. Waiting another 10 seconds (for the motor to spin up), sensor status is obtained and printed to standard out.

```
import pycurl
try:
    from io import BytesIO
except ImportError:
    from StringIO import StringIO as BytesIO
try:
    from urllib.parse import urlencode
except ImportError:
    from urllib import urlencode
import urllib2
import json
import time

def sensor_do(s, url, pf, buf):
    s.setopt(s.URL, url)
    s.setopt(s.POSTFIELDS, pf)
    s.setopt(s.WRITEDATA, buf)
    s.perform()
    rcode = s.getinfo(s.RESPONSE_CODE)
    success = rcode in range(200, 207)
    print('%s %s: %d (%s)' % (url, pf, rcode, 'OK' if success else 'ERROR'))
    return success

Base_URL = 'http://192.168.1.201/cgi/'

sensor = pycurl.Curl()
buffer = BytesIO()

rc = sensor_do(sensor, Base_URL+'reset', urlencode({'data':'reset_system'}), buffer)
if rc:
    time.sleep(10)
    rc = sensor_do(sensor, Base_URL+'setting', urlencode({'rpm':'300'}), buffer)
if rc:
    time.sleep(1)
    rc = sensor_do(sensor, Base_URL+'setting', urlencode({'laser':'on'}), buffer)
if rc:
    time.sleep(10)

response = urllib2.urlopen(Base_URL+'status.json')
if response:
    status = json.loads(response.read())
    print 'Sensor laser is %s, motor rpm is %s' % \
          (status['laser']['state'], status['motor']['rpm'])

sensor.close()
```

Typical output looks like the following:

```
http://192.168.1.201/cgi/reset data=reset_system: 204 (OK)
http://192.168.1.201/cgi/setting rpm=300: 204 (OK)
```

http://192.168.1.201/cgi/setting laser=on: 204 (OK)
Sensor laser is On, motor rpm is 301

Chapter 11 • Troubleshooting

This section provides detail on how to troubleshoot your sensor, how to request technical assistance, how to have the sensor repaired, and how to replace the fuse in the Interface Box.

11.1 Troubleshooting Process	87
11.1.1 Turned DHCP On, Lost Contact With Sensor	88
11.2 Service and Maintenance	89
11.2.1 Fuse Replacement	89
11.3 Technical Support	90
11.3.1 Purchased through a Distributor	90
11.3.2 Factory Support	90
11.3.3 Support Desk	90
11.4 Return Merchandise Authorization (RMA)	90

11.1 Troubleshooting Process

Table 11-1 Common Problems and Resolutions

Problem	Resolution
Interface Box LEDs do not light	Verify: <ul style="list-style-type: none"> • Power connection and polarity. • Proper voltage should be between 9 V and 18 V, drawing a maximum of 0.9 A during normal operation. • Fuse in the Interface Box is okay. See <i>Fuse Replacement on page 89</i> if it's blown.
Rotor doesn't spin	Verify: <ul style="list-style-type: none"> • Power connection and polarity. • Proper voltage should be between 9 V and 18 V, drawing a maximum of 0.9 A during normal operation. • Fuse in the Interface Box is okay. See <i>Fuse Replacement on page 89</i> if it's blown.
Unit spins but no data	Verify: <ul style="list-style-type: none"> • Ethernet wiring is functional. • Packet output using another application (e.g. VeloView/Wireshark). • Receiving computer's network settings. • Correct static IP address in your computer's network settings. • No security software is installed which may block Ethernet broadcasts. • Laser ON radio button is selected in Web Interface <i>Configuration Screen on page 69</i>. • Input voltage and current draw are in proper ranges.

Problem	Resolution
Can see data in Wireshark but not VeloView	<p>Wireshark sniffs packets promiscuously but VeloView does not. VeloView needs permission to receive packets from the system firewall, if active.</p> <p>Check:</p> <ul style="list-style-type: none"> • No firewall is active on receiving computer. • Sensor's destination address. • Port numbers are set to 2368 (data) and 8308 (position/telemetry).
Cannot see sensor's Web Interface	<p>Verify:</p> <ul style="list-style-type: none"> • Ethernet wiring is functional. • Packet output using another application (e.g. VeloView/Wireshark). • Receiving computer's network settings. • Correct static IP address in your computer's network settings. • No security software is installed which may block Ethernet broadcasts. <p>Action:</p> <ul style="list-style-type: none"> • Reboot computer - sometimes network settings do not take effect until the computer is rebooted.
Data dropouts	<p>This is nearly always an issue with the network and/or user computer.</p> <p>Check the following:</p> <ul style="list-style-type: none"> • Is the sensor's horizontal field of view set to less than 360°? • Is there excessive traffic and/or collisions on network? • Is a network device throttling back traffic? Devices such as wireless access points often throttle broadcast data. • Are excessive broadcast packets from another service being seen by the sensor? This can slow the sensor down. • Is the computer fast enough to keep up with the packet flow coming from the sensor? • Remove all network devices and test with a computer directly connected to the sensor.
GPS Not Synchronizing	<p>Check the following:</p> <ul style="list-style-type: none"> • Baud rate set to 9600 and serial port set to 8N1 (8 bits, no parity, 1 stop bit). • Electrical continuity of PPS and serial wiring. • Incorrect construction of NMEA sentence. • Incorrect signal levels: <ul style="list-style-type: none"> • "High" voltage must be greater than 3.0 V and less than 15.0 V. • "Low" voltage must be less than 1.2 V. • Serial line not sourcing enough current: <ul style="list-style-type: none"> • The GPS/INS unit must be able to source at least 2 mA in the "high" voltage state. • The polarity of the serial and PPS signals. • The GPS signal may be obscured by being indoors, near buildings, tree cover, etc. Bring the receiver outside, exposed to as much open sky as possible for best signal reception.

11.1.1 Turned DHCP On, Lost Contact With Sensor

When the sensor's DHCP is set to ON, the configuration saved, and the sensor is reset or power cycled, the sensor will no longer have an IP address as it expects a DHCP server to assign it one.

Because no DHCP server is present, the sensor performs Automatic Private IP Addressing (APIPA) and self-assigns a Class B IP address that looks like 169.254.x.x. Your computer's IP address will likely be very different (not on the same logical network) resulting in a failure to communicate with the sensor.

Perform the following procedure to regain communication with the sensor.

1. Isolate the sensor and your computer on the same network segment.
2. Use any of the following techniques to discover the sensor's current IP address.
 - a. Launch Wireshark with the sensor powered on and connected. Capture UDP packets on the Ethernet interface. You should see packets coming from the sensor with an IP address that looks like 169.254.x.x.
 - b. Find the IP address of the sensor using the `arp` command on your operating system.
 - On Windows, if Cygwin is installed, use the `'arp -a'` command. Cygwin can be obtained from <https://www.cygwin.com/>.
 - On Mac OS and various linuxes, use the `'arp -a'` command.
 - c. Velodyne LiDAR sensors respond to ARP. The `arp` command displays the current IP-to-physical address translation table. If desired, you can narrow it to a specific interface with the `'-N if_addr'` argument. Look for an address that matches the pattern 169.254.x.x. This will be your sensor's self-assigned address.
 - c. Many third-party software tools capable of performing IP scans and ARP sweeps for various operating systems exist. Any of them should be able to discover the sensor's IP address. However, this may be the least efficient, most time-consuming approach as 169.254.x.x is a large list to scan.
3. Once you have the address of the sensor, change the IP address of the corresponding Ethernet interface on your computer to something on the same logical network segment. For example, if the sensor is found at 169.254.134.79, you can change the computer's IP address to 169.254.134.222.
4. Now point your browser at the sensor's IP address and you should see its Web Interface. Set DHCP to OFF and check that the sensor's network settings (specifically, IP Address, Mask, and Gateway) are configured properly.
5. Press the **Save Configuration** button.
6. Either power cycle the sensor or reset it (press the **Reset System** button on the System page).
7. Set your computer's IP address and subnet mask to something compatible with the sensor's address (step 4) and communication will be restored.

11.2 Service and Maintenance

Apart from a small, replaceable 3.0 A Mini automotive fuse in the Interface Box and keeping the sensor clean (see *Cleaning the Sensor on page 131*), there are no field-serviceable components, maintenance requirements or procedures for the sensor.

For service or maintenance, see *Technical Support on the next page*.

Note: Opening the sensor or compromising the integrity of the sensor housing by modifying it (e.g. drilling holes) will void the warranty.

11.2.1 Fuse Replacement

If the LEDs in the sensor's Interface Box do not light up when power is provided, check the horizontally-mounted fuse inside. It is designed to blow if a power surge of 3.0 A or greater occurs.

Fuse Specification: **3.0 A Mini ATM Blade Fuse (32 V Max, Color: violet)**

To replace the fuse:

1. Unplug/disconnect power from the Interface Box.
2. Remove the Interface Box cover with a small Phillips screwdriver, retaining all four screws.
3. Carefully remove the fuse.
4. Replace it with an identical, fresh fuse.
5. Replace the Interface Box's cover and restore power.

11.3 Technical Support

11.3.1 Purchased through a Distributor

IMPORTANT: If you purchased the sensor through a distributor, you should pursue technical assistance through the distributor first.

11.3.2 Factory Support

Follow the steps below to obtain technical assistance from the factory.

1. On your browser go to the Contact Us page at <http://www.velodynelidar.com/contacts.php>.
2. Click **CONTACT TECHNICAL SUPPORT**.
3. Select 'for Technical Support' if it isn't already selected.
4. Fill out the rest of the form. Required fields are marked with a red asterisk. Optional fields may be left empty.
5. **IMPORTANT:** In the **Description** field, please describe the problem concisely, including any non-default sensor configuration and setup details as necessary.
6. Attachments are limited to a maximum individual file size of 20 MB. No limit is placed on the number of attachments, nor on the total size of all attachments. For very large files, please host them somewhere suitable and include a link in the Description field. Bundling files in zip files is fine.
7. Click the **Submit** button.

11.3.3 Support Desk

You may also contact our Support Desk directly at +1 (669) 275-2230. Toll charges may apply.

11.4 Return Merchandise Authorization (RMA)

If your product was damaged during initial shipping or has failed during or beyond its warranty period, a Return Merchandise Authorization (RMA) must be issued prior to shipping the product to Velodyne LiDAR for service.

The Return Merchandise Authorization (RMA) form can be downloaded from the Velodyne LiDAR Downloads page at: <http://velodynelidar.com/downloads.html>. Follow its instructions to complete the RMA process. Once filed, you may request status on the repair by contacting lidarservice@velodyne.com.

Appendix A • Sensor Specifications

Sensor specifications (including environmental and regulatory specifications) have been moved to product data sheets found on the Velodyne LiDAR web site at this address: <http://www.velodynelidar.com/downloads.html#datasheets>.

For additional information, contact Velodyne LiDAR Sales: <http://www.velodynelidar.com/contacts.php>.

Appendix B • Firmware Update

To update your sensor's firmware, follow the procedure below. If a problem occurs, follow the steps in *If An Error Occurs* on page 99.

B.1 Firmware Update Procedure	92
B.1.1 Special Procedure to Update Firmware	98
B.1.2 If An Error Occurs	99

B.1 Firmware Update Procedure

Before starting the procedure, make sure your computer can communicate with the sensor over Ethernet.

The first part of the procedure checks if the sensor needs an update. The second part (beginning with step 6) performs the update in two stages.

This procedure works best with the Chrome browser.

1. Point your browser to the Velodyne Downloads page at <http://velodynelidar.com/downloads.html>.

Figure B-1 Velodyne Downloads Page



2. Click the FIRMWARE icon (on the left) to advance to the Firmware section. Note the latest version available.
3. Open the sensor's Web Interface in your browser and click the **Info** button.
4. Check the Firmware Application Version on the **Info** page (red box in the figure below). This is the active firmware on the sensor.
5. Compare the versions. If they differ, download the newer firmware version to your computer from the Downloads page, and continue the procedure. If not, stop here.

Figure B-2 Compare Firmware Versions

Velodyne® LiDAR

Sensor Model: S/N: MAC:

VLP-16 USER INTERFACE

FPGA

Board	Mode	Type	HW Version	SOPC SYSID	SW Version
Top	Application Watchdog:Enabled	1	3.0.29.0	hdltop(10)	3.0.29.0
Bottom	Application Watchdog:Enabled	2	3.0.29.0	hdlbot(03)	3.0.29.0

Firmware

Image	Version	SOPC SYSID
Failsafe	3.0.29.0	boot(00)
Application	3.0.29.0	hdlbot(03)

GPS Position: PPS:

Motor State: RPM: Lock: Phase:

Laser State:

Velodyne® LiDAR

Note: The firmware image labeled “Failsafe” is the original image programmed into the sensor when it was manufactured. It cannot be updated.

6. When updating VLP-16 firmware specifically from 3.0.29.x to 3.0.37.x, or downgrading it from 3.0.37.x to 3.0.29.x, a special procedure must be performed instead. Stop the regular procedure here and proceed to *Special Procedure to Update Firmware* on page 98.
7. If your VLP-16’s firmware version predates 3.0.24.x, it cannot be updated in the field. Stop the regular procedure here and, instead, follow the *Return Merchandise Authorization (RMA)* on page 90 process to return the unit to the factory for firmware update.

Figure B-3 Select New Firmware Image

The screenshot displays the Velodyne LiDAR VLP-16 User Interface. At the top, the Velodyne LiDAR logo is shown. Below the logo, sensor information is displayed: Sensor Model: VLP-16, S/N: AE35812460, and MAC: 60-76-88-00-00-02. A navigation bar contains buttons for Configuration, System, Info, and Diagnostics. The main content area is titled 'VLP-16 USER INTERFACE' and features two sections: 'Update Firmware' and 'Update Calibration'. Each section has a 'Choose File' button, the text 'No file chosen', and an 'Update' button. A 'Reset System' button is located below these sections. At the bottom of the interface, system status is shown: GPS Position: 37 08.3317N 121 39.5070W, PPS: Locked, Motor State: On, RPM: 300, Lock: On, Phase: 13772, and Laser State: On. The Velodyne LiDAR logo is also present in the bottom right corner of the interface.


8. Click the **System** button.
9. Click the **Choose File** button under **Update Firmware**.
10. Using the dialog, locate the new firmware file on your computer and select it.
11. Verify that the correct file for your sensor model has been selected. It must have the '.flash' file extension.
12. Click **Update Firmware's Update** button to initiate the update process.

Figure B-4 Upload New Firmware Image

The screenshot displays the Velodyne LiDAR VLP-16 User Interface. At the top, the Velodyne LiDAR logo is shown. Below the logo, sensor information is displayed: Sensor Model: VLP-16, S/N: AE35812460, and MAC: 60-76-88-00-00-02. A navigation bar contains buttons for Configuration, System, Info, and Diagnostics. The main section is titled 'VLP-16 USER INTERFACE' and features two update options: 'Update Firmware' with a file name of 'release-3.0...update.flash' and 'Update Calibration' with 'No file chosen'. A progress bar indicates that the update is 73% complete. A 'Reset System' button is located below the progress bar. At the bottom, system status is shown: GPS Position: 37 08.3317N 121 39.5070W, PPS: Locked, Motor State: On, RPM: 300, Lock: On, Phase: 13772, and Laser State: On. The Velodyne LiDAR logo is also present in the bottom right corner.

13. As shown in the figure above, a progress bar indicating the percentage of update completion is displayed.
14. When this first stage of the update is complete, the **Firmware Update Complete** screen (below) is displayed. *But wait, there's more.* Internally, you've updated the bottom board but not the top, yet.


Figure B-5 Firmware Update Complete Page

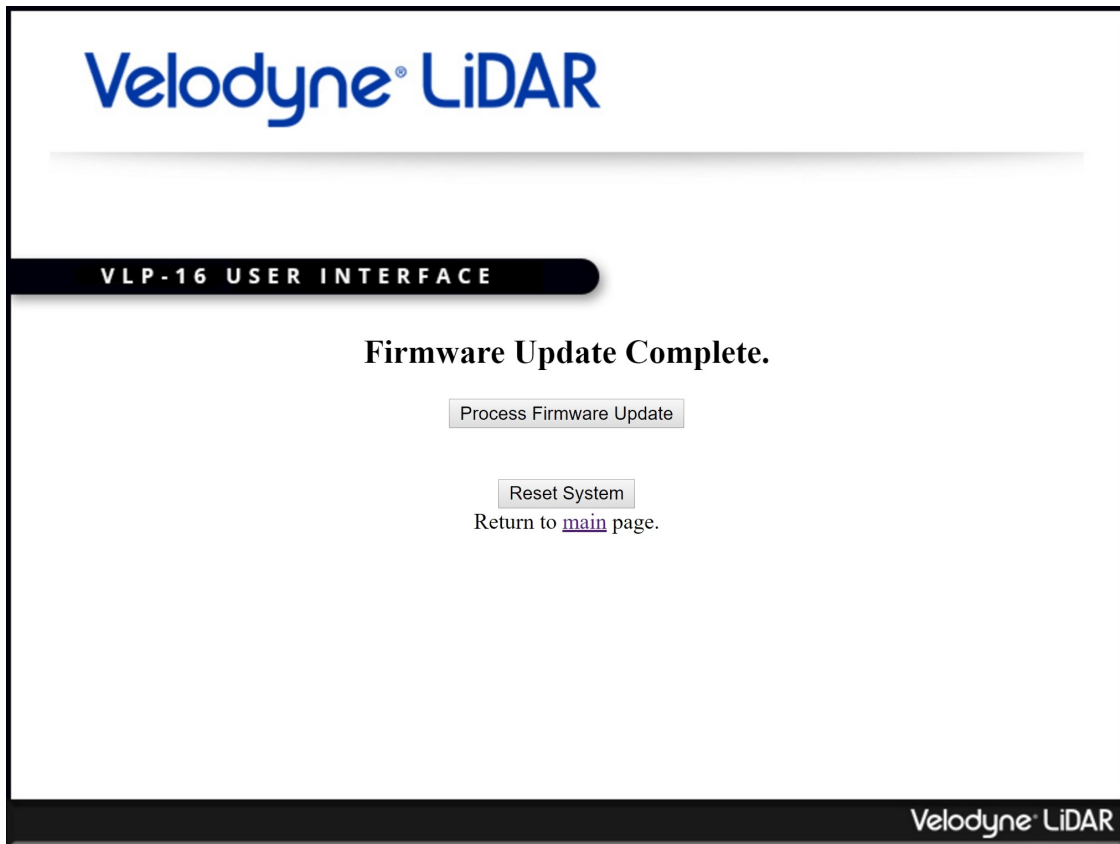

15. Now click the **Process Firmware Update** button to initiate the second stage of the procedure. The firmware image that you just uploaded is being prepared for use by the sensor.
16. A second progress bar is shown.

Note: This step should take approximately 70 seconds. If it completes in less than 10 seconds an error occurred. Instead of continuing, perform the *If An Error Occurs on page 99* procedure.

Figure B-6 Finalize Firmware Update

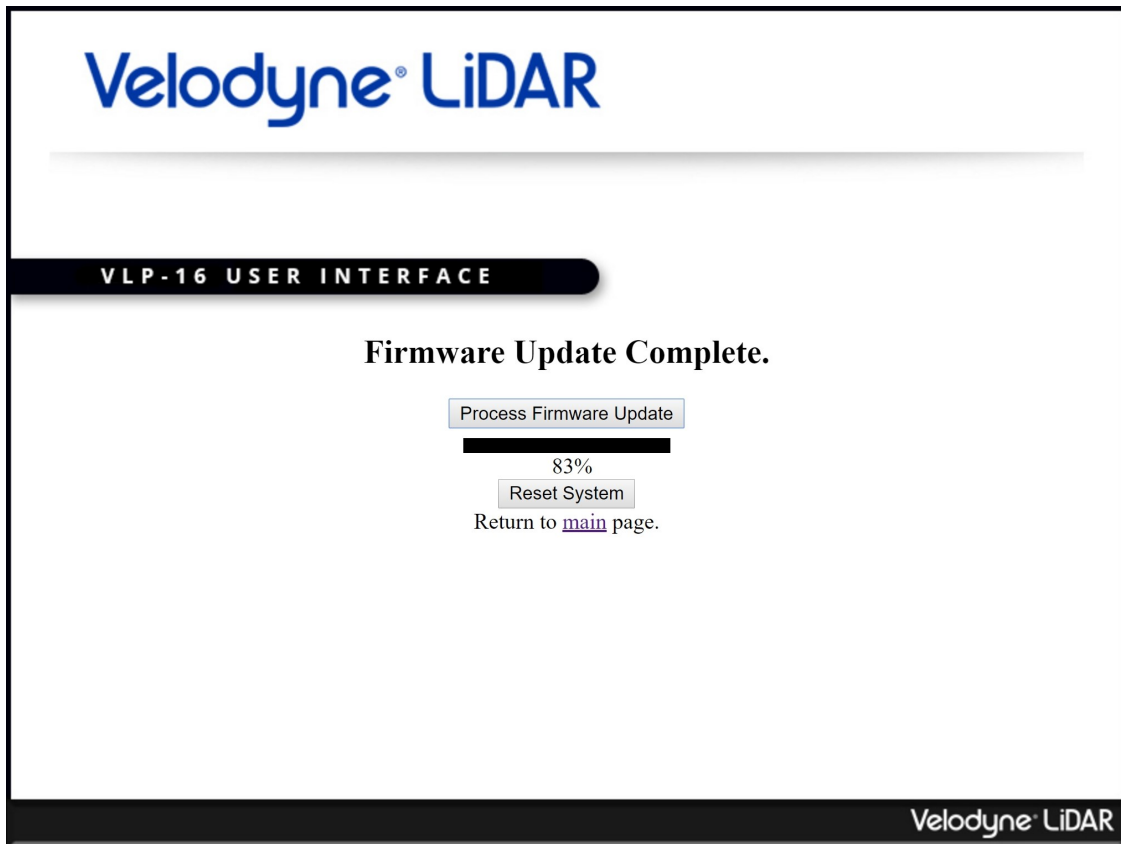

17. When processing completes, press the **Reset System** button to finalize the update. The sensor will perform a warm boot.
18. The **Configuration** screen will be shown when the sensor finishes rebooting.
19. Return to the **Info** page.

Figure B-7 Verify Firmware Versions

Velodyne® LiDAR

Sensor Model: S/N: MAC: Factory MAC:

VLP-16 USER INTERFACE

FPGA

Board	Mode	Type	HW Version	SOPC SYSID	SW Version	Build
Top	Application Watchdog:Enabled	1	3.0.37.0	hdltop(10)	3.0.37.0	release/3.0.37#1
Bottom	Application Watchdog:Enabled	2	3.0.37.0	hdlbot(03)	3.0.37.0	release/3.0.37#1

Firmware

Image	Version	SOPC SYSID
Failsafe	3.0.29.0	boot(00)
Application	3.0.37.0	hdlbot(03)

GPS Position: PPS:

Motor State: RPM: Lock: Phase:

Laser State:

Velodyne® LiDAR

- Verify that the **Firmware Application Version** (red box) matches the version of the firmware downloaded and installed. Also verify that the same version appears in the **SW Version** column for both the Top and Bottom boards (green box). If everything matches, the procedure completed successfully.

Any mismatches indicate an error occurred in the last stage of the update. (Occasionally, the screen may indicate that “Firmware Update Processing is not available in Failsafe mode.” In Failsafe mode, the lasers and motor are disabled.) Perform the If An Error Occurs on the facing page procedure below to resolve the issue.

B.1.1 Special Procedure to Update Firmware

The firmware update process requires both the top and bottom boards be flashed. A minor tweak is made to the steps normally used to update both boards. When this tweak is made, the normal procedure becomes the “Special Procedure to Update Firmware.”

- First, go to the **System** tab.
- Click on **Choose File** and specify the flash file name.
- Press **Update** to update the bottom board.
- Wait a bit.
- You will eventually see another screen entitled, “Firmware Upload Complete.”
- Do not press the **Process Firmware Update** button to flash the top board. **This is where the process deviates*

*from the normal procedure.**

7. Instead, reset the sensor, either by pressing the **Reset System** button or cycling power to the sensor.
8. The sensor boots up. At this point, you do not have to run the update process for the bottom board again. Go to the **System** tab and click on the **Update** button associated with 'Update Firmware'. Do not specify a flash file name.
9. After several seconds, a page for updating the top board's firmware appears.
10. Press the **Process Firmware Update** button to update the top board's firmware.

Note: Sometimes the update process for the top board times out and eventually fails. When this happens, reset the sensor or cycle power to it. You will see explicit instructions to cycle power to the sensor if the case warrants it.

11. Wait a bit.
12. Reset sensor for the new firmware version to take effect.
13. Return to the **Info** page and verify that the **Firmware Application Version** and **SW Versions** are as expected (*Figure B-7 on the previous page*).

Why the change?

The starting address of the NIOS code was changed in 3.0.34 (VLP-16) and 2.2.23 (HDL-32E). For example, when 3.0.34 is flashed onto the sensor, it is not loaded until the sensor is reset. As a result, the older firmware is grabbing the NIOS code at the wrong starting address of the new firmware image to push onto the top board.

B.1.2 If An Error Occurs

If an error occurs during the Firmware Update Procedure, it did not finish. Perform the steps below to complete the process.

1. Reset the sensor. Either power cycle it (remove power, wait at least 10 seconds, apply power, wait 30 seconds), or click the **Reset System** button if you're on the sensor's **Firmware Update Complete** screen or can get to the sensor's **System** page. The **Configuration** screen will be shown when the sensor finishes rebooting.
2. Go back to the sensor's **System** page (*Figure B-3 on page 94*).
3. In the **Update Firmware** section, just click the **Update** button (*Figure B-4 on page 95*). A progress bar is briefly displayed.
4. When complete, the **Firmware Update Complete** screen is displayed (*Figure B-5 on page 96*).
5. Click the **Process Firmware Update** button. A second progress bar is displayed. This step should take approximately 70 seconds (*Figure B-6 on page 97*).
6. When processing completes, press the **Reset System** button to finalize the update. The sensor will perform a warm boot. The **Configuration** screen will be shown when the sensor finishes rebooting.
7. Return to the sensor's **Info** page.
8. Verify that the **Firmware Application Version** (red box in *Figure B-2 on page 93*) matches the version of the firmware downloaded and installed. Also verify that the same version appears in the **SW Version** column for both the Top and Bottom boards (green box in *Figure B-2 on page 93*). At this point they should all match.


Appendix C • Mechanical Diagrams

This appendix provides technical drawings and diagrams of mechanical assemblies. High resolution versions may be accessed on the Velodyne LiDAR web site.

C.1 Interface Box Mechanical Drawing	101
C.2 VLP-16 and Puck LITE Mechanical Drawing	102
C.3 VLP-16 and Puck LITE Optical Drawing	103
C.4 VLP-16 and Puck LITE Optical Keep Out Zone	104
C.5 Puck Hi-Res Mechanical Drawing	105
C.6 Puck Hi-Res Optical Drawing	106
C.7 Puck Hi-Res Optical Keep Out Zone	107


C.1 Interface Box Mechanical Drawing

Figure C-1 Interface Box Mechanical Drawing 50-6001 Rev A

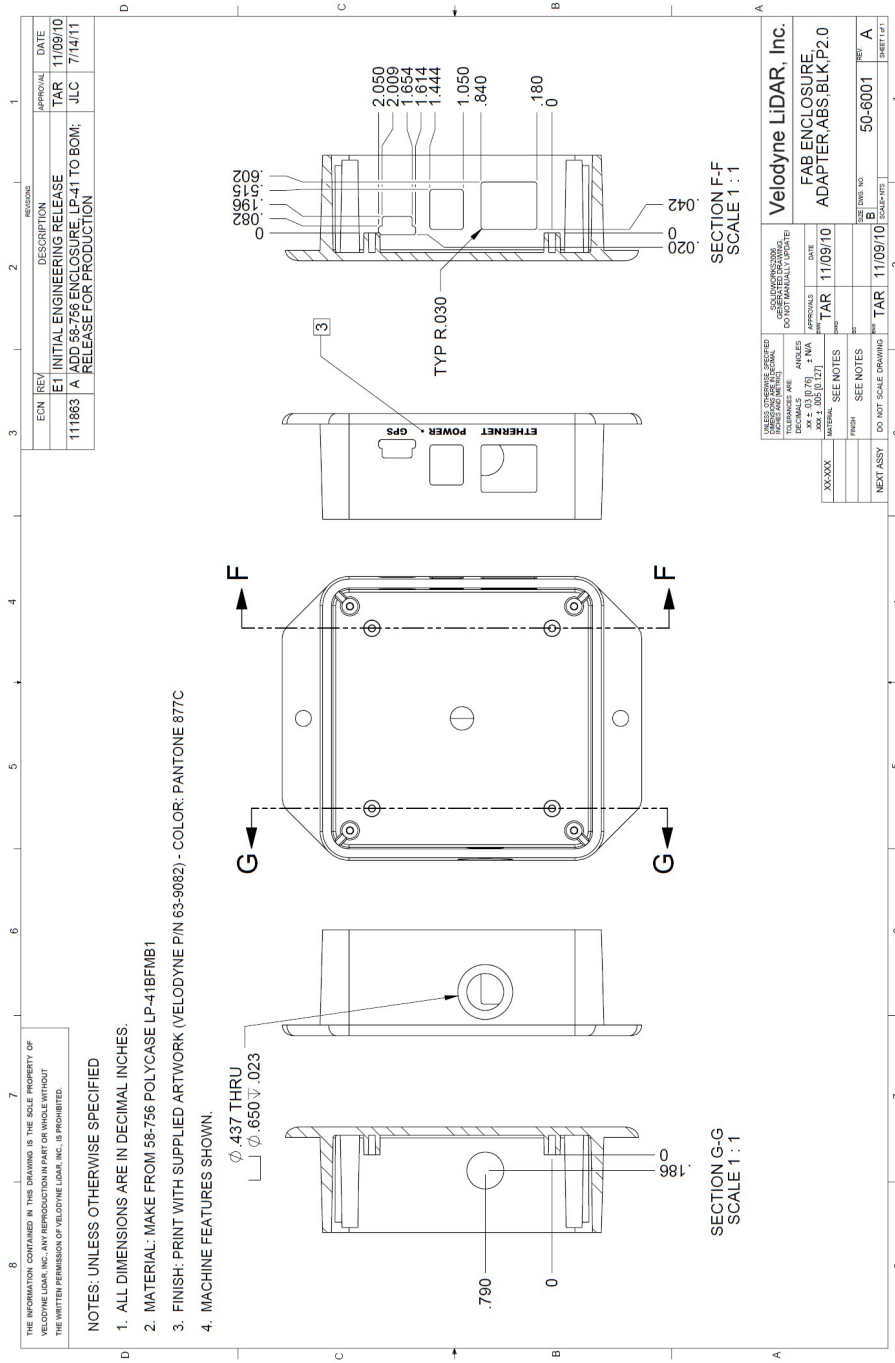


C.2 VLP-16 and Puck LITE Mechanical Drawing

Figure C-2 VLP-16 and Puck LITE Mechanical Drawing 86-0101 Rev B1

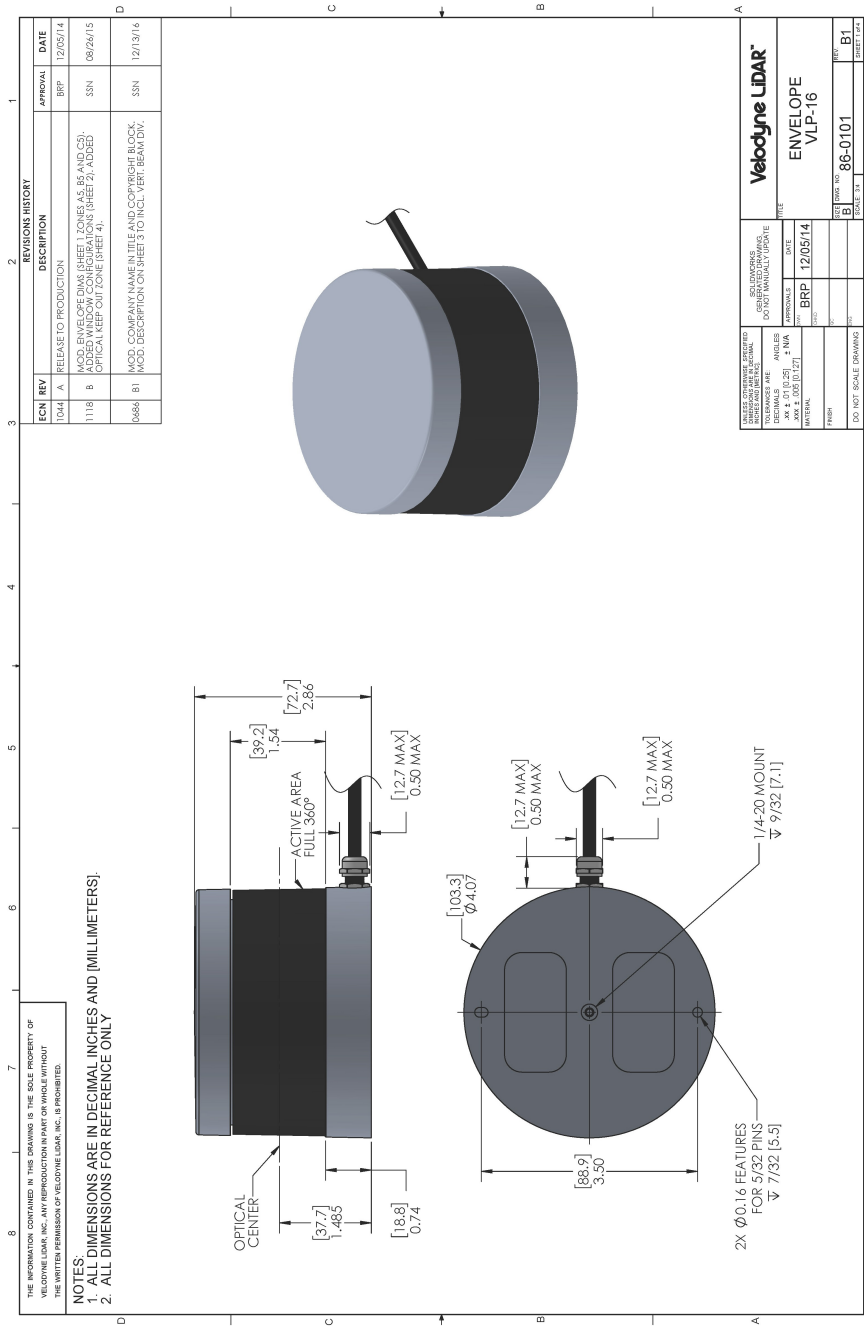


C.3 VLP-16 and Puck LITE Optical Drawing

Figure C-3 VLP-16 and Puck LITE Optical Drawing 86-0101 Rev B1

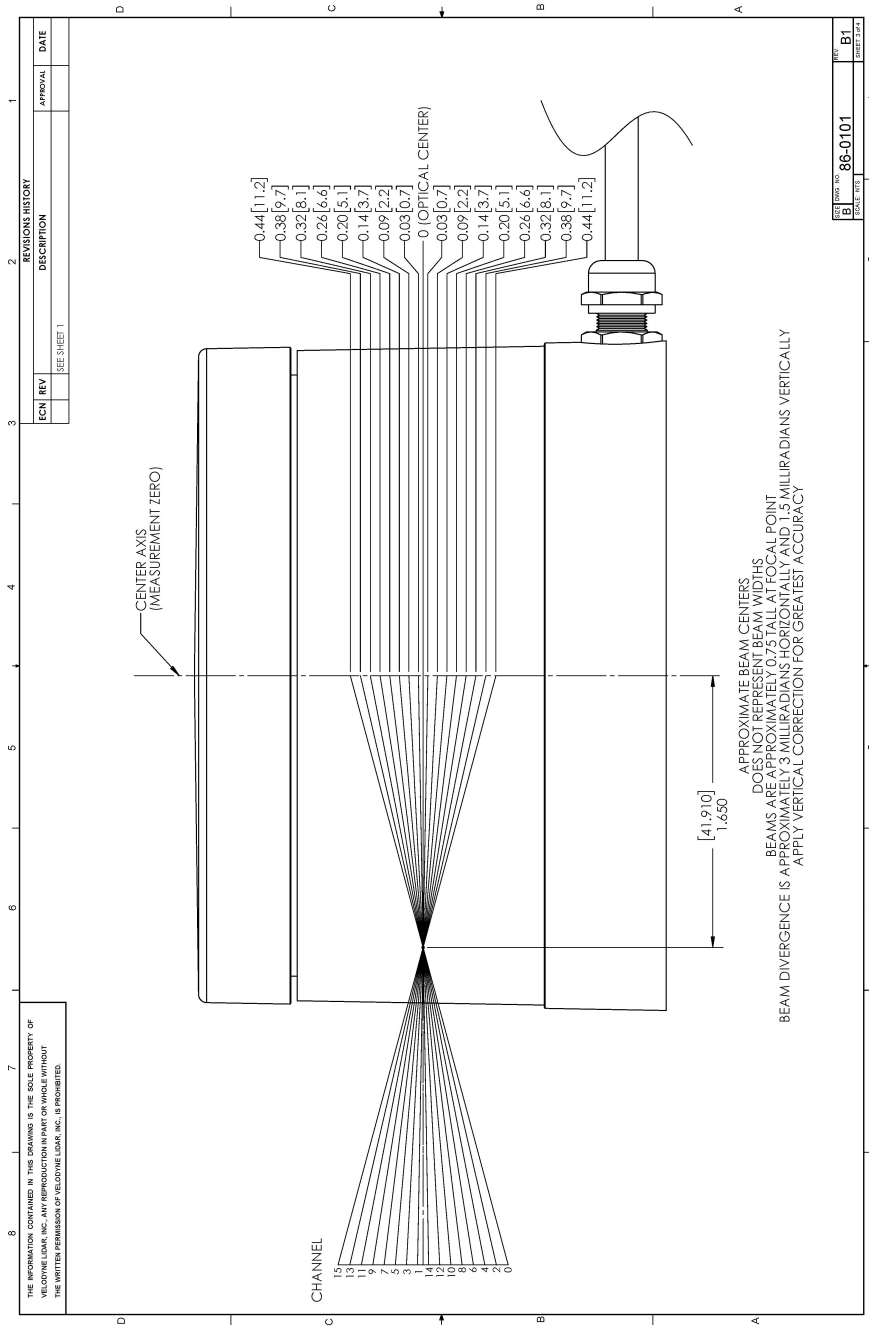


C.4 VLP-16 and Puck LITE Optical Keep Out Zone

Figure C-4 VLP-16 and Puck LITE Optical Keep Out Zone 86-0101 Rev B1

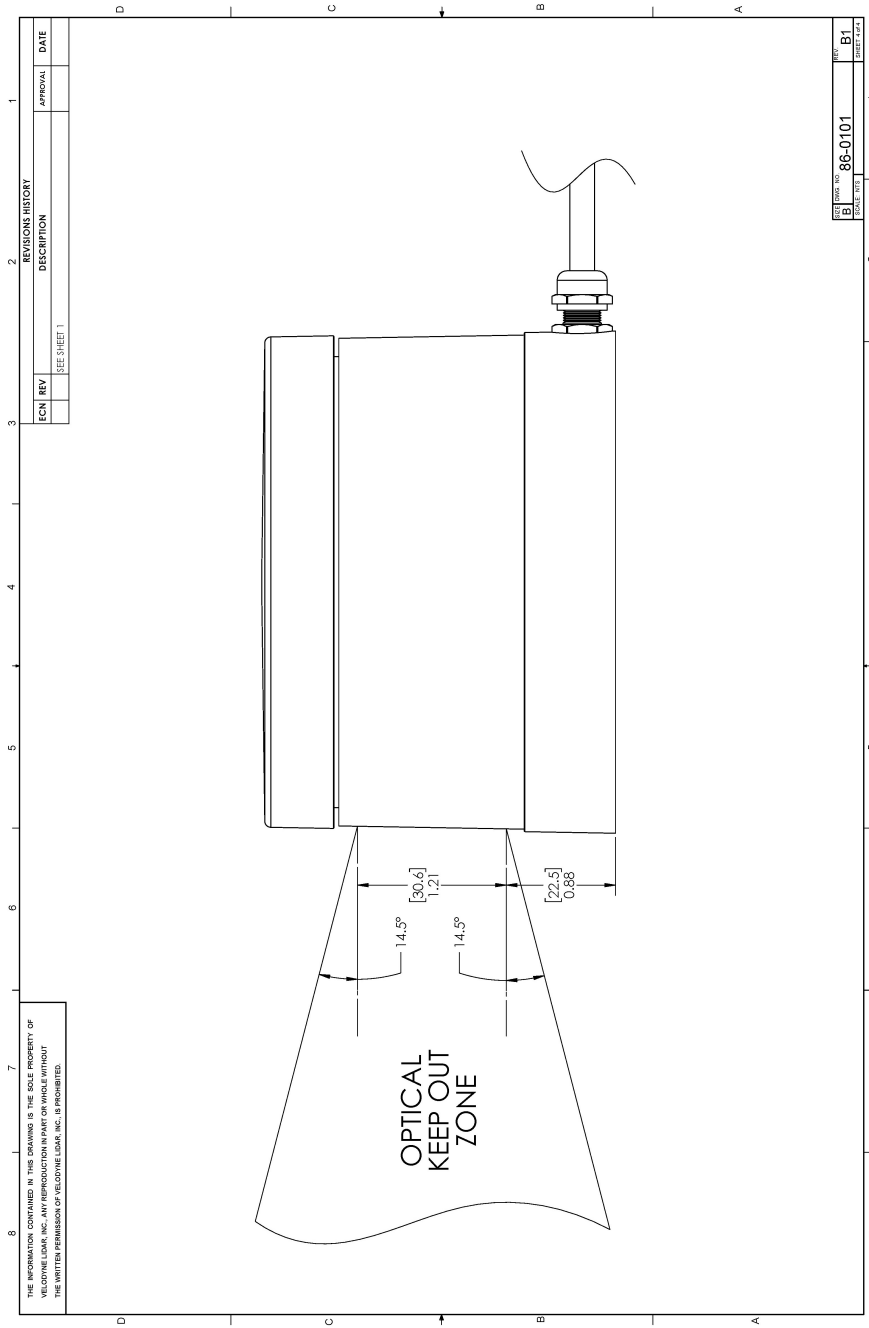


C.5 Puck Hi-Res Mechanical Drawing

Figure C-5 Puck Hi-Res Mechanical Drawing 86-0129 Rev A

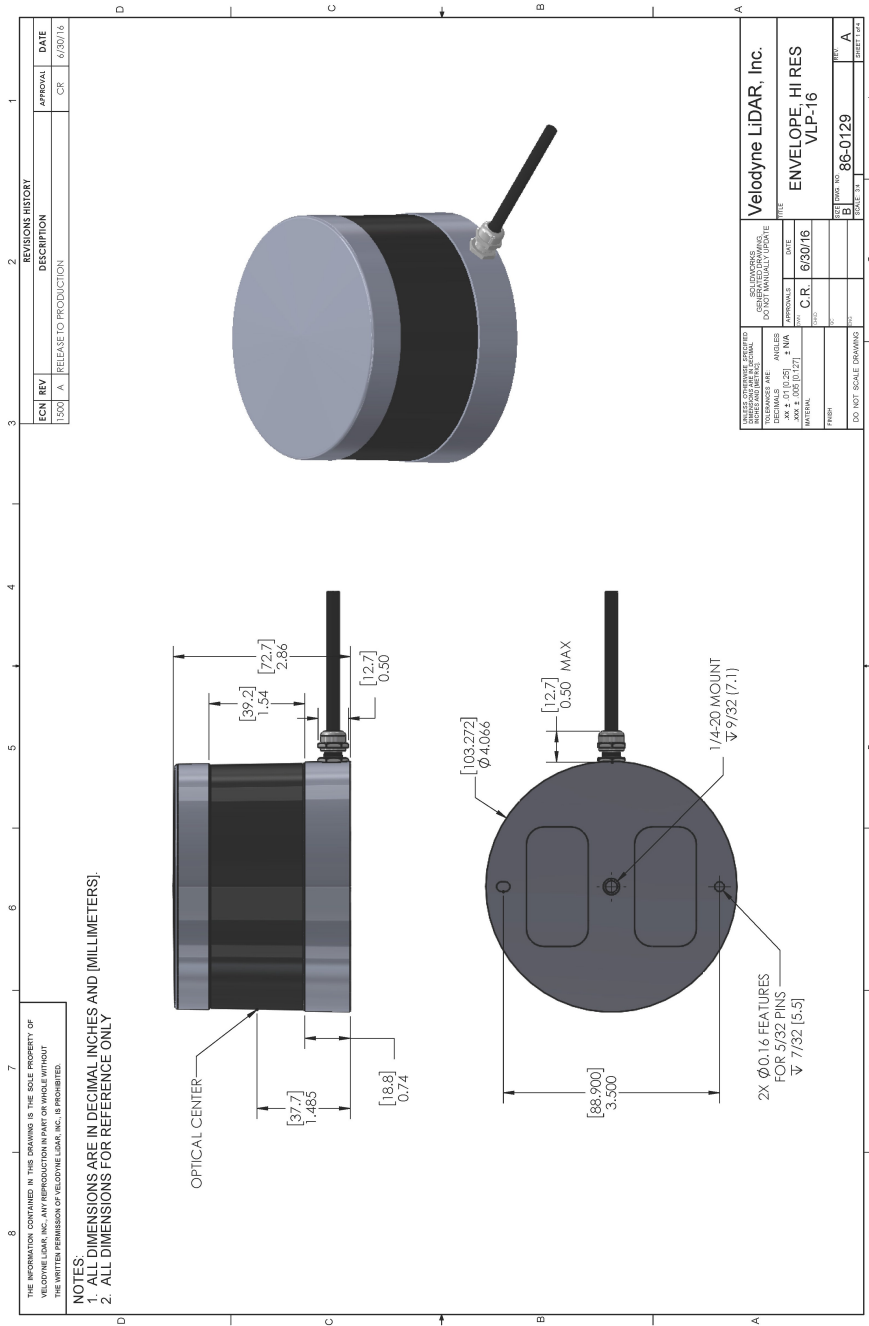


C.6 Puck Hi-Res Optical Drawing

Figure C-6 Puck Hi-Res Optical Drawing 86-0129 Rev A

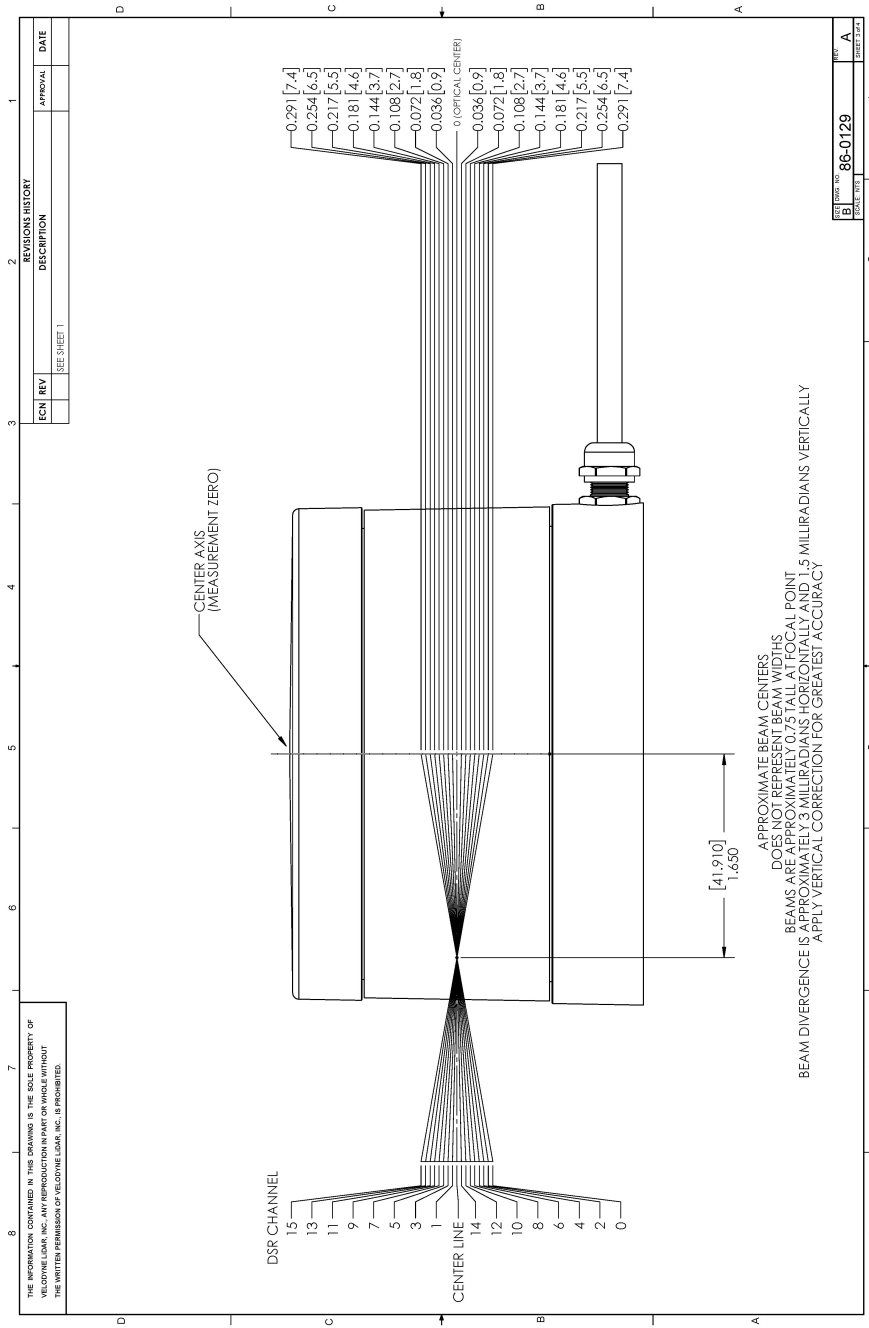

C.7 Puck Hi-Res Optical Keep Out Zone

Figure C-7 Puck Hi-Res Optical Keep Out Zone 86-0129 Rev A

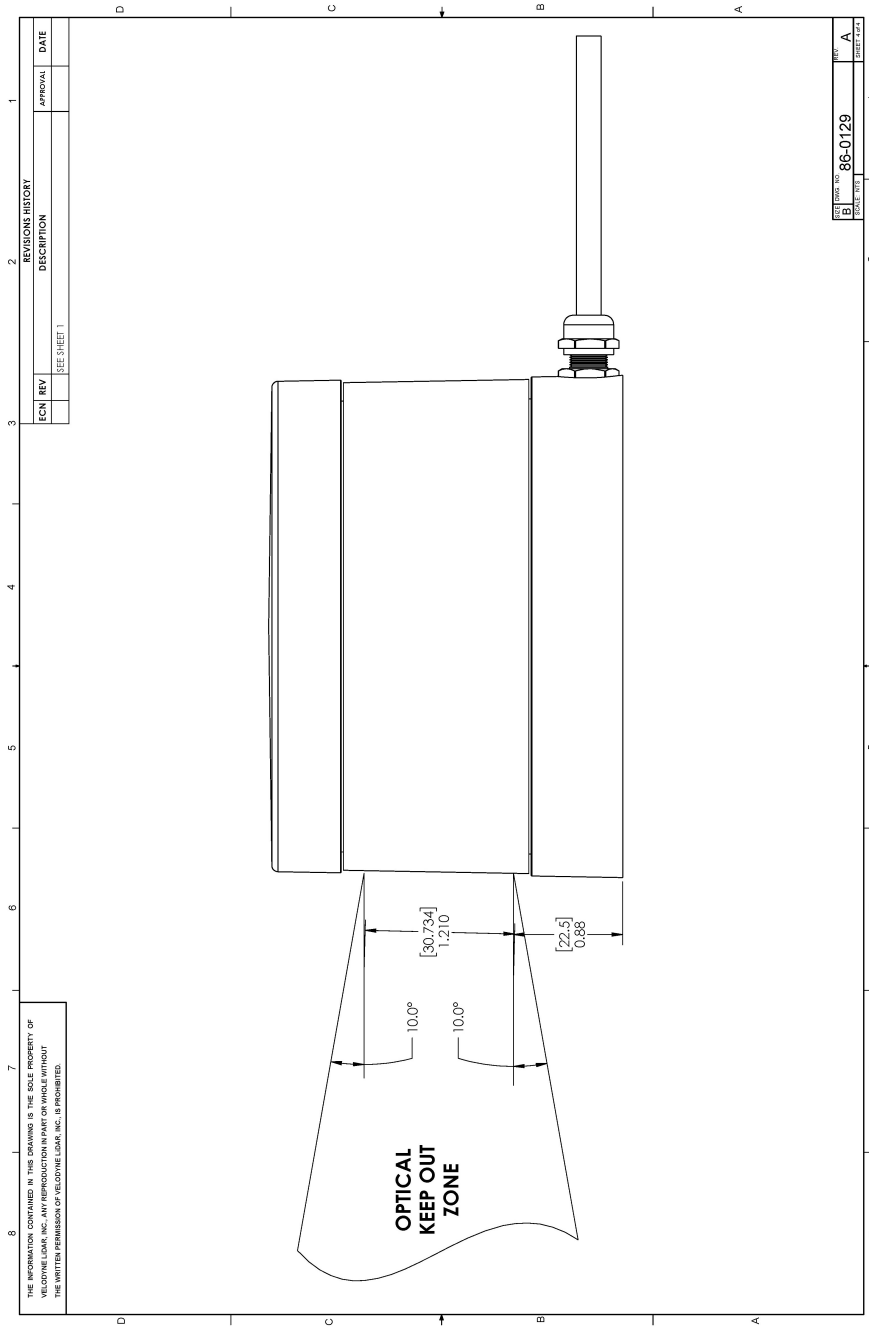


Appendix D • Wiring Diagrams

This appendix provides technical wiring and schematic drawings and diagrams. High resolution versions may be accessed on the Velodyne LiDAR web site.

D.1 Interface Box Wiring Diagram	109
D.2 Interface Box Schematic	110


D.1 Interface Box Wiring Diagram

Figure D-1 Interface Box Wiring Diagram 86-0107A

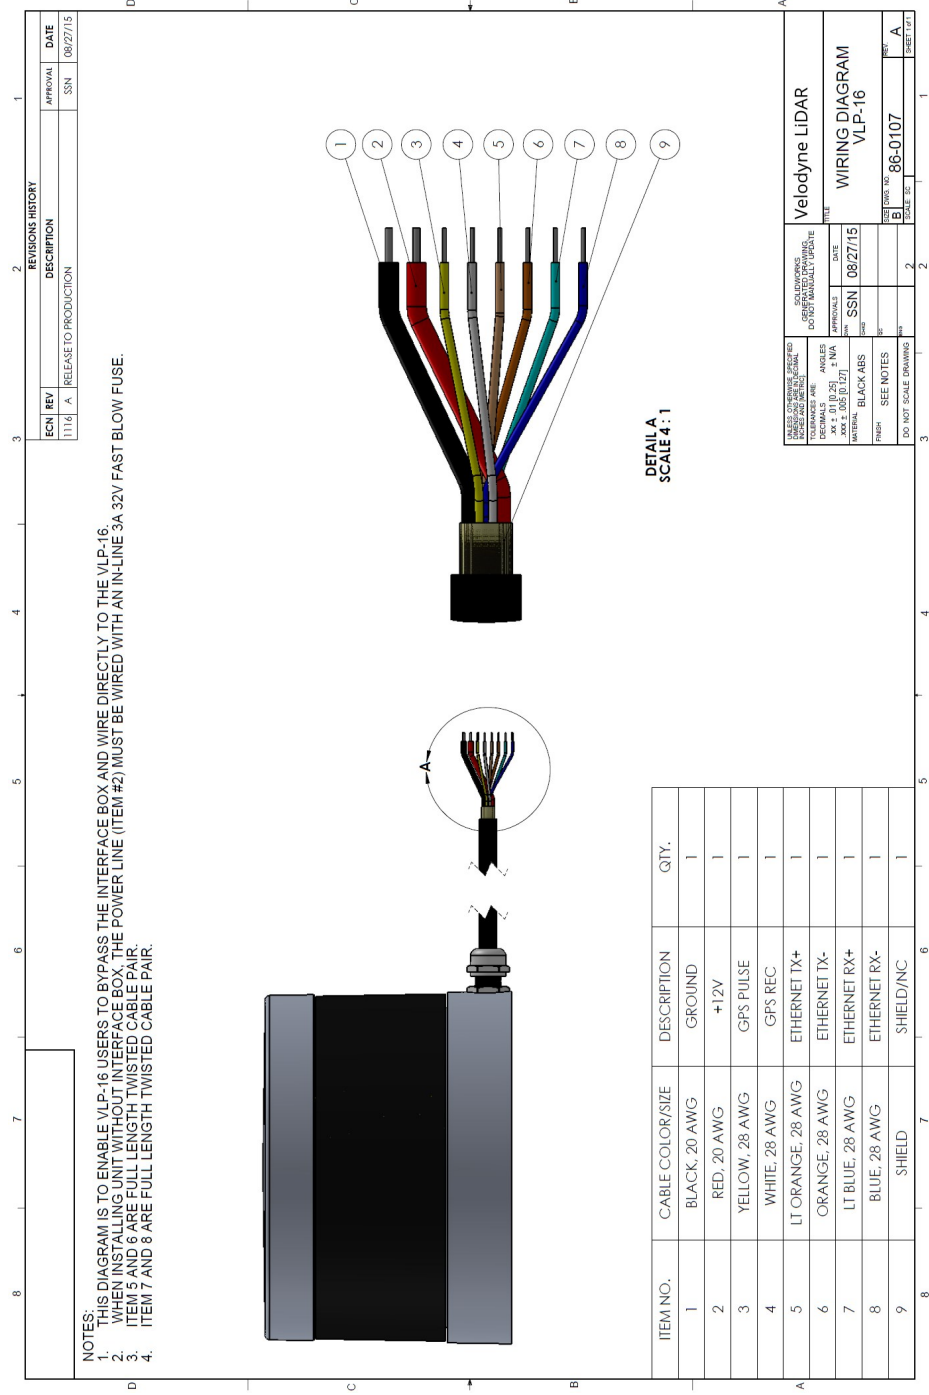

D.2 Interface Box Schematic

Figure D-2 Interface Box Schematic 69-8230A

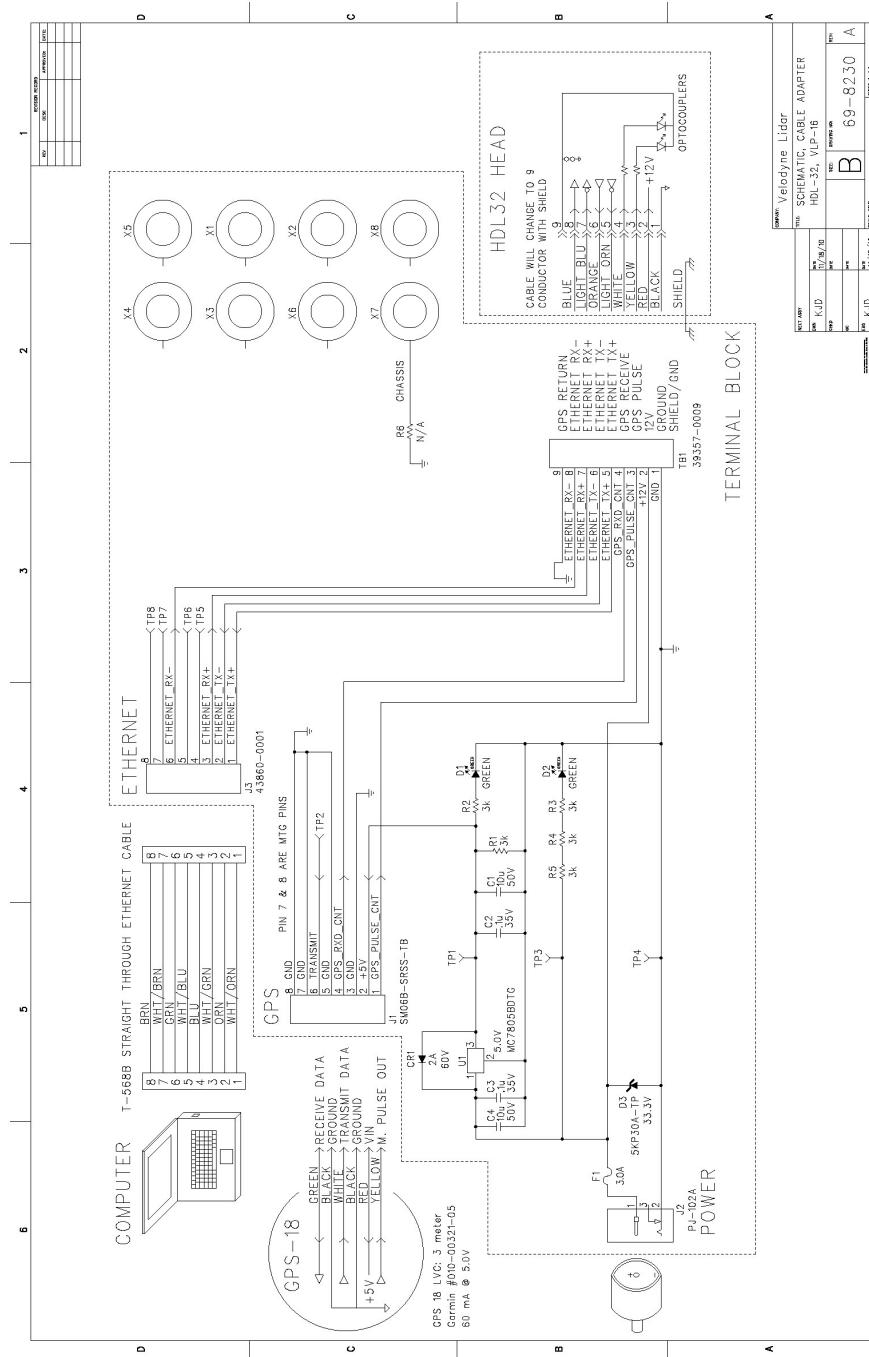

Appendix E • VeloView

This appendix gets you started with VeloView. It shows you how to use the application to acquire, visualize, save, and replay sensor data.

You can examine sensor data with other free tools, such as Wireshark (available from wireshark.org) or tcpdump. But to visualize the 3D data, use VeloView. It's free and relatively easy to use.

E.1 Features	111
E.2 Install VeloView	112
E.3 Visualize Streaming Sensor Data	112
E.4 Capture Streaming Sensor Data to PCAP File	114
E.5 Replay Captured Sensor Data from PCAP File	114

E.1 Features

VeloView provides real-time visualization of 3D LiDAR data from Velodyne LiDAR sensors. VeloView can also playback pre-recorded data stored in "pcap" (Packet Capture) files.

Note: VeloView does not support .pcapng files.

VeloView displays distance measurements from a Velodyne LiDAR sensor as point data. It supports custom-colored display of variables such as intensity-of-return (i.e. calibrated reflectivity), time, distance, azimuth, and laser ID. The data can be exported as XYZ data in CSV format.

Functionality and features include:

- Visualize live streaming sensor data over Ethernet
- Record live sensor data in pcap files
- Visualize sensor data from a recording (pcap file)
- Interprets point data such as distance timestamp, azimuth, laser ID, etc.
- Tabular point data inspector
- Export to CSV format
- Record and export GPS data
- Ruler tool
- Display multiple frames of data simultaneously (Trailing Frames)
- Display or hide subsets of lasers
- Crop views

Note: VeloView is not intended to generate point cloud files in LAS, XYZ, or PLY formats (see *Converting PCAP Files to Point Cloud Formats* on page 66). See the list of Velodyne system integrators at <http://velodyneLiDAR.com/integrators.php> for vendors who can sell you more advanced imaging software or a complete mapping system.

E.2 Install VeloView


Installers for VeloView for Windows (32-bit and 64-bit) and Macintosh computers can be found on the USB stick included with your sensor. Links to the latest installers can be found on the Velodyne web site. You can install VeloView from the USB stick or follow the steps below to install from the web site.

1. Point your browser to <http://velodynelidar.com/downloads.html#software>.
2. Click the VeloView **Download** button to go the official VeloView download page.
3. Scroll down to the **How to Obtain** section.
4. Choose the correct binary installer for your operating system; click the link.
5. Save the executable installer to disk.
6. Launch the installer and follow the on-screen instructions.

E.3 Visualize Streaming Sensor Data


1. Setup access to your sensor over Ethernet as described in *Unboxing & Verification* on page 22 or *Installation & Integration* on page 29 and power it up.
2. Start the VeloView application.
3. Click on **File > Open** and select **Sensor Stream**.

Figure E-1 VeloView Open Sensor Stream

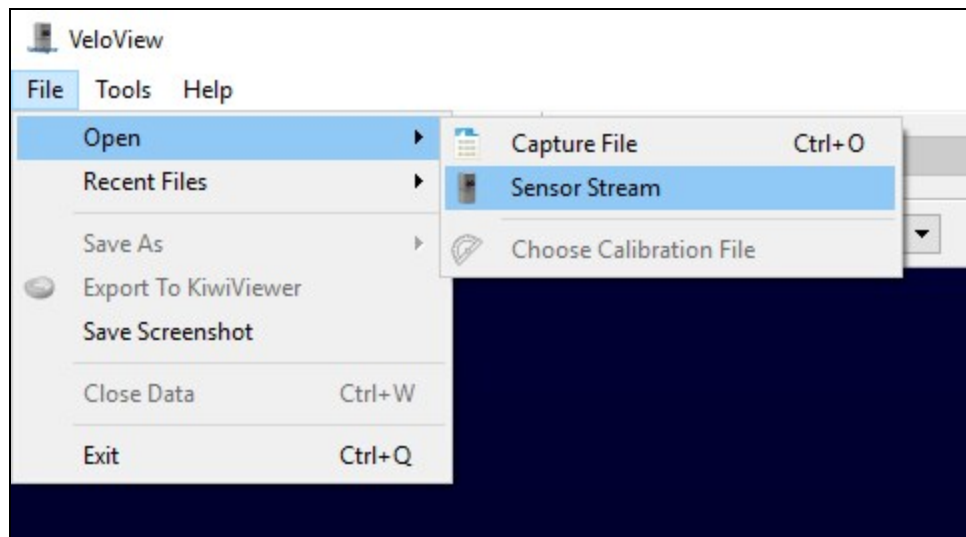


4. The Sensor Configuration dialog will appear. Select your sensor type then click **OK**.

Figure E-2 VeloView Select Sensor Calibration

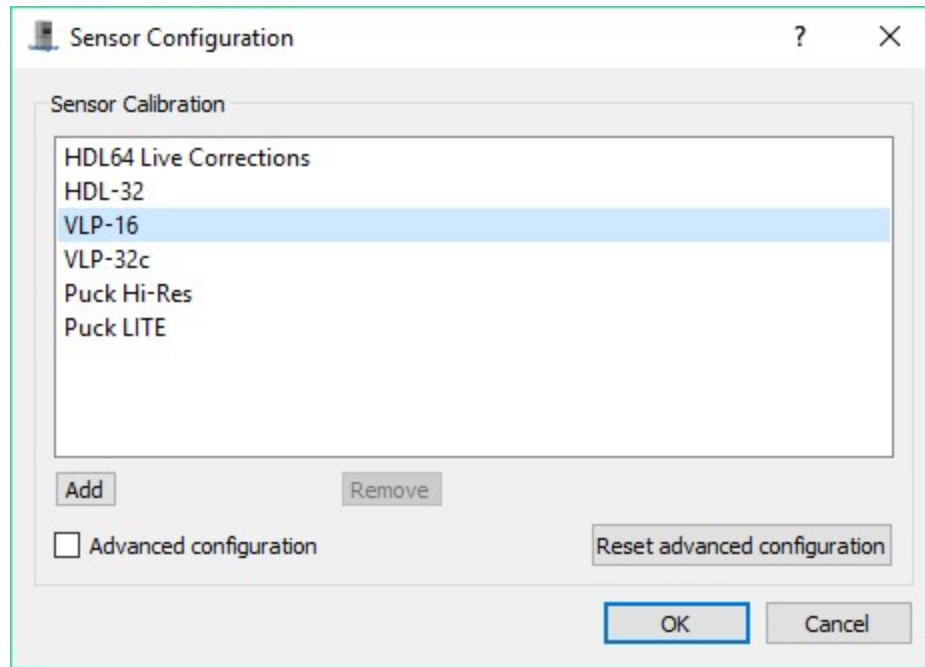

5. VeloView begins displaying the sensor data stream.

Figure E-3 VeloView Sensor Stream Display

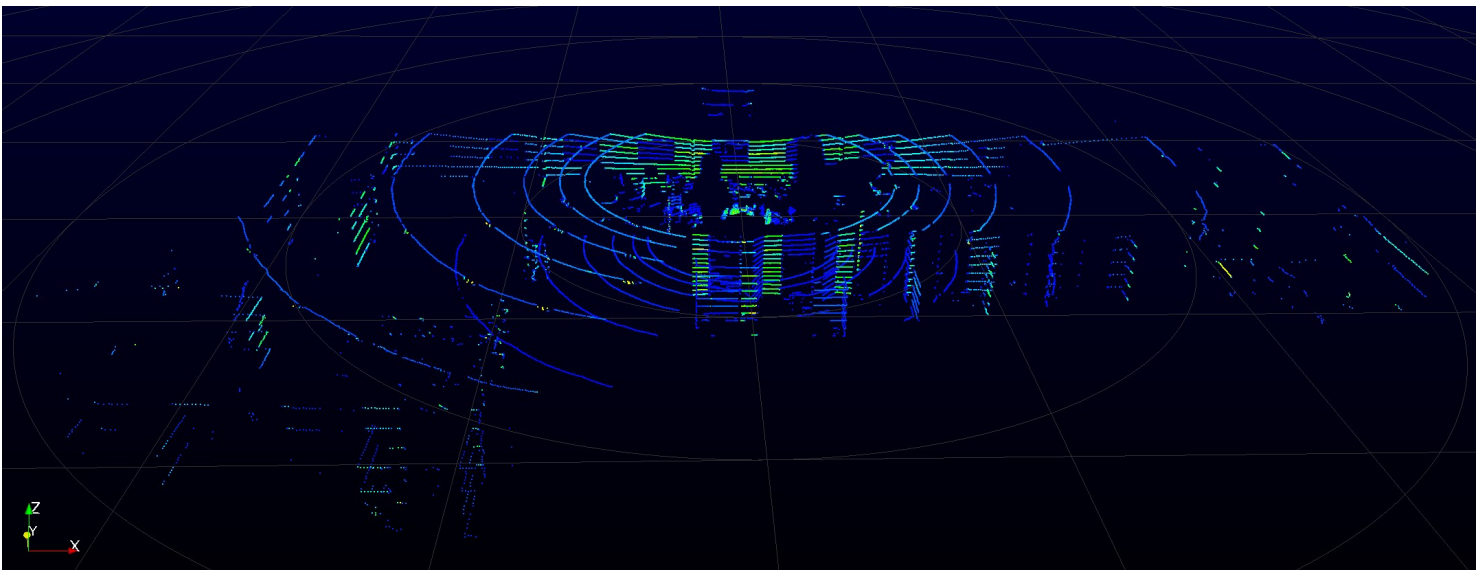


The stream can be paused by pressing the Play button. Press it again to resume streaming.

E.4 Capture Streaming Sensor Data to PCAP File

1. Click the **Record** button.

Figure E-4 VeloView Record Button

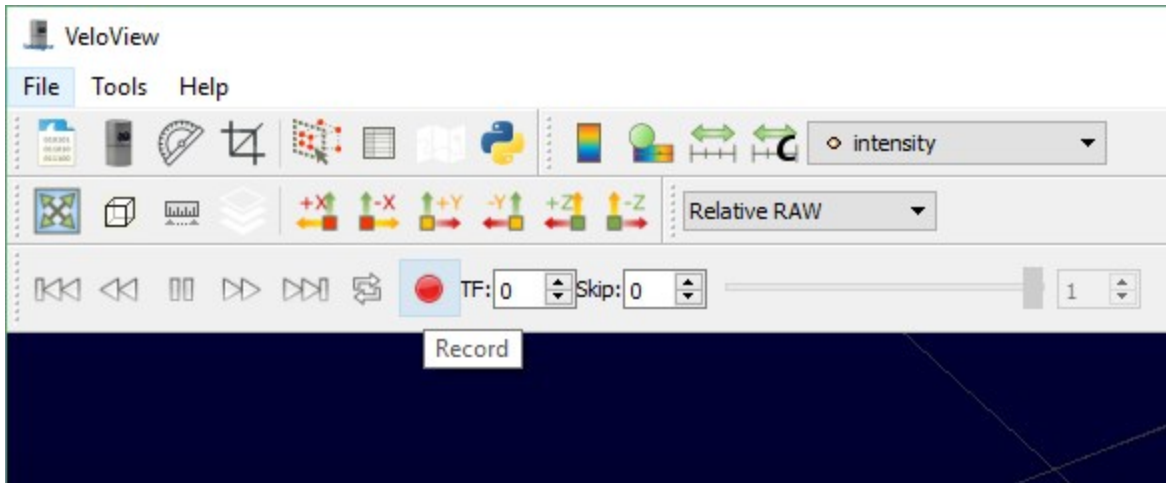

A **Choose Output File** dialog will pop up with the file name field pre-loaded with something like 2016-12-22-16-25-50_Velodyne-VLP-16-Data.pcap. You may alter it if you like.

2. Navigate to where you want the file to be saved and click the **Saved** button.

VeloView begins writing packets to your pcap file.

3. Recording will continue until the **Record** button is clicked again, which stops the recording and closes the pcap file.


Note: Velodyne LiDAR sensors generate a lot of data. (See *Sensor Specifications on page 91* for data rates.) The pcap file can become quite large if the recording duration is lengthy. Also, it is best to record to a fast, local HDD or SSD, not to a slow subsystem such as a USB storage device or network drive.

E.5 Replay Captured Sensor Data from PCAP File

To replay (or examine) a pcap file, open it with VeloView. You can press Play to let it run, or scrub through the data frames with the Scrub slider. Select a set of 3D rendered data points with your mouse and examine the numbers with a Spreadsheet sidebar.

1. Click on **File > Open** and select **Capture File**.


Figure E-5 VeloView Open Capture File

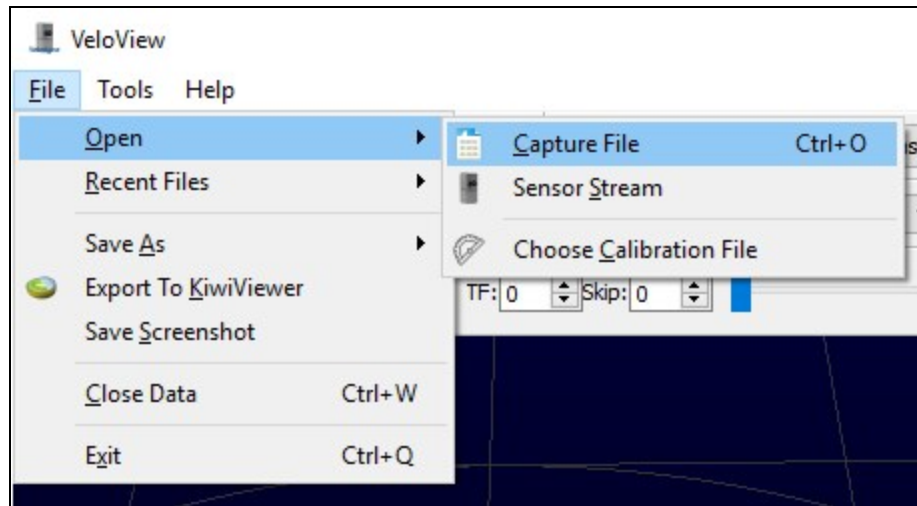

2. An **Open File** dialog will pop up. Navigate to a pcap file, select it, and click the **Open** button. The Sensor Configuration dialog will pop-up.
3. Select your sensor type and click **OK**.


VeloView should display frame 0.

Figure E-6 VeloView Play Button

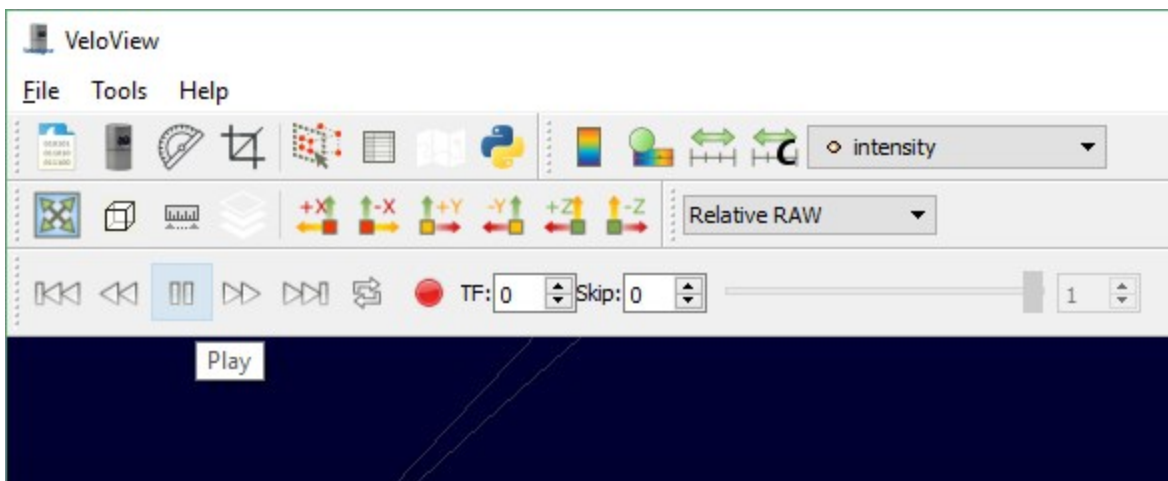

4. Press **Play** to replay/pause the data stream. Use the **Scrub** slider tool (it looks like an old-fashioned volume slider) to move back and forth through the data frames. Both controls are in the same toolbar as the Record button.
5. To take a closer look at some data, scrub to an interesting frame and click the **Spreadsheet** button.

Figure E-7 VeloView Spreadsheet Tool

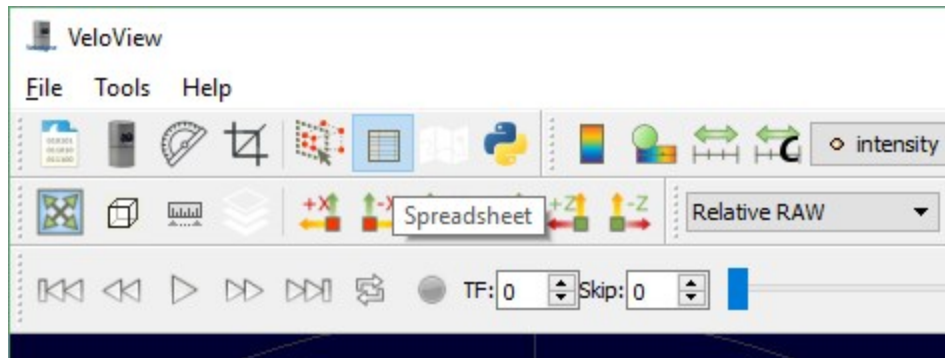

A sidebar of tabular data is displayed to the right of the rendered frame, containing all data points in the frame.


- Adjust the columns to get a better view of the numbers. If you've adjusted columns in Excel, some of this will be familiar. You can change column widths by dragging the column header divider left or right, and by double-clicking them. Drag column headers left or right to reorder them. Sort the table by clicking column headers. And you can make the table itself wider by dragging the table's sides left or right. Make Points_m_XYZ wider to expose the XYZ points themselves.

Figure E-8 VeloView Data Point Table

Showing	Data	Attribute:	Point Data	Precision:	3	F				
	Point ID	Points_m_XYZ			adjustedtime	azimuth	distance_m	intensity	laser_id	timestamp
0	0	5.937	2.541	-1.730	1031761944.000	6683	6.686	2	0	1031761944
1	1	7.042	3.010	-1.768	1031761949.000	6686	7.860	4	2	1031761949
2	2	9.221	3.933	-1.949	1031761953.000	6690	10.212	3	4	1031761953
3	3	12.596	5.365	-2.168	1031761958.000	6693	13.862	5	6	1031761958
4	4	21.709	9.237	2.897	1031761960.000	6695	23.770	2	7	1031761960
5	5	16.521	7.026	-2.204	1031761962.000	6696	18.088	4	8	1031761962
6	6	20.219	8.591	3.479	1031761965.000	6698	22.242	38	9	1031761965
7	7	44.643	18.922	-2.541	1031761972.000	6703	48.554	1	12	1031761972
8	8	6.008	2.522	-1.746	1031761999.000	6723	6.746	1	0	1031761999

- Click **Show only selected elements**.


Figure E-9 VeloView Show Only Selected Elements

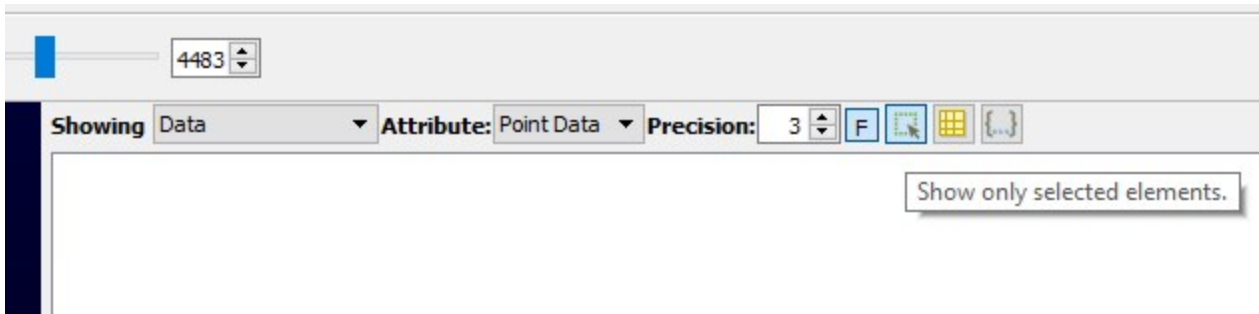

Since no points are selected yet, the table will be empty.


8. Click the **Select All Points** tool. This turns your mouse into a point selection tool.

Figure E-10 VeloView Select All Points

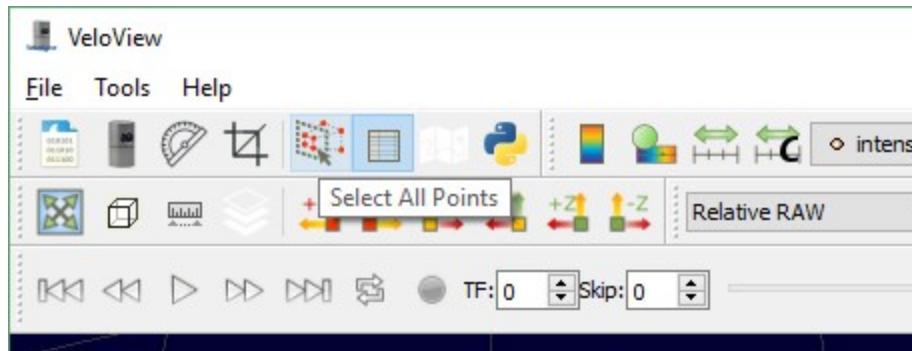

9. In the 3D rendered data pane use your mouse to draw a rectangle around a small number of points. They will immediately populate the data table.

Figure E-11 VeloView List Selected Points

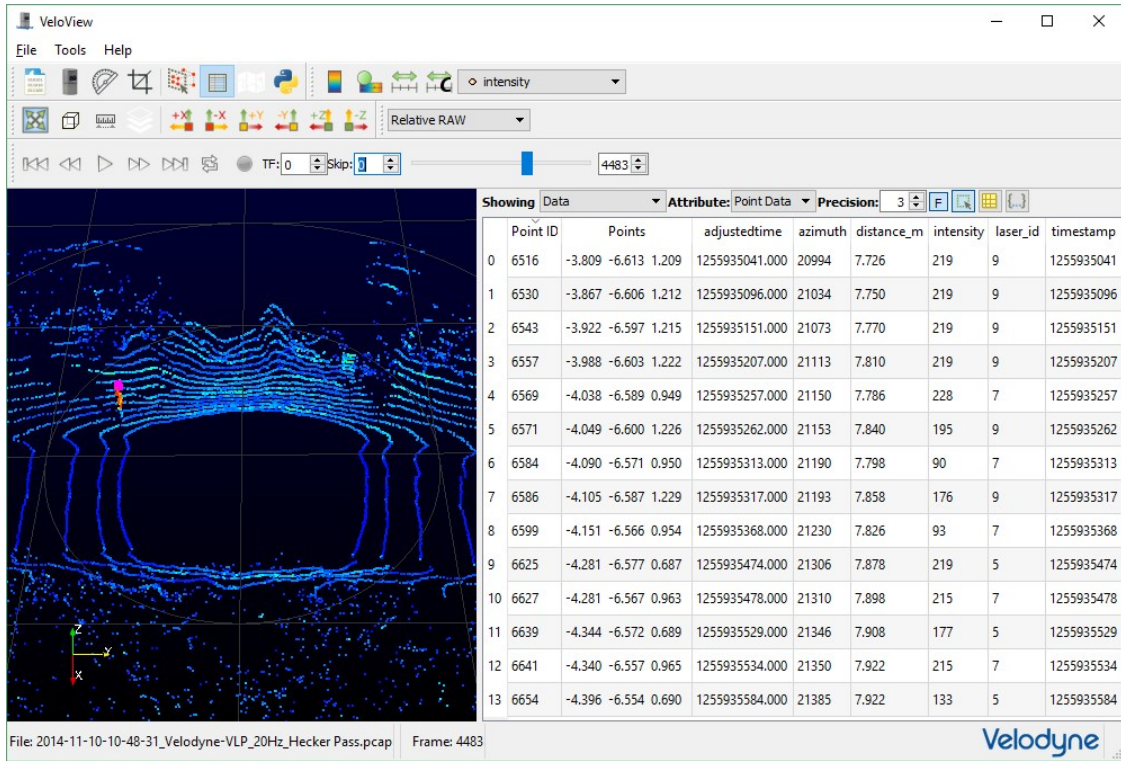

In Figure E-11 above, 14 data points were selected with a small selection rectangle. The points appear in pink. Their attributes are listed on the right. In this example, most of their intensity values exceed 100, indicating something retro-reflective is there (see *Key Features on page 32* for details). Azimuth is in hundredths of a degree. Distances are with respect to the sensor's origin.

At any point you can save a subset of data frames by doing **File > Save As > Select Frames**.

Appendix F • Laser Pulse

This section provides details on your sensor's laser diodes, the laser pulse and scan patterns, and certain beam characteristics of the laser pulses.


F.1 The Semiconductor Laser Diode	119
F.2 Laser Patterns	120
F.2.1 Laser Spot Pattern	120
F.2.2 Laser Scan Pattern	120
F.2.3 Beam Divergence	121

F.1 The Semiconductor Laser Diode

The source of each laser pulse in the sensor is a semiconductor laser diode. The laser diode is a series of stacked p-n junctions similar, at least in concept, to that shown in *Figure F-1 below*. When a current is applied across the junction, photons are produced and routed out one end to form a tightly focused laser beam.

Note: The physics of laser diodes can be found elsewhere on the Internet. Start by searching for *p-n junction*, *laser diode*, and *principles of semiconductor laser diodes*.

Figure F-1 Laser Diode Concept

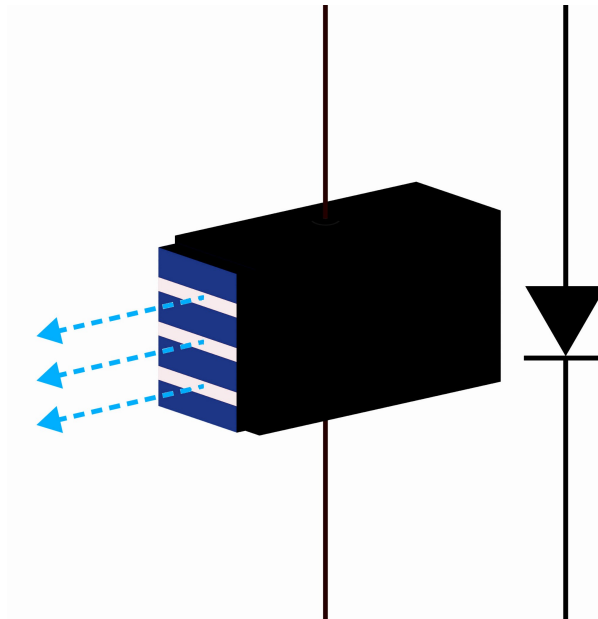

F.2 Laser Patterns


Laser firings produced by the sensor can be viewed with an infrared viewer or camera. Photos in this section were taken with an infrared camera.

F.2.1 Laser Spot Pattern

While the terms laser “spot” and “dot” are often used when describing a laser pulse hitting a target, in reality the sensor’s laser “spot” is a small rectangular area comprised of three smaller bars or bands of light as shown in *Figure F-2 below*. The long axis of the rectangle coincides with the direction of the laser scan.

The dimensions of this laser spot at the sensor’s ring lens is 9.5 mm tall by 12.7 mm wide - but it doesn’t remain that size as it speeds away. Read more about that in *Beam Divergence on the facing page*.

Figure F-2 Laser Spot Shape

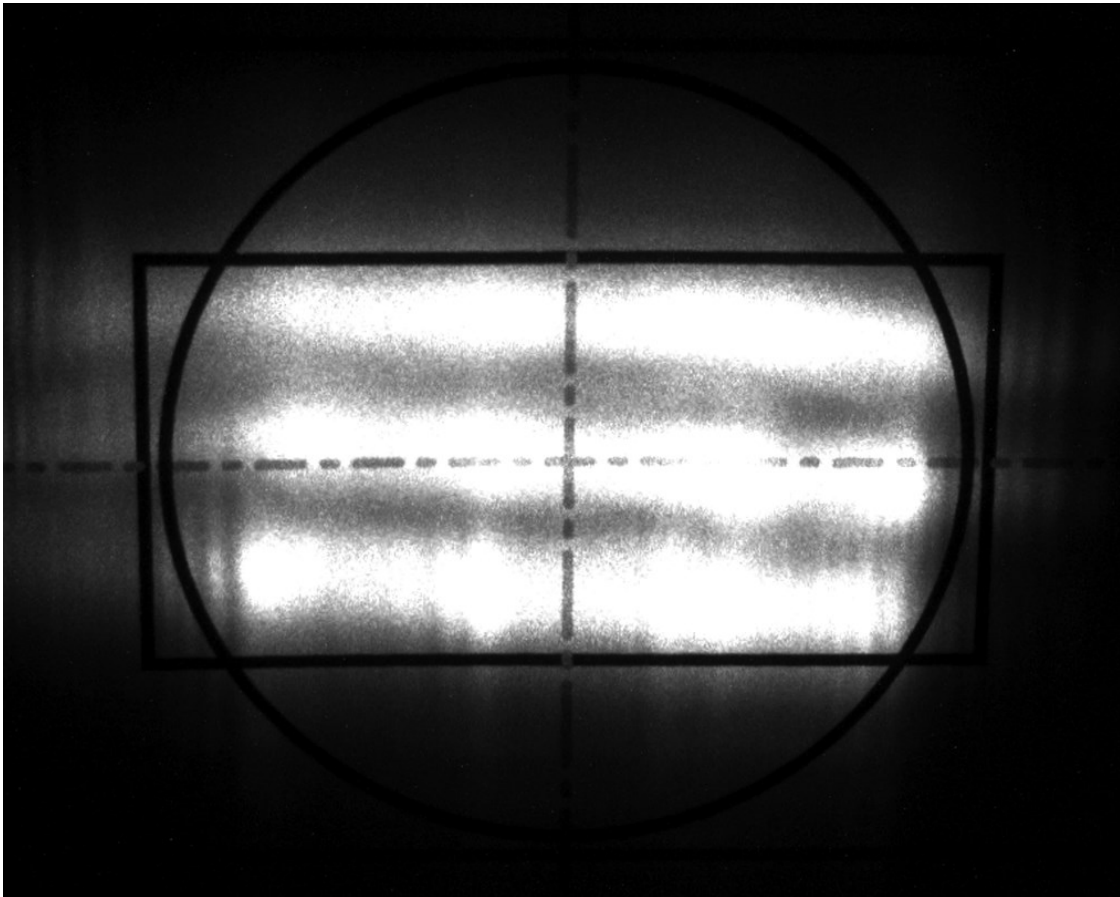

F.2.2 Laser Scan Pattern

Inside each VLP-16 sensor is a vertical array of lasers. *Figure F-3 on the facing page* shows three adjacent, concurrent, laser scans on the corner of a wall about 3 meters from the sensor. Each laser scan is composed of multiple laser spots or pulses. Each spot is composed of three short closely-spaced horizontal bars or bands of light.

The gap between scan lines can be calculated with the following equation:

Equation F-1 Gap Between Scan Lines

$$\text{Gap} = \text{distance to target} \times \tan(\text{vertical angle between scan lines})$$

Figure F-3 Laser Spots on a Wall

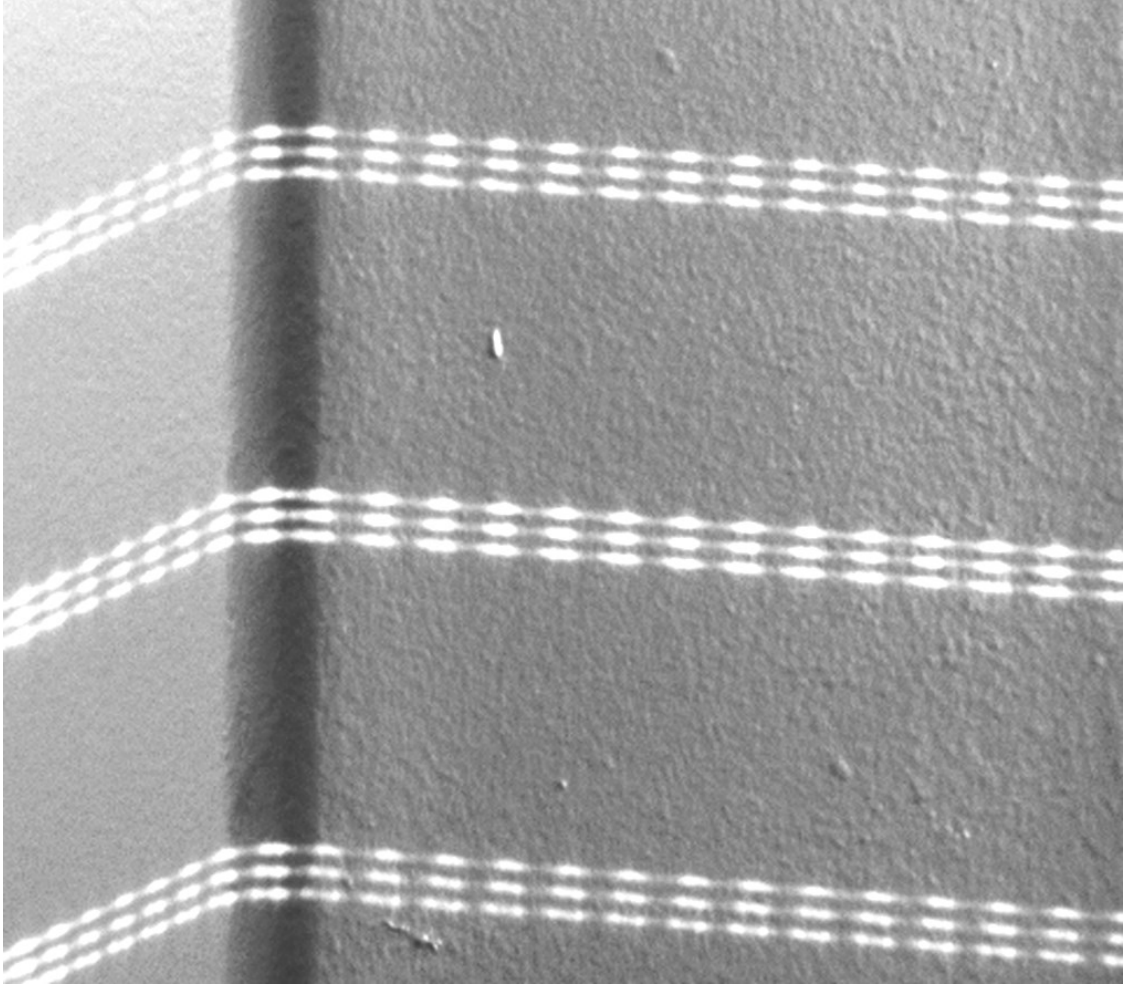


Photo of sensor laser pattern reflecting off of a flat target a short distance away.

F.2.3 Beam Divergence

As a laser pulse propagates outward from the sensor the cross-section of the laser beam describing the path of the pulse gradually, steadily grows larger. The angular measure of this increase in beam path diameter is called Beam Divergence.

VLP-16 beam divergence on the horizontal axis (i.e. along the direction of the laser scan) differs from beam divergence on the vertical axis (transverse to the scan) by roughly a factor of two.

Table F-1 VLP-16 Beam Divergence

Horizontal Beam Divergence	Vertical Beam Divergence
3.0 mrad (0.18 deg)	1.5 mrad (0.09 deg)

Table F-2 below lists laser spot horizontal and vertical dimensions at various distances from the sensor.

Table F-2 Dimensions of VLP-16 Laser Spots at Distance

Distance (mm)	Horizontal (mm) (Scan Direction)	Vertical (mm)
1000	15.4	11.0
2000	18.2	12.5
5000	26.4	17.0
10000	40.1	24.5
15000	53.8	32.0
25000	81.2	47.0
50000	149.7	84.6
100000	286.8	159.6

Appendix G • Time Synchronization

This section provides a detailed discussion of the **GPS Qualifier** and **PPS Qualifier** functions. These features were introduced with firmware release 3.0.34.0 (VLP-16).

G.1 Introduction	123
G.2 Background	123
G.3 PPS Qualifier	124
G.3.1 Require GPS Receiver Valid	124
G.3.2 Require PPS Lock	124
G.3.3 Delay	125
G.4 GPS Qualifier	125
G.5 Application	125
G.6 Logic Tables	125

G.1 Introduction

The following describes the new interface options found in sensor firmware version 3.0.34.0 (VLP-16).

These two new options control how the sensor utilizes the GPS information supplied to the sensor. The first control option determines how the sensor utilizes the PPS signal (PPS Qualifier). The second control option determines how the sensor utilizes the timestamp provided in a National Marine Electronics Association (NMEA) sentence (GPS Qualifier).

The new options, shown below in their default positions, can be found on the Configuration tab in the sensor's Web Interface.

Figure G-1 Web Interface PPS and GPS Qualifier Option Selections


The screenshot shows two sections of the web interface. The top section is titled "PPS Qualifier" and contains three controls: "Require GPS Receiver Valid" with radio buttons for "On" and "Off" (where "Off" is selected), "Require PPS Lock" with radio buttons for "On" and "Off" (where "Off" is selected), and "Delay" with a text input field containing "5", plus and minus buttons, and a "Set" button. The bottom section is titled "GPS Qualifier" and contains one control: "Require GPS Receiver Valid" with radio buttons for "On" and "Off" (where "Off" is selected).

G.2 Background

Your sensor maintains a counter representing the number of microseconds since the Top Of Hour (TOH). The TOH count is incremented based on an internal oscillator. When the sensor is presented with a valid PPS signal the TOH count is adjusted on the rising edge of each PPS to align the TOH with UTC Time. The TOH is sent as a four-byte time stamp in both the data and position/telemetry packets.

The TOH is comprised of two separate counters. One counter maintains the number of minutes and seconds since the top of the hour, and the other counter maintains the sub-second count (*Figure G-2 on the next page*).

 Figure G-2 Top of Hour Counters



The combined value represents the number of microseconds since the top of the hour. It ranges from 0 to 3,599,999,999 μs -- there are 3.6×10^9 μs in one hour. The sub-second counter range alone spans 0 to 999,999 μs .

The sensor continuously monitors the PPS input assessing the timing characteristics of any pulses presented. This process is indicated both on the Web Interface (see *Configuration Screen on page 69*) and in the position packet. When the sensor detects a valid, stable PPS signal, the Web Interface indicates "PPS: Locked" and the PPS status field in the position packet at offset 0xF4 is set to 0x02.

As noted, the sensor counts microseconds using an internal oscillator. This internal oscillator always drives the sub-second counter; however, the sensor may be configured to use a valid PPS signal to adjust the value of the sub-second counter every second, thereby reflecting the "top of second" moment indicated by the rising edge of the PPS.

The minutes and seconds counter may be adjusted to the time values provided in the NMEA sentence. If no NMEA sentence is provided, the minutes and seconds counter is incremented every second.

Using the PPS signal to adjust the sub-second counter allows the sensor to remain synchronized to a PPS source even if that source is drifting slightly. This might occur when a GPS receiver indicates an invalid fix and begins using its own internal time to drive the PPS reference.

New control options (PPS Qualifier and GPS Qualifier, described below) have been added to allow the user to finely adjust the manner in which the sensor reacts when a valid PPS is confirmed and locked onto.

G.3 PPS Qualifier

The three settings described below (and in *Logic Tables on the facing page*) control how the sensor adjusts the TOH counter based on GPS and PPS signal status.

Depending on the GPS receiver's valid/invalid status, the three settings determine if the sensor's Top-Of-The-Hour (TOH) counter should enter free-running mode or synchronize the sub-second counter with the rising edge of the PPS signal.

G.3.1 Require GPS Receiver Valid

This setting determines the manner in which the sensor utilizes the current status of the GPS receiver provided in the NMEA sentence.

- If the **Require GPS Receiver Valid** is set to **On**, the sensor requires the GPS receiver to indicate a valid satellite condition before using the rising edge of a PPS signal to adjust the internal sub-second counter.

Note: The sensor must also receive a valid NMEA message indicating the GPS receiver is providing a valid time stamp.

- If **Require GPS Receiver Valid** is set to **Off**, the sensor synchronizes its sub-second counter to the rising edge of the PPS signal regardless of GPS receiver satellite status.

G.3.2 Require PPS Lock

This setting determines the manner in which the sensor validates the PPS signal prior to adjusting the internal sub-second counter to the rising edge of that PPS signal.

- If **Require PPS Lock** is set to **On** the sensor utilizes the value in the Delay field to determine the validity of a PPS signal prior to synchronizing its internal sub-second counter to the rising edge of a PPS signal.
- If **Require PPS Lock** is set to **Off** the sensor ignores the value in the Delay field and the sensor uses a rolling window of 2 cycles before the PPS signal may be considered valid and then used as a time reference by the sensor. Turning this option off effectively sets the Delay value to 2.

G.3.3 Delay

This parameter allows the user to extend the time the sensor requires to validate the PPS. The units are in integer seconds. Acceptable values range from 0 to 65535. The default is 5 seconds.

The sensor constantly qualifies the PPS signal over a rolling N-second window defined by the Delay parameter. At the first instance the PPS signal is deemed unstable, the sensor enters free-running mode where the sub-second counter is driven by the internal oscillator. In free-running mode the sub-second counter is no longer adjusted with the rising edge of the PPS signal. Additionally, the minutes and seconds component of the TOH begins incrementing based on the rollover of the free-running sub-second counter.

G.4 GPS Qualifier

This setting determines if the minutes and seconds component of the TOH counter are adjusted to the timestamp provided by the GPS receiver or driven by the rollover of the sub-second counter.

If the **Require GPS Receiver Valid** is **On**, the minutes and seconds field in the NMEA sentence timestamp is used to adjust the minutes and seconds component of the TOH counter only when GPS receiver indicates a valid status.

If the **Require GPS Receiver Valid** is **Off**, then the sensor ignores the GPS receiver status and always adjusts the minutes and seconds component of the TOH counter with the timestamp provided in the NMEA message.

G.5 Application

Most GPS receivers have low-drift internal clocks and may be configured to use this clock to maintain the PPS signal in the event the GPS fix becomes invalid. Alternatively, the GPS might be configured to discontinue the PPS in the event the fix becomes invalid.

In the default settings (and previous versions of firmware), the sensor uses PPS to synchronize to the time contained in the GPRMC message regardless of the state of valid flag in the GPRMC message. In this configuration, all the elements in a larger system (LiDAR, IMU, RGB cameras, etc.) will be clocked off the same time source (the internal clock in the GPS receiver) in the event the GPS fix becomes invalid. This allows for proper reconciliation of the data during post- or real-time processing.

G.6 Logic Tables

Figure G-3 Sub-Second Counter Behavior

		Sub-Second Counter Behavior	
		Require PPS Lock	Require GPS Receiver Valid
Settings	Off	Off	2-second qualifying delay in effect; Always zeroed by rising edge of PPS
	Off	On	2-second qualifying delay in effect; Zeroed by rising edge of PPS only when satellites locked
	On	Off	User defined qualifying delay in effect; Always zeroed by rising edge of PPS
	On	On	User defined qualifying delay in effect; Zeroed by rising edge of PPS only when satellites locked

Figure G-4 Minutes and Seconds Counter Behavior

		Minutes and Seconds Counter Behavior	
		Require PPS Lock	Require GPS Receiver Valid
Setting	Off	Always updated with provided NMEA values	
	On	Only updated with provided NMEA values when satellites are locked	

Note: If no NMEA sentence is provided, the Minutes and Seconds counter is driven by the rollover of the sub-seconds counter.

Appendix H • Phase Lock

When using multiple sensors close to one another (e.g. mounted on top of a vehicle), occasional interference patterns may appear in the sensor data. Velodyne provides firing controls to minimize this interference by controlling where data is gathered. The sensors can then be configured to ignore the data containing the interference.

H.1 Phase Lock	127
H.1.1 Setting the Phase Lock	127
H.1.2 Application Scenarios	128
H.2 Field of View	130


H.1 Phase Lock

The Phase Lock feature requires that a PPS signal be present and locked. The sensor uses the rising edge of the PPS as the zero-degree reference moment for all its firing references. The sensor then adjusts its timing such that it initiates a firing sequence at the phase lock offset specified by the user.

For example, assume the user enters an angle of 35° (α) as the phase offset. The red arrow in *Figure H-1* below indicates the laser firing direction precisely as the sensor receives the rising edge of the PPS signal.

Note: For Phase Lock to work correctly, the sensor's RPM must be set to a multiple of 60 RPM between 300 RPM and 1200 RPM (inclusive).

Figure H-1 Direction of Laser Firing

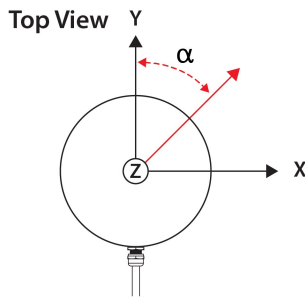

H.1.1 Setting the Phase Lock

To enable Phase Lock, enter the desired phase offset in the Phase Lock **Offset** field shown in *Figure H-2* on the next page. Enter the offset in degrees. For example, if the desired offset is 270° , enter **270** in the Offset field. Click the Phase Lock **On** radio button (as needed) and then the Set button to the right.

Note: To retain these settings over the next power cycle or reset, click the **Save Configuration** button.

The current phase lock status (On/Off) and phase lock offset can be viewed on the Web Interface (red box). The current phase lock offset is presented in degrees. The accuracy of the offset is $\pm 5^\circ$ (subject to change).

Figure H-2 Configuration Screen - Phase Lock

Velodyne® LiDAR

Sensor Model: S/N: MAC: Factory MAC:

VLP-16 USER INTERFACE [Configuration](#) [System](#) [Info](#) [Diagnostics](#)

Laser: On Off
 Return Type: ▾
 Motor RPM: + -
 FOV Start: + - End: + -

PPS Qualifier
 Require GPS Receiver Valid: On Off
 Require PPS Lock: On Off
 Delay: + -

GPS Qualifier
 Require GPS Receiver Valid: On Off

Phase Lock On Off Offset: + -

Host (Destination)
 IP Address: Data Port: Telemetry Port:

Network (Sensor)
 DHCP: On Off
 IP Address: Mask: Gateway:
 MAC Address:

GPS Position: PPS:
 Motor State: RPM: Lock: Phase:
 Laser State:


Velodyne® LiDAR

H.1.2 Application Scenarios

When setting the phase lock offset for two or more sensors, Velodyne recommends the sensors be configured to fire at each other. This is the optimal configuration for minimizing interference because the location of the interference is under user control.


Figure H-3 on the facing page shows two sensors mounted on a vehicle. The sensor mounted on the car's left side has its phase lock offset set to 90° , and the phase lock offset of the sensor mounted on the right side of the vehicle is set to 270° , as shown by the red arrows.

Figure H-3 Right and Left Sensor Phase Offset

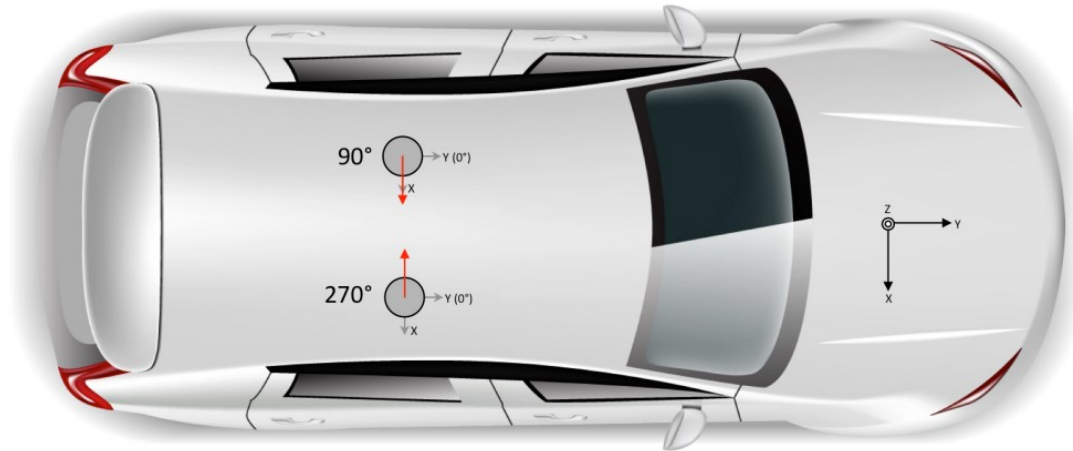

When sensors are placed on the roof in the fore and aft positions, the phase offsets are set to 180° and 0° as shown in *Figure H-4* below.


Figure H-4 Fore and Aft Sensor Phase Offset

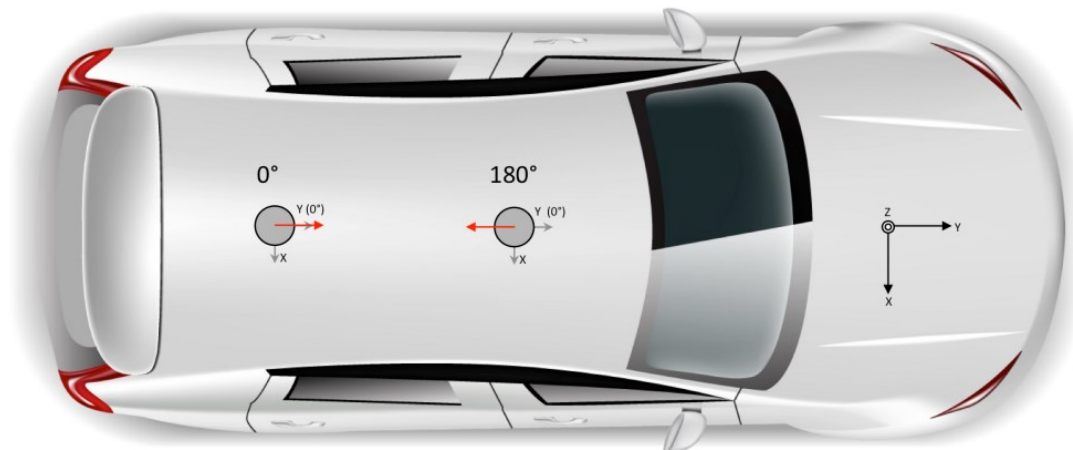

In both scenarios the two sensors create data shadows behind each other.

To avoid any spurious data due to blockage or reflections from the opposing sensor, the user should ignore any data in the shadowed azimuth ranges as shown in *Figure H-5* on the next page. To do that, you need to know the diameter of the sensors (see *Sensor Specifications* on page 91) and distance between the sensor centers.

Figure H-5 Sensor Data Shadows

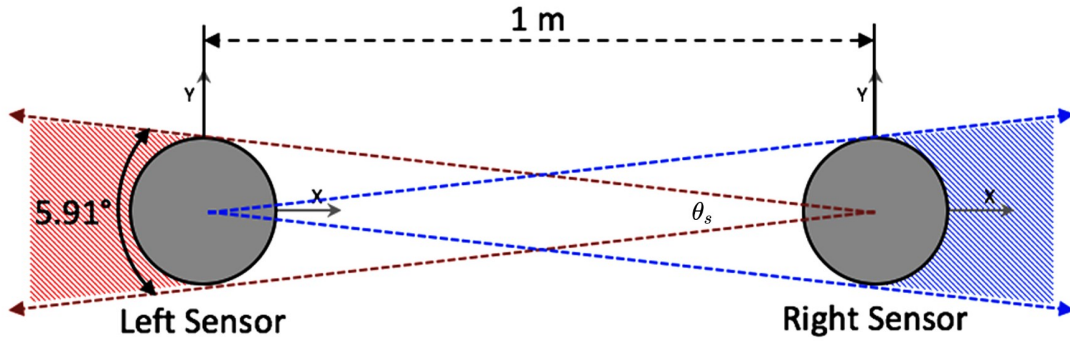

The angle subtended by the shadow of a sensor in range but at some distance from another sensor is given by the following formula:

Equation H-1 Arc of Shadow

$$\theta_s = 2 \times \tan^{-1} \left(\frac{0.5 \times D_{\text{Sensor}}}{d_{\text{Sensors}}} \right)$$

θ_s = Subtended Angle

D_{Sensor} = Diameter of the far sensor

d_{Sensors} = Distance between sensor centers

Data reported at the azimuths included within the subtended angle should be ignored.

H.2 Field of View

Alternatively, each sensor's Field of View control may be used to remove the subtended azimuths from the data stream.

Use Figure H-5 above and Equation H-1 above to determine for each sensor the azimuthal angles at which the shadows begin and end.

Then, using each sensor's Web Interface or curl commands (or equivalent programmatic commands), configure the sensor's horizontal FOV start and end angles. See *Configuration Screen on page 69* and *Set Field of View on page 83* for more.

Appendix I • Sensor Care

To accurately sense its environment, the VLP-16 sensor should be kept clean, especially its ring lens.

This section lists various approved cleaning methods, but it is important to use the correct method. Start with *Determine Method of Cleaning* on the next page.

I.1 Cleaning the Sensor	131
I.1.1 Required Materials	131
I.1.2 Determine Method of Cleaning	132
I.1.3 Method One	132
I.1.4 Method Two	132
I.1.5 Method Three	132
I.1.6 Method Four	133

I.1 Cleaning the Sensor

	 CAUTION
	READ THROUGH THIS ENTIRE SECTION BEFORE CLEANING YOUR VLP-16 SENSOR Improper handling can permanently damage it.

I.1.1 Required Materials

1. Clean microfiber cloths
2. Mild, liquid dish-washing soap
3. Spray bottle with warm, clean water
4. Spray bottle with warm, mildly soapy water
5. 70% isopropyl alcohol (Method 2 ONLY)
6. NACL Precision Optics Cleaner (Method 3 ONLY, Optional)
7. Simple Green (Method 4 ONLY)
8. Distilled water (Method 4 ONLY)
9. 99% isopropyl alcohol (Method 4 ONLY)

Note: Avoid using hard water when cleaning the VLP-16 sensor.

I.1.2 Determine Method of Cleaning

The first five characters of the sensor's serial number represent the year (AE = 2015) and day of manufacture (031 = January 31st) of the device. If the first five characters of the serial number are between AE001 and AE229, clean the sensor using Method 1 below.

Note: The easiest way to get a sensor's serial number is from the label on the device's underside. Sometimes, however, it's mounted somewhere inaccessible and that's not possible. The next easiest way is to view the sensor's *Web Interface on page 68*. Look for S/N at the top. Other ways include getting a snapshot from the command line (see *Get Snapshot on page 82*) or requesting the snapshot programmatically (see *curl Example using Python on page 84*). In both cases, you can find the serial number in the `snapshot['info']['serial']` field.

If the first five characters of the sensor's serial number are AE230 or greater, or if the sensor was serviced by Velodyne LiDAR after August 17th, 2015, use either Method 2 or 3 below.

I.1.3 Method One

This sensor's ring lens is made of acrylic. If the sensor is caked with mud and bugs, use a spray bottle with clean, warm water to loosen any debris from it. Do not wipe dirt directly off the sensor. Doing so may abrade the surface. Try to spray it off with warm water first. Next, use warm, mildly soapy water and a clean microfiber cloth to gently wipe the sensor, again taking care not to abrade the surface. When cleaning the ring lens, wipe gently along the curve of the sensor, not top-to-bottom. To finish, spray the sensor with clean water to rinse off any remaining soap, then dry with another clean microfiber cloth.

I.1.4 Method Two

This sensor's ring lens is made of polycarbonate and may be cleaned with isopropyl alcohol.

But first, if the sensor is caked with mud or bugs, use a spray bottle with clean, warm water to loosen any debris from it. Do not wipe dirt directly off the sensor. Doing so may abrade the surface. Try to spray it off with warm water first.

Then, if necessary, use isopropyl alcohol and a clean microfiber cloth to clean any remaining dirt from the sensor. Next, use warm, mildly-soapy water and gently wipe the sensor with a clean microfiber cloth. Wipe the ring lens gently along the curve of the sensor, not top-to-bottom. To finish, spray the sensor with clean water to rinse off any remaining soap, then dry with another clean microfiber cloth.

I.1.5 Method Three

North American Coating Laboratories has formulated a cleaning solution for Velodyne optical devices. It can be ordered directly from them.

- NACL part number: 98-0020
- NACL description: NACL Precision Optics Cleaner 6 oz

North American Coating Laboratories
9450 Pineneedle Drive, Mentor, OH 44060
Toll-Free: +1 (866) 216-6225
Tel: +1 (440) 357-7000
Fax: +1 (440) 357-7001
Email: info@nacl.com
URL: <http://www.nacl.com/>

1. Spray NACL Precision Optics Cleaner solution onto a clean, dry microfiber cloth.
2. Gently wipe the VLP-16's ring lens along the curve of the sensor, not top-to-bottom.

I.1.6 Method Four

Use a diluted mixture (50/50) of [Simple Green](#) and distilled water to remove particulates on the lens with a rinsing action. After heavy particulates are removed, additional Simple Green solution and a soft microfiber cloth can be used gently to clean the lens. This should then be followed up with a 99% IPA (Isopropyl Alcohol) wipe using a microfiber cloth to remove any residual Simple Green. Never use an ammonia-based cleaner.

Appendix J • Network Configuration

Your sensor generates lots of data which it transmits via Ethernet. This section covers various aspects of this interface and how to connect and configure it. It also touches on the situation where you have more than one sensor on the same network.

J.1 Ethernet and Network Setup	134
J.1.1 Defaults	134
J.1.2 Establishing Communication via Ethernet	134
J.2 Network Considerations	135
J.2.1 Throughput Requirements	135
J.2.2 Single Sensor Transmitting to a Broadcast Address	136
J.2.3 Multiple Sensors in the Same Network	136

J.1 Ethernet and Network Setup

The RJ45 Ethernet connector on the Interface Box connects to any standard 100 Mbps Ethernet NIC or switch with MDI or AUTO MDIX capability.

J.1.1 Defaults

Each sensor's IP address is set at the factory to 192.168.1.201.

By default, the sensor sends UDP data packets to broadcast address 255.255.255.255.

Note: Each sensor has a unique MAC Address and Serial Number set at the factory by Velodyne LiDAR that cannot be changed.

J.1.2 Establishing Communication via Ethernet

The instructions below are for Windows computers. For linux or Macintosh computers, perform equivalent steps (not specified here).


1. Connect the computer to the Interface Box with an Ethernet cable.
Velodyne recommends disabling WiFi on your computer to avoid possible network conflicts.
2. Provide power to the sensor.
3. Open your computer's Network/Ethernet settings page.
4. Select **Internet Protocol Version 4 (TCP/IPv4)**.
5. Select the **Use the following IP address:** function.
The sensor requires a static IP address.
6. Enter the following IP address: 192.168.1.XXX. See *Figure J-1 on the facing page*.
"XXX" can be any number from 2 to 254 except 201.

7. Enter the subnet mask: 255.255.255.0

When using a Windows OS based computer, you can press the TAB key and the subnet mask automatically populates with the 255.255.255.0 value.

8. Click **OK**.
9. We recommend disabling any firewall software the computer may have running.
10. Point your browser to 192.168.1.201 to access the sensor's Web Interface to confirm communication.

Figure J-1 Sensor Network Settings

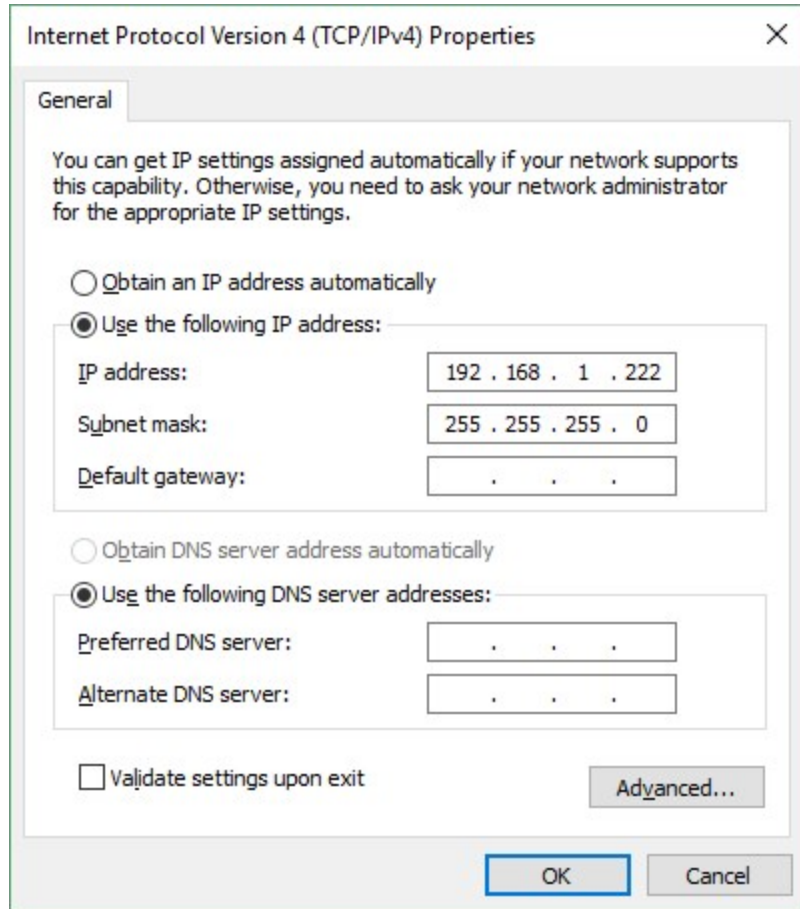

J.2 Network Considerations

Your application network topology may be simple, with a single sensor transmitting data on a basic network. Or, it could be complicated, with multiple sensors. This section presents certain topics to consider.

J.2.1 Throughput Requirements

When actively sensing its environment, your sensor produces a lot of data which it transmits via Ethernet. The volume of data depends partly on which Return Type (or mode) it's in. Details on return modes can be found in *Laser Return Modes on page 32*. See *Chapter 6 • on page 32* for return mode data rates.

You should assess network loading to see if your network's topology can accommodate the sensor data rate you select.

J.2.2 Single Sensor Transmitting to a Broadcast Address

Below is a single sensor on a network transmitting to a broadcast address works without any contention.

Figure J-2 Single Sensor Broadcasting on a Simple Network



This is the simplest network, with sensor data flow free from competition or interference. Here it is acceptable for the sensor to broadcast its data on the network.

J.2.3 Multiple Sensors in the Same Network

Note: Each sensor must have its own, unique IP address in a given network.

When using multiple Velodyne LiDAR sensors in a network it is imperative that you set each sensor's destination IP address to a specific, non-broadcast IP address. However, two or more sensors may share the same destination address.


The scenarios below illustrate the wrong way and then a better way to configure them. (An alternative would be to direct-connect sensors to separate NICs.)

J.2.3.1 Multiple Sensors Transmitting to a Broadcast Address

If multiple sensors on a network transmit data to a broadcast address, each sensor will see the broadcast data of the other sensors. The additional overhead steals cycles from the sensor (and possibly other networked devices) and may lead to a degradation in performance. (See *Phase Lock* on page 127 and *Phase Locking Multiple Sensors* on page 37 for additional information on using multiple sensors within sensing range of each other.)

An improper setup is shown in *Figure J-3* on the facing page. Note that each sensor's destination address is set to 255.255.255.255.

Figure J-3 Multiple Sensors - Improper Network Setup

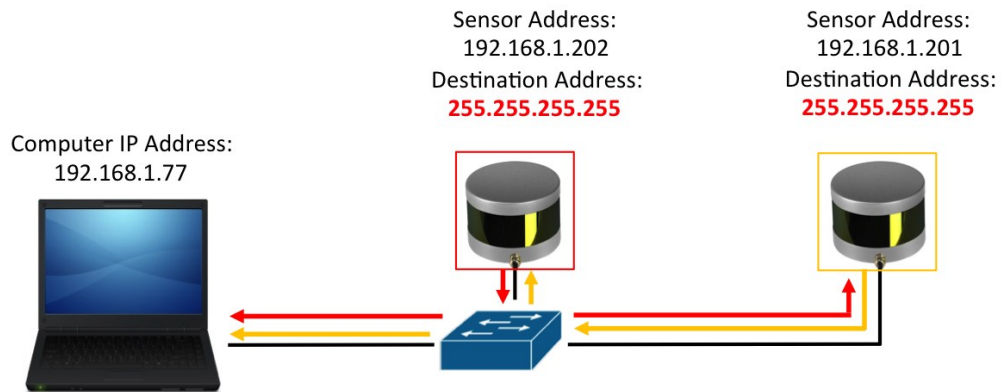


J.2.3.2 Multiple Sensors Transmitting to a Specific Address

The solution is to configure each sensor on such a network to transmit their data to a non-broadcast address.

If every sensor in the same network transmits packets to a specific, non-broadcast, destination address (doesn't have to be the same one), as illustrated in *Figure J-4* below, the other sensors will not suffer unnecessary network overhead.

Figure J-4 Multiple Sensors - Proper Network Setup

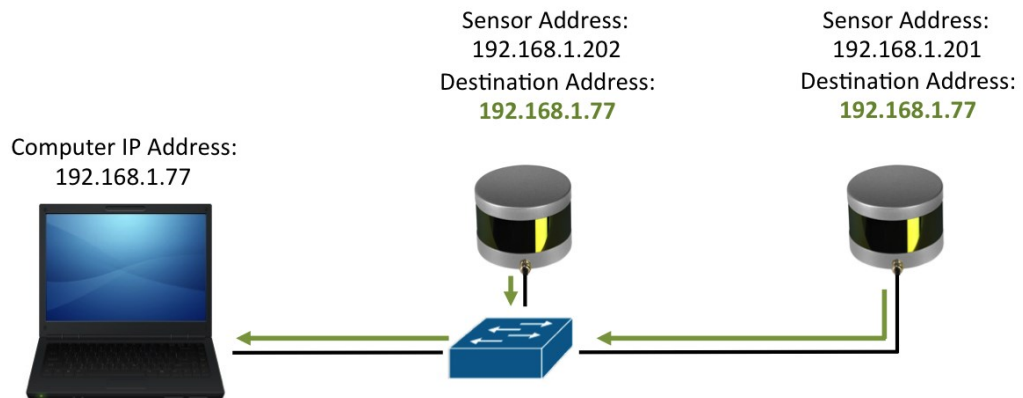

Corporate Headquarters:

Velodyne LiDAR, Inc.
5521 Hellyer Ave
San Jose, CA 95138
U.S.A.

www.VelodyneLiDAR.com

Phone +1 408-465-2800
Fax +1 408-779-9227

Email lidar@velodyne.com

The logo consists of the text "Velodyne LiDAR" in a white, sans-serif font, with a small "TM" trademark symbol to the right of "LiDAR". The text is centered within a solid blue rectangular background.

Velodyne LiDAR™

VLP-16 User Manual
63-9243 Rev. D